

WA65-6

WA70-6

WA80-6

WA90-6

WA100M-6

WHEEL LOADER

Model:

WA65-6
WA70-6
WA80-6
WA90-6
WA100M-6

Serial number:

H60051 AND UP
H60051 AND UP
H60051 AND UP
H00051 AND UP
H60051 AND UP

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local KOMATSU distributor for those items you may require.
- Materials and specifications are subject to change without notice.
- The Wheel Loaders WA65-6 and WA70-6 are equipped with the engine 4D95LWE-5.
The Wheel Loaders WA80-6 is equipped with the engine S4D95LWE-5.
The Wheel Loaders WA90-6 and WA100M-6 are equipped with the engine SAA4D95LE-5.
- For details of this engine see Engine Manual: WA65-WA80-6 SEN04408-00
WA90-6 and WA100M-6 SEN04357-00

Contents

| | |
|---------------------------------|------|
| Contents | TOC |
| List of revised pages | 00-1 |

Safety

| | |
|--|-------|
| Safety notice | 00-2 |
| Preparations for work | 00-3 |
| Tipping up the driver's cab | 00-4 |
| Tipping down the driver's cab | 00-6 |
| Precautions during work | 00-8 |
| Hydraulic system | 00-9 |
| Foreword | 00-10 |
| How to read the shop manual | 00-11 |
| Volumes | 00-11 |
| Distribution and updating | 00-11 |
| Filing method | 00-11 |
| Symbols | 00-12 |
| Hoisting instructions | 00-13 |
| Wire ropes | 00-13 |

General

| | |
|---|-------|
| Dimensions, weights and operating data | 01-2 |
| Specifications | 01-4 |
| WA65-6 – Specifications | 01-4 |
| WA70-6 – Specifications | 01-5 |
| WA80-6 – Specifications | 01-6 |
| WA90-6 – Specifications | 01-7 |
| WA100M-6 – Specifications | 01-8 |
| Weight tables | 01-9 |
| WA65-6 – Weight table | 01-9 |
| WA70-6 – Weight table | 01-9 |
| WA80-6 – Weight table | 01-10 |
| WA90-6 – Weight table | 01-10 |
| WA100M-6 – Weight table | 01-11 |
| Lubricants and operating mediums | 01-12 |
| WA65-6, WA70-6 – Lubricants and operating mediums | 01-12 |
| WA80-6 – Lubricants and operating mediums | 01-13 |
| WA90-6 – Lubricants and operating mediums | 01-14 |
| WA100M-6 – Lubricants and operating mediums | 01-15 |
| Basic procedures of maintenance | 01-16 |
| Oil | 01-16 |
| Fuel | 01-16 |
| Coolant | 01-17 |
| Grease | 01-17 |
| Storing oil and fuel | 01-17 |
| Filters | 01-18 |
| Biodegradable hydraulic oils and lubricants | 01-18 |
| Outline of electric system | 01-18 |
| Torque list – Screws and nuts | 01-19 |

Structure and Function

| | |
|--|-------|
| Powertrain | 10-5 |
| Closed circuit | 10-6 |
| Hydraulic drive system | 10-7 |
| WA65-6, WA70-6 – Hydraulic drive system – 20 km/h | 10-7 |
| WA80-6 – Hydraulic drive system – 20 km/h and 30 km/h | 10-8 |
| WA90-6, WA100M-6 – Hydraulic drive system – 20 km/h and 30 km/h | 10-9 |
| Variable displacement pump (HST pump) | 10-10 |
| Regulating valve (DA valve) | 10-13 |
| WA65-6, WA70-6, WA80-6 - Charge pump pressure relief valve - 20km/h. | 10-14 |
| WA80-6 ,WA90-6, 100M-6 - Charge pump pressure relief valve - 30km/h | 10-14 |
| Control cylinder | 10-15 |
| 4/3 Way valve with direction control solenoids | 10-16 |
| Pressure cut-off valve | 10-17 |
| Safety & charge valve | 10-18 |
| Towing | 10-19 |
| Variable displacement motor (HST motor with HA Control) | 10-20 |
| Hydraulic diagram HST motor A6VM80 (or 160) HA1R1 | 10-22 |
| Directional shuttle valve. | 10-23 |
| Auto inch valve diagram (option) | 10-23 |
| HST motor with DA Control | 10-24 |
| Hydraulic diagram HST Motor A6VM107(160)DA2 | 10-25 |
| Drive shaft | 10-26 |
| Front axle – Mounting | 10-27 |
| WA65-6, WA70-6 – Front axle mounting | 10-27 |
| WA80-6, WA90-6, WA100M-6 – Front axle mounting | 10-27 |
| Rear axle – Mounting | 10-28 |
| Front axle | 10-29 |
| WA65-6, WA70-6 – Front axle with outer disc brake as service brake and parking brake | 10-29 |
| WA80-6 – Front axle with inner disc brake as service brake and outer disc brake as parking brake | 10-30 |
| WA90-6, WA100M-6 – Front axle with inner disc brake as service brake and outer disc brake as parking brake | 10-31 |
| Rear axle with transfer box | 10-32 |
| WA65-6, WA70-6, WA80-6 – Rear axle with transfer box | 10-32 |
| WA90-6, WA100M-6 – Rear axle with transfer box | 10-33 |
| Transfer box TB172 | 10-34 |
| Limited slip differential | 10-36 |
| Limited slip differential – Locking value 25%. | 10-36 |
| Locking differential | 10-38 |
| Locking differential – Locking value 100%. | 10-38 |
| Wheel hub – Front axle and rear axle | 10-40 |
| Service and parking brake – Front axle | 10-42 |
| WA65-6, WA70-6 – Service and parking brake | 10-42 |
| WA80-6, WA90-6, WA100M-6 – Service brake | 10-44 |
| WA80-6, WA90-6, WA100M-6 – Parking brake | 10-45 |

| | |
|---|-------|
| Service and parking brake circuit | 10-46 |
| WA65-6, WA70-6 – Service and parking brake circuit | 10-46 |
| WA80-6 – Service and parking brake circuit | 10-47 |
| WA90-6, WA100M-6 – Service and parking brake circuit | 10-48 |
| Service brake assembly | 10-49 |
| WA65-6, WA70-6 – Service brake assembly | 10-49 |
| WA80-6 – Service brake assembly | 10-50 |
| WA90-6, WA100M-6 – Service brake assembly | 10-51 |
| Main-brake valve | 10-52 |
| WA65-6, WA70-6 – Main-brake valve | 10-52 |
| WA80, WA90-6, WA100M-6 – Main-brake valve | 10-53 |
| Steering articulation joint | 10-54 |
| Steering system | 10-56 |
| WA65-6, WA70-6 – Hydraulic circuit diagram of steering system | 10-56 |
| WA80-6 – Hydraulic circuit diagram of steering system | 10-58 |
| WA90-6, WA100M-6 – Hydraulic circuit diagram of steering system | 10-60 |
| Priority valve | 10-62 |
| Orbit-roll-valve | 10-63 |
| Steering relief valve | 10-64 |
| Work equipment hydraulic | 10-66 |
| WA65-6, WA70-6 – Travel, steering and work hydraulics | 10-66 |
| WA80-6 – Travel, steering and work hydraulics | 10-68 |
| WA90-6, WA100M-6 – Travel, steering and work hydraulics | 10-70 |
| PPC-Valve WA90-6, WA100M-6 | 10-72 |
| Operation of PPC-valve | 10-73 |
| Servo pressure regulating valve | 10-74 |
| Emergency Lowering System | 10-74 |
| Main control valve | 10-75 |
| Main control valve WA65-6, WA70-6, WA80-6 | 10-75 |
| Main control valve WA90-6, WA100M-6 | 10-76 |
| Lift cylinder | 10-77 |
| WA65-6, WA70-6 – Lift cylinder | 10-77 |
| WA80-6 – Lift cylinder | 10-78 |
| WA90-6 – Lift cylinder | 10-79 |
| WA100M-6 – Lift cylinder | 10-80 |
| Dump cylinder | 10-81 |
| WA65-6, WA70-6 – Dump cylinder | 10-81 |
| WA80-6 – Dump cylinder | 10-82 |
| WA90-6 – Dump cylinder | 10-83 |
| WA100M-6 – Dump cylinder | 10-84 |
| Steering cylinder | 10-85 |
| WA65-6, WA70-6 – Steering cylinder | 10-85 |
| WA80-6 – Steering cylinder | 10-86 |
| WA90-6, WA100M-6 – Steering cylinder | 10-87 |
| Loader Linkage with quick-coupler | 10-88 |
| WA65-6, WA70-6 – Loader Linkage with quick-coupler | 10-88 |
| WA80-6, WA90-6, WA100M-6 – Loader Linkage with quick-coupler | 10-89 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$