

Shop Manual

Soil Compactor WF22A-2

Trash Compactor WF22T-2

SERIAL NUMBERS 1011 and up

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2011 Komatsu
Printed in U.S.A.
Komatsu America Corp.

The affected pages are indicated by the use of the following marks. It is requested that necessary actions be taken to these pages according to the table below.

Mark	Indication	Action required
○	Pages to be newly added	Add
●	Page to be replaced	Replace
()	Page to be deleted	Discard

Pages having no marks are those previously revised or made additions.

LIST OF REVISED PAGES

Mark	Page	Times of revision	Mark	Page	Times of revision	Mark	Page	Times of revision	Mark	Page	Times of revision	Mark	Page	Times of revision
	01- 1		●	17A- 2	②		25A-20			12B- 8			13B-32	
	01- 2		●	17A- 3	②		25A-21			12B- 9			14B- 1	
	01- 3			18A- 1			25A-22			12B-10		●	14B- 2	②
	01- 4			18A- 2			25A-23			12B-11			14B- 3	
●	01- 5	②		18A- 3			25A-24			12B-12			14B- 4	
	01- 6			21A- 1			25A-25			12B-13			14B- 5	
	01- 7		●	21A- 2	②		25A-26			12B-14			15B- 1	
●	01- 8	②	●	21A- 3	②		25A-27			12B-15			15B- 2	
●	01- 9	②		21A- 4			25A-28			12B-16			15B- 3	
○	01- 9-1	②	●	21A- 5	②		25A-29			12B-17			15B- 4	
●	01-10	②		22A- 1			25A-30			12B-18			15B- 5	
	01-11			22A- 2			25A-31			13B- 1			16B- 1	
●	01-12	②	●	22A- 3	②		25A-32			13B- 2			16B- 2	
	01-13			22A- 4			41A- 1			13B- 3			16B- 3	
	11A- 1			22A- 5			41A- 2			13B- 4			16B- 4	
●	11A- 2	②		23A- 1			42A- 1			13B- 5			16B- 5	
	11A- 3		●	23A- 2	②	●	42A- 2	②		13B- 6			16B- 6	
	11A- 4		●	23A- 3	②		51A- 1			13B- 7			16B- 7	
●	12A- 1	②	○	23A- 4	②	●	51A- 2	②		13B- 8			16B- 8	
	12A- 2			24A- 1			51A- 4			13B- 9			17B- 1	
	12A- 3			24A- 2			51A- 5			13B-10		●	17B- 2	②
	12A- 4	①		24A- 3			52A- 1			13B-11		●	17B- 3	②
	12A- 5			24A- 4			52A- 2			13B-12		●	17B- 4	②
	12A- 6			25A- 1			52A- 3			13B-14		●	17B- 5	②
	13A- 1		●	25A- 2	②		52A- 4			13B-15		●	17B- 6	②
	13A- 2			25A- 4			52A- 5			13B-16		●	17B- 7	②
	13A- 3		●	25A- 5	②		53A- 1			13B-17			17B- 8	
	13A- 5			25A- 6			53A- 2			13B-18			17B- 9	
	13A- 6		●	25A- 7	②		54A- 1			13B-19			17B-10	
	13A- 7		●	25A- 8	②		54A- 2			13B-20			17B-11	
	13A- 8			25A- 9			54A- 3			13B-21		●	17B-12	②
	13A- 9			25A-10			54A- 4			13B-22		●	17B-13	②
	13A-10			25A-11			55A- 1			13B-23		●	17B-14	②
	14A- 1			25A-12			55A- 2			13B-24			17B-15	
	14A- 2			25A-13			55A- 3			13B-25			17B-16	
	15A- 1			25A-14			12B- 1			13B-26			17B-17	
	15A- 2			25A-15			12B- 2			13B-27			17B-18	
	16A- 1			25A-16			12B- 3			13B-28		●	17B-19	②
	16A- 2			25A-17			12B- 4			13B-29			18B- 1	
	16A- 3			25A-18			12B- 6			13B-30			18B- 2	
●	17A- 1	②		25A-19			12B- 7			13B-31			18B- 3	

CONTENTS

FOREWORD	00-5
0. GENERAL	
General Information	01-1
General Precautions for Disassembly and Assembly	02-1
General Precautions for Checking and Inspection	03-1
I. STRUCTURE AND FUNCTION	
(POWER TRANSMITTING SYSTEM)	
Engine	11A-1
Torque Converter	12A-1
TORQFLOW Transmission	13A-1
Propeller Shaft	14A-1
Center Support	15A-1
Axle Assembly	16A-1
Differential System	17A-1
Final Drive	18A-1
(DRIVING AND STEERING SYSTEM)	
Wheel Brake	21A-1
Wheel	22A-1
Wheel Cleaner	23A-1
Steering System	24A-1
Air System	25A-1
(ELECTRICAL SYSTEM)	
Electrical System	
(WORK ATTACHMENTS)	
Dozer Equipment	41A-1
Main Frame	42A-1
Axle Support	
(HYDRAULICAL CONTROL SYSTEM)	
Hydraulic Circuit and Piping	51A-1
Hydraulic Tank and Control Valve	52A-1
Blade Control System	53A-1
Hydraulic Cylinders	54A-1
Demand Valve	55A-1
II. DISASSEMBLY, INSPECTION, REPAIR AND ASSEMBLY	
1. POWER TRANSMITTING SYSTEM	
Engine	
Torque Converter	12B-1
TORQFLOW Transmission	13B-1
Propeller Shaft	14B-1
Center Support	15B-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$