

2018 HARLEY-DAVIDSON® SERVICE MANUAL SUPPLEMENT: FLHXSE MODEL

- Foreword
 - Foreword
 - General
 - How To Use Your Service Manual Supplement
 - Preparation For Service
 - Service Bulletins
 - Use Genuine Replacement Parts
 - Warnings and Cautions
 - Product References
 - Product Registered Marks
 - H-D U.S.A., LLC Trademark Information
 - Contents
- Maintenance
 - FASTENER TORQUE VALUES
 - Fastener Torque Values in this Chapter
 - MAINTENANCE SCHEDULE
 - General +[ENG, WORLD]
 - AIR FILTER ELEMENT
 - General
 - Remove
 - Install
 - LUBRICANTS
 - Change and Check Lubricants
 - REAR SUSPENSION ADJUSTMENTS
 - Manual Suspension Preload
- Chassis
 - FASTENER TORQUE VALUES
 - Fastener Torque Values in this Chapter
 - SPECIFICATIONS: CHASSIS
 - General
 - Vehicle Identification Number (VIN)
 - Vehicle Identification Number (VIN)
 - FRONT AXLE COVERS
 - Replacement
 - WHEELS
 - Front Wheel Service
 - Tire Pressure Monitoring System (TPMS)
 - HANDLEBAR
 - Removal and Installation
 - Hand grips
 - Right Hand Grip
 - Left Hand Grip
 - FOOTBOARDS AND CONTROLS
 - Rider Footboards
 - Shift Levers
 - Rear Brake Pedal Pad
 - Passenger Footrests
 - SEAT
 - Seat and Pillion
 - SADDLEBAGS
 - Remove

- [Install](#)
 - [Latch Handle Removal and Installation](#)
 - REAR FENDER
 - [Preparing Motorcycle](#)
 - [Removal](#)
 - [Installation](#)
 - [Final Assembly](#)
 - [Seat Pad Replacement](#)
 - REAR FASCIA
 - [Removal](#)
 - [Installation](#)
 - LICENSE PLATE LAMP/BRACKET ASSEMBLY
 - [Removal](#)
 - [Installation](#)
- Engine
 - SPECIFICATIONS: ENGINE
 - [General](#)
 - [Manufacturing Tolerances](#)
 - SERVICE WEAR LIMITS
 - [General](#)
 - Troubleshooting
 - [General](#)
- Fuel System
 - FASTENER TORQUE VALUES
 - [Fastener Torque Values in this Chapter](#)
 - AIR CLEANER BACKPLATE ASSEMBLY
 - [General](#)
 - [Remove](#)
 - [Install](#)
 - MUFFLER END CAP
 - [Replacement](#)
- Drive
 - SPECIFICATIONS: DRIVE
 - [General](#)
 - CLUTCH
 - [Clutch Repair](#)
- Transmission
 - SPECIFICATIONS: TRANSMISSION
 - [General](#)
- Electrical
 - FASTENER TORQUE VALUES
 - [Fastener Torque Values in this Chapter](#)
 - ELECTRICAL PROTECTION
 - [Fuses and Relays](#)
 - FUEL TANK CONSOLE LAMP
 - [Lighted Fuel Tank Emblem](#)
 - LED TURN SIGNAL LAMPS
 - [LED Assembly](#)
 - Rear Lighting
 - [Tail Lamp Lens: Canadian Models](#)
 - [Rear Fascia Lamp](#)
 - Fork Lock
 - [Fork Lock](#)
 - DASH PANEL AND SWITCHES
 - [Remove](#)

Installation

- RADIO SOFTWARE UPDATE
 - General
 - Updating Radio Software
- Radio
 - General
 - Hidden Antenna
 - XM Satellite Radio Module
 - XM Antenna and Bracket
 - XM Radio Activation
 - Wireless Headset Interface Module (WHIM)
- Audio Amplifier
 - Amplifier Removal
 - Installation
- Premium Sound System
 - Front Fairing Speakers
 - Fairing Lower Speakers
 - Saddlebag Speakers
 - Saddlebag Amplifier
 - Saddlebag Audio Harness Removal and Installation
- POWER LOCKS
 - Actuator: Saddlebag
 - KEY FOB
 - Relay Bracket
- Initial Diagnostics
 - Description and Operation
 - Symptoms
- No Vehicle Power, DTC U0140
 - Description and Operation
 - No Vehicle Power, DTC U0140
- Power Lock Diagnostics
 - Description and Operation
 - DTC B2188
 - DTC B2193
 - DTC B2231
 - Power Locks Inoperative
 - DTC B2233
 - Power Locks Dash Switch Inoperative
- REAR TURN SIGNAL DIAGNOSTICS
 - Description and Operation
 - DTC B2151
 - DTC B2153, B2154
 - DTC B2156
 - DTC B2158, B2159
- STOP LAMP DIAGNOSTICS
 - Description and Operation
 - Stop Lamp Inoperative
 - Stop Lamp Always On, DTC B2223
 - DTC B2161
 - DTC B2163, B2164
- RUNNING LAMP DIAGNOSTICS
 - Description and Operation
 - Running Lamps Inoperative
 - DTC B2168, B2169
 - License Plate Lamp Inoperative

BACKLIT HAND CONTROLS INOPERATIVE

- Description and Operation
- Backlit Hand Control Buttons Inoperative
- TPMS DIAGNOSTICS
 - Description and Operation
 - DTC C0077
 - DTCs C2000, C2001, C2003, C2004
 - DTCs C2006, C2007
- AUDIO VOLTAGE DIAGNOSTICS
 - Description and Operation
 - DTC B1401
 - DTC B1402
- RADIO DIAGNOSTICS
 - Description and Operation
 - DTC B1337
 - DTC B1339
 - DTC B1340
 - DTC B1345
 - DTC B1347
 - DTC B1348
 - DTC B1341
 - DTC B1343
 - DTC B1344
 - DTC B1349
 - DTC B1351
 - DTC B1352
- AUDIO DIAGNOSTICS AMPLIFIER 1
 - Description and Operation
 - DTC B1403, B1404
 - DTC B1410
 - DTC B1411
 - DTC B1412
 - DTC B1413
 - DTC B1420
 - DTC B1421
 - DTC B1422
 - DTC B1423
 - DTC B1430
 - DTC B1431
 - DTC B1432
 - DTC B1433
 - DTC B1440
 - DTC B1441
 - DTC B1442
 - DTC B1443
 - All Amplifier 1 Speakers Inoperative
 - Left Fairing Woofer Speaker Low or No Audio
 - Left Fairing Tweeter/Mid Speaker Low or No Audio
 - Both Left Speakers Low or No Audio
 - Right Fairing Woofer Speaker Low or No Audio
 - Right Fairing Tweeter/Mid Speaker Low or No Audio
 - Both Right Speakers Low or No Audio
- AUDIO DIAGNOSTICS AMPLIFIER 2
 - Description and Operation
 - DTC B1403, B1404

- DTC B1410
 - DTC B1411
 - DTC B1412
 - DTC B1413
 - DTC B1420
 - DTC B1421
 - DTC B1422
 - DTC B1423
 - DTC B1430
 - DTC B1431
 - DTC B1432
 - DTC B1433
 - DTC B1440
 - DTC B1441
 - DTC B1442
 - DTC B1443
 - All Amplifier 2 Speakers Inoperative
 - Left Saddlebag Woofer Speaker Low or No Audio
 - Left Saddlebag Tweeter/Mid Speaker Low or No Audio
 - Both Left Speakers Low or No Audio
- AUDIO DIAGNOSTICS AMPLIFIER 3
 - Description and Operation
 - DTC B1403, B1404
 - DTC B1410
 - DTC B1411
 - DTC B1412
 - DTC B1413
 - DTC B1420
 - DTC B1421
 - DTC B1422
 - DTC B1423
 - DTC B1430
 - DTC B1431
 - DTC B1432
 - DTC B1433
 - DTC B1440
 - DTC B1441
 - DTC B1442
 - DTC B1443
 - All Amplifier 3 Speakers Inoperative
 - Right Saddlebag Woofer Speaker Low or No Audio
 - Right Saddlebag Tweeter/Mid Speaker Low or No Audio
 - Both Right Speakers Low or No Audio
- WIRELESS HEADSET DIAGNOSTICS
 - Description and Operation
 - DTC U0185, U1405
 - DTC B1367, U1302
 - Loss of Wireless Headsets
 - Software Update Fails
 - Front Microphone Inoperative
 - Rear Microphone Inoperative
 - Front Headset Right Speaker Inoperative
 - Front Headset Left Speaker Inoperative
 - Rear Headset Right Speaker Inoperative
 - Rear Headset Left Speaker Inoperative

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$