

Shop Manual



ENGINE

82E-6 - 98E-6

SERIES

ENGINE

82E-6 – 98E-6 Series

00 Index and foreword

Index

Composition of shop manual.....	2-2
Table of contents	2-3

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04211-04
00 Index and foreword	SEN04212-04
Index	SEN04213-04 ●
Foreword and general information	SEN04214-03
01 Specification	SEN04215-00
Specification and technical data	SEN04216-00
30 Testing and adjusting	SEN04217-04
Testing and adjusting, Part 1 (Periodic maintenance)	SEN04218-00
Testing and adjusting, Part 2 (Engine)	SEN04219-00
Testing and adjusting, Part 3 (Fuel system)	SEN04220-04 ●
Testing and adjusting, Part 4 (Cooling system)	SEN04221-00
Testing and adjusting, Part 5 (Lubrication system)	SEN04222-00
Testing and adjusting, Part 6 (Turbocharger)	SEN04223-00
Testing and adjusting, Part 7 (Starter motor)	SEN04224-00
Testing and adjusting, Part 8 (Alternator)	SEN04225-00
40 Troubleshooting	SEN04226-00
Troubleshooting of mechanical system	SEN04227-00

Table of contents

00 Index and foreword	
Index	SEN04213-04
Composition of shop manual	2-2
Table of contents.....	2-3
Foreword and general information	SEN04214-03
Introduction	3-2
Applicable machine model and serial number	3-3
Safety Statements.....	3-4
Safety Precautions.....	3-5
01 Specification	
Specification and technical data	SEN04216-00
Component identification	4-3
Function of major engine components.....	4-5
Main electronic control components and features	4-6
Function of cooling system components.....	4-8
Diesel fuel.....	4-9
Engine oil	4-12
Engine coolant.....	4-15
Specifications.....	4-18
Principal engine specifications.....	4-20
Engine service standards	4-40
Tightening torques for standard bolts and nuts.....	4-41
Abbreviations and symbols.....	4-43
Unit conversions	4-44
30 Testing and adjusting	
Testing and adjusting, Part 1	SEN04218-00
Periodic maintenance	
Before you begin servicing	5-3
Introduction.....	5-16
Periodic maintenance schedule.....	5-17
Periodic maintenance procedures	5-20
Testing and adjusting, Part 2	SEN04219-00
Engine	
Before you begin servicing	6-3
Introduction.....	6-6
Cylinder head specifications	6-6
Camshaft and timing gear train specifications	6-11
Crankshaft and piston specifications	6-14
Cylinder block specifications.....	6-23
Special torque chart	6-24
Special service tools	6-27
Measuring instruments	6-31
2-valve cylinder head.....	6-33
4-valve cylinder head.....	6-48
Measuring and adjusting valve clearance.....	6-65
Crankshaft and camshaft components	6-70
EGR system.....	6-98

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$