

# Shop Manual

# 518

## WHEEL LOADER

**SERIAL NUMBERS 518 5001 and up**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2013 Komatsu  
Printed in U.S.A.  
Komatsu America Corp.

November 1992



# **SERVICE MANUAL DRESSER®**

# **518**

# **WHEEL LOADER**

**MACHINE MODEL**

**SERIAL NUMBERS**

**518**

**5001 and up**

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, periodic revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.



# CONTENTS

No. of page

## 10 ENGINE

11 STRUCTURE AND FUNCTION .....	11-1
12 TESTING AND ADJUSTING .....	12-1
13 DISASSEMBLY AND ASSEMBLY .....	13-1

## 20 POWER TRAIN

21 STRUCTURE AND FUNCTION .....	21-1
22 TESTING AND ADJUSTING .....	22-1
23 DISASSEMBLY AND ASSEMBLY .....	23-1
24 MAINTENANCE STANDARD .....	24-1

## 40 STEERING SYSTEM

41 STRUCTURE AND FUNCTION .....	41-1
42 TESTING AND ADJUSTING .....	42-1
43 DISASSEMBLY AND ASSEMBLY .....	43-1
44 MAINTENANCE STANDARD .....	44-1

## 50 BRAKE SYSTEM

51 STRUCTURE AND FUNCTION .....	51-1
52 TESTING AND ADJUSTING .....	52-1
53 DISASSEMBLY AND ASSEMBLY .....	53-1
54 MAINTENANCE STANDARD .....	54-1

## 60 WORK EQUIPMENT SYSTEM

61 STRUCTURE AND FUNCTION .....	61-1
62 TESTING AND ADJUSTING .....	62-1
63 DISASSEMBLY AND ASSEMBLY .....	63-1
64 MAINTENANCE STANDARD .....	64-1

## 80 ELECTRIC AND ELECTRONIC SYSTEM

81 STRUCTURE AND FUNCTION .....	81-1
83 DISASSEMBLY AND ASSEMBLY .....	83-1

## 90 MISCELLANEOUS

91 CAB AND AIR CONDITIONER STRUCTURE AND FUNCTION .....	91-1
97 GEAR PUMP .....	97-1
99 METRIC CONVERSIONS .....	99-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$