

# Shop Manual

# 960E-1

**DUMP TRUCK**

SERIAL NUMBERS **A30025 - A30026**

**KOMATSU**<sup>®</sup>



---

# DUMP TRUCK

## 960E

Machine model	Serial number
960E-1	A30025 - A30026

---

# 00 Index and foreword

## Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

□: New module (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

<u>Section Title</u>	<u>Form Number</u>
Shop Manual, contents binder, binder label and tabs	CEBM023802 ●
00 Index and foreword	
Index	CEN00011-02 ●
Foreword, safety and general information	CEN00002-04 ●
Operating instructions	CEN00003-02 ●
01 Specification	
Specification and technical data	CEN01001-04 ●
10 Structure, function and maintenance standard	
Steering circuit	CEN10001-04 ●
Hoist circuit	CEN10002-01
Brake circuits	CEN10003-02
Suspensions	CEN10004-01
Electrical system, 24 volt	CEN10028-01 ●
Interface module (IM)	CEN10006-01 ●
Electrical system, AC drive	CEN10007-00
Cab air conditioning	CEN10008-01
Reserve engine oil system	CEN10022-00
20 Standard value table	
Standard service value table	CEN20001-00
30 Testing and adjusting	
General information	CEN30001-02 ●
Steering, brake cooling and hoist hydraulic system	CEN30002-01
Brake system	CEN30003-02 ●
Accumulators and suspensions	CEN30004-02
KOMTRAX Plus and payload meter	CEN30005-03 ●
Interface module (IM)	CEN30006-03 ●
Cab air conditioning	CEN30032-00 ●

---

40 Troubleshooting	
Fuse and circuit breaker locations	CEN40001-01
AC drive system fault codes	CEN40002-00
Troubleshooting by failure code, Part 1	CEN40003-02 ●
Troubleshooting by failure code, Part 2	CEN40004-02 ●
Troubleshooting by failure code, Part 3	CEN40005-03 ●
Troubleshooting by failure code, Part 4	CEN40006-03 ●
Troubleshooting by failure code, Part 5	CEN40007-02 ●
Troubleshooting by failure code, Part 6	CEN40016-00
Cab air conditioning	CEN40008-01
Reserve engine oil system	CEN40010-00
50 Disassembly and assembly	
General information	CEN50001-05 ●
Wheels, spindle and rear axle	CEN50002-04 ●
Brake system	CEN50003-05 ●
Steering system	CEN50004-05 ●
Suspensions	CEN50005-06 ●
Hoist circuit	CEN50006-04 ●
Operator cab	CEN50007-03 ●
Body and structures	CEN50008-03 ●
Cab air conditioning	CEN50009-02
Power module	CEN50019-03 ●
90 Diagrams and drawings	
Hydraulic circuit diagrams	CEN90001-00
Electrical circuit diagrams	CEN90002-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$