Shop Manual

BULLDOZER D155A-6
SERIAL NUMBERS 85001 and up



BULLDOZER

D155A-6

Machine model Serial number

D155A-6 85001 and up

00 Index and foreword

Index

Composition of shop manual	2
Composition of Grop manage	–
Table of contents	4

SEN02856-24 00 Index and foreword

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02854-24
00 Index and foreword Index Foreword and general information	SEN02855-24 SEN02856-24 SEN02857-04
01 Specification Specification and technical data	SEN02858-03 SEN02859-03
10 Structure, function and maintenance standard Engine and cooling system Power train, Part 1 Power train, Part 2 Undercarriage and frame Hydraulic system Work equipment Cab and its attachments Electrical system	SEN02860-10 SEN02861-02 SEN02862-03 SEN02863-01 SEN02864-00 SEN02865-06 SEN02866-02 SEN02867-00 SEN02868-02
20 Standard value table Standard service value table	SEN02869-01 SEN03199-01
30 Testing and adjusting Testing and adjusting, Part 1 Testing and adjusting, Part 2 Testing and adjusting, Part 3 Testing and adjusting, Part 4	SEN02870-09 SEN03200-05 SEN03201-04 SEN03202-04 SEN03203-00
Failure code table and fuse locations General information on troubleshooting Troubleshooting by failure and error codes, Part 1 Troubleshooting by failure and error codes, Part 2 Troubleshooting by failure and error codes, Part 3 Troubleshooting by failure and error codes, Part 4 Troubleshooting of electrical system (E-mode) Troubleshooting of hydraulic and mechanical system (H-mode) Troubleshooting of engine (S-mode)	SEN02871-10 SEN03204-05 SEN03205-05 SEN03206-05 SEN03207-05 SEN03208-07 SEN03209-03 SEN03210-03 SEN03211-03 SEN03212-01
50 Disassembly and assembly General information on disassembly and assembly Engine and cooling system Power train, Part 1 Power train, Part 2	SEN02872-11 SEN03366-08 SEN03367-06 SEN03368-05 SEN03369-05

2 D155A-6

00 Index and foreword SEN02856-24

Power train, Part 3	SEN03370-03
Undercarriage and frame	SEN03371-05
Hydraulic system	SEN03372-05
Work equipment	SEN03373-04
Cab and its attachments	SEN03375-03
Electrical system	SEN03376-05
60 Air conditioner	SEN04441-03
Structure, function, testing, adjusting, and troubleshooting	SEN04442-03
90 Diagrams and drawings	SEN02873-05
Hydraulic diagrams and drawings	SEN02875-01
Electrical diagrams and drawings	SEN02874-04

D155A-6 3

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$