

Shop Manual

BULLDOZER

D155AX-8

SERIAL NUMBERS 100001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
FOREWORD, SAFETY, BASIC INFORMATION	00-21
HOW TO READ THE SHOP MANUAL	00-21
SAFETY NOTICE FOR OPERATION	00-23
PRECAUTIONS TO PREVENT FIRE	00-29
ACTION IF FIRE OCCURS	00-31
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-32
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-33
PRECAUTIONS FOR AdBlue/DEF	00-34
STORE AdBlue/DEF	00-35
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-36
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-38
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-44
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-47
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-48
PRACTICAL USE OF KOMTRAX	00-49
METHOD FOR DISCONNECTING AND CONNECTING PUSH-PULL TYPE COUPLER	00-50
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-53
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-57
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-58
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-60
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-61
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-63
HOW TO READ ELECTRICAL WIRE CODE	00-64
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-68
LIST OF ABBREVIATION	00-71
STANDARD TIGHTENING TORQUE TABLE	00-76
CONVERSION TABLE	00-83
01 SPECIFICATION	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
SPECIFICATIONS	01-5
WEIGHT TABLE	01-13
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-16
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
UREA SCR SYSTEM	10-5
LAYOUT DRAWING OF UREA SCR SYSTEM	10-5
UREA SCR SYSTEM DIAGRAM	10-7
FUNCTION OF UREA SCR SYSTEM	10-8
COMPONENT PARTS OF UREA SCR SYSTEM	10-23
BOOT-UP SYSTEM	10-32
SYSTEM OPERATING LAMP SYSTEM	10-32
BATTERY DISCONNECT SWITCH	10-34
ENGINE SYSTEM	10-36
LAYOUT DRAWING OF ENGINE RELATED PARTS	10-36
ENGINE CONTROL SYSTEM	10-38
AUTOMATIC IDLE STOP SYSTEM	10-41
COMPONENT PARTS OF ENGINE SYSTEM	10-44
COOLING SYSTEM	10-64
LAYOUT DRAWING OF COOLING SYSTEM	10-64
COMPONENT PARTS OF COOLING SYSTEM	10-66
CONTROL SYSTEM	10-82
LAYOUT OF ELECTRICAL CONTROL SYSTEM	10-82

PALM COMMAND CONTROL SYSTEM	10-83
MACHINE MONITOR SYSTEM	10-87
KOMTRAX SYSTEM.....	10-90
COMPONENT PARTS OF CONTROL SYSTEM.....	10-91
HYDRAULIC SYSTEM.....	10-125
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-125
CLSS	10-126
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-129
POWER TRAIN SYSTEM	10-188
LAYOUT OF POWER TRAIN SYSTEM	10-188
OPERATE POWER TRAIN SYSTEM.....	10-191
TRANSMISSION, STEERING, AND BRAKE CONTROL	10-193
HSS SYSTEM.....	10-196
CENTRALIZED PRESSURE PICKUP PORT.....	10-199
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-201
WORK EQUIPMENT SYSTEM	10-282
WORK EQUIPMENT CONTROL	10-282
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-287
UNDERCARRIAGE AND FRAME.....	10-304
MAIN FRAME	10-304
SUSPENSION	10-305
TRACK FRAME AND IDLER CUSHION	10-308
WORK EQUIPMENT.....	10-310
STRUCTURE OF CYLINDER STAY	10-310
STRUCTURE OF BLADE	10-311
STRUCTURE OF VARIABLE GIANT RIPPER.....	10-313
STRUCTURE OF VARIABLE FIXED MULTI-SHANK RIPPER.....	10-314
CAB AND ITS ATTACHMENTS	10-315
ROPS CAB	10-315
CAB MOUNT	10-316
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
STANDARD VALUE TABLE FOR ENGINE	20-3
STANDARD VALUE TABLE FOR ENGINE: D155AX-8	20-3
STANDARD VALUE TABLE FOR MACHINE.....	20-8
STANDARD VALUE TABLE FOR MACHINE: D155AX-8	20-8
STANDARD VALUE TABLE FOR ELECTRICAL	20-28
STANDARD VALUE TABLE FOR ELECTRICITY	20-28
30 TESTING AND ADJUSTING.....	30-1
CONTENTS	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING	30-5
TOOLS FOR TESTING AND ADJUSTING.....	30-5
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-12
ENGINE AND COOLING SYSTEM.....	30-14
TEST ENGINE SPEED	30-14
TEST BOOST PRESSURE.....	30-18
TEST EXHAUST GAS TEMPERATURE	30-20
TEST EXHAUST GAS COLOR.....	30-23
TEST AND ADJUST VALVE CLEARANCE	30-25
TEST COMPRESSION PRESSURE.....	30-28
TEST BLOWBY PRESSURE	30-31
TEST ENGINE OIL PRESSURE	30-33
TEST EGR VALVE AND KVGT OIL PRESSURE	30-35
TEST FUEL PRESSURE	30-37
TEST FUEL RETURN RATE AND LEAKAGE.....	30-39
BLEED AIR FROM FUEL SYSTEM	30-44
TEST FUEL CIRCUIT FOR LEAKAGE	30-46
HANDLE CYLINDER CUT-OUT MODE OPERATION.....	30-48

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$