

Shop Manual

BULLDOZER

D21A-8E0

D21P-8E0

SERIAL NUMBERS

D21A-90001

D21P-90001

and up

KOMATSU

BULLDOZER

D21A-8E0

D21P-8E0

Machine model	Serial number
---------------	---------------

D21A-8E0	90001 and up
D21P-8E0	90001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN03320-08
00 Index and foreword	SEN03321-08
100 Index	SEN03329-08 ●
200 Foreword and general information	SEN03330-01
01 Specification	SEN03322-03
100 Specification and technical data.....	SEN04086-03
10 Structure, function and maintenance standard.....	SEN03323-05
100 Engine and cooling system	SEN04087-00
210 Power train, Part 1	SEN04088-00
220 Power train, Part 2	SEN04089-01 ●
300 Undercarriage and frame	SEN04090-01
400 Hydraulic system.....	SEN04091-00
500 Work equipment.....	SEN04092-00
600 Electrical system	SEN04093-03
20 Standard value table.....	SEN03324-00
100 Standard service value table.....	SEN03377-00
30 Testing and adjusting	SEN03325-02
100 Testing and adjusting	SEN03378-02 ●
40 Troubleshooting.....	SEN03326-03
100 General information on troubleshooting.....	SEN03379-02
200 Troubleshooting of electrical system (E-mode).....	SEN03380-02
300 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03381-00
400 Troubleshooting of engine (S-mode).....	SEN03382-01
50 Disassembly and assembly.....	SEN03327-03
100 General information on disassembly and assembly	SEN03383-02
200 Engine and cooling system	SEN03384-01
310 Power train, Part 1	SEN03385-03 ●
320 Power train, Part 2.....	SEN03386-03 ●
400 Undercarriage and frame	SEN03387-01
500 Hydraulic system.....	SEN03388-01

600 Work equipment	SEN03389-01
700 Electrical system	SEN05216-00
90 Diagrams and drawings	SEN03328-02
100 Hydraulic diagrams and drawings	SEN04094-00
200 Electrical diagrams and drawings.....	SEN04095-02

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$