

Shop Manual

BULLDOZER

D61EX -23

D61PX -23

SERIAL NUMBERS

D61EX-30001

D61PX-30001

and up

KOMATSU

SHOP MANUAL

BULLDOZER

D61EX-23 D61PX-23

Model	Serial Number
-------	---------------

D61EX-23 D61PX-23	30001 and up
----------------------	--------------

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-15
Important safety notice	00-15
How to read the shop manual	00-22
Explanation of terms for maintenance standard	00-24
Handling equipment of fuel system devices	00-26
Handling of intake system parts	00-27
Handling of hydraulic equipment	00-28
Method of disconnecting and connecting of push-pull type coupler	00-30
Handling of electrical equipment	00-33
How to read electric wire code	00-41
Precautions when performing operation	00-44
Practical use of KOMTRAX	00-49
Standard tightening torque table	00-50
List of abbreviation	00-56
Conversion table	00-61
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specifications	01-5
Weight table	01-17
Table of fuel, coolant, and lubricants	01-21
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-3
Engine related parts	10-3
KVTG	10-5
EGR system piping drawing	10-12
EGR system circuit diagram	10-14
EGR valve	10-16
EGR cooler	10-18
KCCV layout drawing	10-19
KCCV ventilator	10-21
KDPF	10-23
Cooling system	10-27
Cooling fan motor	10-29
Oil cooler bypass and HST charge safety valve	10-35
Power train	10-41
Power train system	10-41
Damper	10-44
Hydraulic component layout of HST	10-45
Steering and brake control	10-46
HST pump	10-48
HST motor	10-63
Charge pump	10-78
Solenoid valve	10-79
Final drive	10-88
Undercarriage and frame	10-92
Main frame	10-92
Suspension	10-93
Track frame and idler cushion	10-95
Hydraulic system	10-98
Hydraulic component layout of work equipment	10-98
Work equipment control system	10-100
Hydraulic tank	10-102
CLSS	10-104

Work equipment and cooling fan pump	10-107
Control valve	10-118
Ripper PPC valve.....	10-140
Quick drop valve	10-145
Angle control EPC valve	10-148
Accumulator	10-153
Work equipment	10-155
Blade	10-155
Ripper.....	10-156
Piston valve.....	10-157
Cab and its attachments.....	10-158
ROPS cab.....	10-158
Cab mount	10-160
Electrical system	10-161
Engine control system	10-161
Cooling system control system.....	10-164
HST control system	10-166
Parking brake control system	10-179
System operating lamp function.....	10-181
Battery disconnect switch function	10-182
Machine monitor system.....	10-184
KOMTRAX system.....	10-207
System component parts	10-210
Sensor	10-227
20 Standard value tables.....	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine	20-3
Standard value table for machine	20-4
Standard value table for electrical system.....	20-17
30 Testing and adjusting	30-1
Table of contents	30-2
Related information on testing and adjusting	30-4
Tools for testing and adjusting	30-4
Sketch of tools for testing and adjusting	30-7
Engine and cooling system.....	30-9
Testing engine speed	30-9
Testing boost pressure	30-11
Testing exhaust gas color	30-13
Testing and adjusting valve clearance.....	30-15
Testing compression pressure.....	30-18
Testing blowby pressure	30-22
Testing engine oil pressure	30-24
Testing EGR valve and KVGTOil pressures	30-25
Testing fuel pressure	30-26
Testing fuel discharge, return and leakage.....	30-31
Bleeding air from fuel system	30-36
Testing fuel circuit for leakage	30-38
Handling cylinder cutout mode operation.....	30-39
Handling no-injection cranking operation.....	30-40
Testing of KDPF and muffler stack for looseness and damage	30-41
Testing of installed condition of cylinder heads and manifolds	30-42
Testing engine piping for damage and looseness	30-43
Replacing alternator belt.....	30-44
Power train.....	30-45
Testing and adjusting HST oil pressure.....	30-45
Testing output pressure of solenoid valve	30-50
Testing if machine travels straight	30-54
Simple test procedure for brake performance	30-55

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$