

Shop Manual

BULLDOZER

GALEO

D65EX -15E0

D65PX -15E0

D65WX-15E0

SERIAL NUMBERS	D65EX-	69001	
	D65PX-	69001	and up
	D65WX-	69001	

KOMATSU

BULLDOZER

D65EX-15E0

D65PX-15E0

D65WX-15E0

Machine model	Serial number
---------------	---------------

D65EX-15E0	69001 and up
D65PX-15E0	69001 and up
D65WX-15E0	69001 and up

00 Index and foreword

Index

Organization list of the shop manual.....	2
Table of contents	4

Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00046-02
00 Index and foreword	SEN00047-02
Index	SEN00055-02 ●
Foreword and general information	SEN00056-01
01 Specification	SEN00048-01
Specification and technical data	SEN00057-01
10 Structure, function and maintenance standard	SEN00049-01
Engine and cooling system	SEN00281-01
Power train, Part 1	SEN00282-01
Power train, Part 2	SEN00283-01
Undercarriage and frame	SEN00284-01
Hydraulic system, Part 1	SEN00285-01
Hydraulic system, Part 2	SEN00286-01
Hydraulic system, Part 3	SEN00287-01
Work equipment	SEN00288-00
Cab and its attachments	SEN00289-00
Electrical system	SEN00290-01
20 Standard value table	SEN00050-00
Standard service value table	SEN00584-00
30 Testing and adjusting	SEN00051-00
Testing and adjusting, Part 1	SEN00585-00
Testing and adjusting, Part 2	SEN00586-00
Testing and adjusting, Part 3	SEN00587-00

40 Troubleshooting	SEN00052-00
General information on troubleshooting	SEN00588-00
Troubleshooting by failure code (Display of code), Part 1	SEN00589-00
Troubleshooting by failure code (Display of code), Part 2	SEN00590-00
Troubleshooting by failure code (Display of code), Part 3	SEN00591-00
Troubleshooting by failure code (Display of code), Part 4	SEN00592-00
Troubleshooting of electrical system (E-mode)	SEN00593-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00594-00
Troubleshooting of engine (S-mode)	SEN00595-00
50 Disassembly and assembly	SEN00053-00
General information on disassembly and assembly	SEN00944-00 ○
Engine and cooling system, Part 1	SEN00945-00 ○
Engine and cooling system, Part 2	SEN00946-00 ○
Power train, Part 1	SEN00947-00 ○
Power train, Part 2	SEN00948-00 ○
Undercarriage and frame, Part 1	SEN00949-00 ○
Undercarrigage and frame, Part 2	SEN00950-00 ○
Hydraulic system	SEN00951-00 ○
Work equipment	SEN00952-00 ○
Cab and its attachments	SEN00953-00 ○
Electrical system	SEN00954-00 ○
90 Diagrams and drawings	SEN00054-01
Hydraulic diagrams and drawings	SEN00058-00
Electrical diagrams and drawings	SEN00059-01

Table of contents

00 Index and foreword	
Index	SEN00055-02
Organization list of the shop manual	2
Table of contents.....	4
Foreword and general information	SEN00056-01
Foreword and general information	2
Safety notice	2
How to read the shop manual	6
Explanation of terms for maintenance standard	8
Handling electric equipment and hydraulic component	10
How to read electric wire code.....	18
Method of disassembling and connecting push-pull type coupler	21
Standard tightening torque table	24
Conversion table.....	28
01 Specification	
Specification and technical data	SEN00057-01
Specification and technical data	2
Specification dimensions	2
Specifications	3
Weight table	8
Table of fuel, coolant and lubricants	10
10 Structure, function and maintenance standard	
Engine and cooling system	SEN00281-01
Engine and cooling system	2
Cooling system	2
Cooling fan pump.....	4
Cooling fan motor	12
Power train, Part 1	SEN00282-01
Power train, Part 1.....	2
Power train.....	2
HSS system	4
General view of power train unit	6
Power train hydraulic piping drawing	8
Transmission, steering and brake control	10
Damper and universal joint	12
Torque converter and PTO.....	15
Transmission.....	20
Transmission clutch ECMV	32
Main relief valve and torque converter relief valve	38
Lubrication relief valve	40
Power train, Part 2	SEN00283-01
Power train, Part 2.....	2
Bevel gear shaft, HSS and brake	2
Brake valve	18
Final drive	24

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$