

# Shop Manual

BULLDOZER

**D65EX -16**

**D65PX -16**

**D65WX -16**

SERIAL NUMBERS

D65EX- 80001

D65PX- 80001

and up

D65WX-80001

**ecot3**

**KOMATSU**



# BULLDOZER

## D65EX-16

## D65PX-16

## D65WX-16

Machine model	Serial number
D65EX-16	80001 and up
D65PX-16	80001 and up
D65WX-16	80001 and up

---

## 00 Index and foreword

### 100 Index

---

---

Composition of shop manual.....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs .....	SEN04887-06
00 Index and foreword .....	SEN04923-06
100 Index .....	SEN04931-06 ●
200 Foreword and general information .....	SEN04932-01
01 General .....	SEN04924-01
100 Specification and technical data .....	SEN04933-01 ●
10 Structure, function and maintenance standard .....	SEN04925-02
100 Engine and cooling system .....	SEN04963-00
201 Power train, Part 1 .....	SEN04964-00
202 Power train, Part 2 .....	SEN04965-00
300 Undercarriage and frame .....	SEN04966-02 ●
401 Hydraulic system, Part 1 .....	SEN04967-00
402 Hydraulic system, Part 2 .....	SEN04968-01
403 Hydraulic system, Part 3 .....	SEN04969-00
500 Work equipment .....	SEN04970-00
600 Cab and its attachments .....	SEN04971-01 ●
700 Electrical system .....	SEN04972-00
20 Standard value table .....	SEN04926-01
100 Standard service value table .....	SEN05118-01
30 Testing and adjusting .....	SEN04927-04
101 Testing and adjusting, Part 1 .....	SEN05119-02
102 Testing and adjusting, Part 2 .....	SEN05120-02 ●
103 Testing and adjusting, Part 3 .....	SEN05121-02
104 Testing and adjusting, Part 4 .....	SEN05122-01
40 Troubleshooting .....	SEN04928-02
100 Failure code table and fuse locations .....	SEN05029-01
200 General information on troubleshooting .....	SEN05030-01
301 Troubleshooting by failure code (Display of code), Part 1 .....	SEN05031-00
302 Troubleshooting by failure code (Display of code), Part 2 .....	SEN05032-01
303 Troubleshooting by failure code (Display of code), Part 3 .....	SEN05033-01
304 Troubleshooting by failure code (Display of code), Part 4 .....	SEN05034-01

305	Troubleshooting by failure code (Display of code), Part 5.....	SEN05035-00
306	Troubleshooting by failure code (Display of code), Part 6.....	SEN05036-01
400	Troubleshooting of electrical system (E-mode) .....	SEN05037-01
500	Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN05038-00
600	Troubleshooting of engine (S-mode).....	SEN05039-00
50	Disassembly and assembly .....	SEN04929-02
100	General information on disassembly and assembly.....	SEN05110-00
200	Engine and cooling system .....	SEN05111-00
300	Power train .....	SEN05112-00
400	Undercarriage and frame .....	SEN05113-02 ●
500	Hydraulic system .....	SEN05114-00
600	Work equipment .....	SEN05115-00
700	Cab and its attachments.....	SEN05116-01 ●
800	Electrical system .....	SEN05117-00
80	Appendix.....	SEN05040-00
100	Air conditioner .....	SEN05041-00
90	Diagrams and drawings.....	SEN04930-01
100	Hydraulic diagrams and drawings .....	SEN04934-00
200	Electrical diagrams and drawings.....	SEN04935-01 ●

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$