

**SM231**

BED10E1-01

# SERVICE MANUAL

**DX50 Forklift Truck – Latin America Export  
S/N 55001~**

**FD80-10**

**DX50**



## **WARNING**

Read and observe all warnings on this unit before operating it.

**DO NOT** operate this equipment unless all factory-installed guards and shields are properly secured in place.

**KOMATSU**

**ISSUED: JULY 2009**

The information and specifications contained herein were accurate at the time of publication, but may change without notice as required for product improvements. Neither Komatsu Forklift USA, Inc., nor its parent company nor any of its subsidiaries will be held responsible for damages due to misuse or inappropriate use of its products. Requests for information, comments and other inquiries should be sent to:

Komatsu Forklift USA, Inc.  
14481 Lochridge Blvd., Bldg. #2  
Covington, Georgia 30014-4908

Voice phone: (770) 385-4815  
Fax phone: (770) 385-4838

© Copyright 2009, Komatsu Forklift USA, Inc. All rights reserved. No part of this document may be photocopied or reproduced in any way without prior written consent of Komatsu Forklift USA, Inc.

# **FORKLIFT TRUCK**

## **DX50 Series**

<b>Applicable model</b>	<b>Serial number</b>
FD80-10	M248-55001 and up

---

## **00 Index and foreword**

### **100 Index**

---

Composition of shop manual .....	2
Table of contents .....	4

# Table of contents

00 Index and foreword	
100 Index	
Composition of shop manual .....	2
Table of contents .....	4
200 Foreword and general information	
Safety notice .....	2
How to read the shop manual .....	13
Explanation of terms for maintenance standard .....	15
Handling of electric equipment and hydraulic component .....	17
Handling of connectors newly used for engines .....	26
How to read electric wire code .....	29
Precautions when carrying out operation .....	32
Standard tightening torque table .....	35
Conversion table .....	39
01 Outline	
100 Specifications	
Specification dimension drawing .....	2
Weight table .....	4
Lubricant list .....	5
10 Structure, function and maintenance standard	
100 Engine and cooling system	
Cooling system .....	2
Hydraulic oil cooling system piping diagram .....	4
Brake cooling system hydraulic piping diagram .....	5
Torque converter oil filter .....	6
200 Power train	
Power train .....	2
Power train system diagram .....	3
Torque converter .....	4
Transmission .....	12
Transmission control valve .....	25
Relief valve .....	29
Drive shaft .....	31
Front axle .....	32
Differential .....	34
Final drive .....	37
300 Steering system	
Steering piping diagram (orbit roll valve – power steering cylinder) .....	2
Orbit roll valve .....	3
Power steering cylinder .....	5
400 Brake system	
Brake control .....	2
Brake piping diagram (brake – service brake) .....	3
Service brake .....	4
Accumulator charge valve .....	7
Brake valve .....	12
Accumulator (for brake) .....	17
Parking brake .....	18
500 Undercarriage and frame	
Rear axle .....	2
Hydraulic tank piping diagram .....	4

Frame.....	5
600 Hydraulic system	
Control valve piping diagram (control valve – pump).....	2
Work equipment piping diagram (control valve – tilt cylinder/lift cylinder).....	3
Attachment piping diagram.....	4
Work equipment control lever linkage.....	5
Work equipment pump.....	6
Control valve.....	14
OLMS.....	26
Brake and steering pump.....	28
700 Work equipment	
Tilt cylinder.....	2
Lift cylinder.....	3
Mast and fork.....	4
801 Electric devices (Part 1)	
Accelerator pedal sensor.....	2
ISO controller (Operator Presence Sensing (OPS) system).....	3
EPACS controller.....	10
Instrument panel.....	12
Engine starting circuit.....	14
Engine stopping circuit.....	15
Electrical system wiring diagram.....	16
802 Electric devices (Part 2)	
Sensors.....	2
Switches.....	5
Lamps.....	12
Buzzer.....	16
Flasher.....	20
F/R solenoid valve and F2/R2 solenoid valve.....	21
Relay box.....	22
Resistor.....	28
Diode.....	29
Fuse.....	32
Battery.....	34
20 Standard value table	
100 Standard value table	
Standard value table.....	2
30 Testing and adjusting	
100 Testing and adjusting	
Check of troubleshooting software functions and failure codes.....	3
Hydraulic piping pressure release procedure.....	9
Replacement of engine oil and engine oil filter.....	10
Replacement of fuel filter.....	11
Cleaning of radiator.....	14
Check of air cleaner and replacement of cleaner element.....	15
Oil level check and oil replacement of differential case.....	16
Oil replacement and strainer cleaning of TORQFLOW transmission.....	17
Testing power train oil pressure.....	18
Check of hydraulic tank.....	26
Measurement of wear amount of service brake disc.....	28
Check of parking brake.....	29
Air bleeding procedure.....	31
Adjustment of brake pedal.....	33

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$