

Shop Manual

ARTICULATED
DUMP TRUCK

GALEO
HM350-2

SERIAL NUMBERS 2001 and up

ecot3

KOMATSU

ARTICULATED DUMP TRUCK

HM350-2

Machine model Serial number

HM350-2 2001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00238-04
00 Index and foreword	SEN00487-04
Index	SEN00488-04 ●
Foreword and general information	SEN00489-02 ●
01 Specification	SEN00490-01
Specification and technical data	SEN00491-01 ●
10 Structure, function and maintenance standard	SEN00492-01
Engine and cooling system	SEN00493-01 ●
Power train, Part 1	SEN00494-01 ●
Power train, Part 2	SEN00495-01 ●
Steering system	SEN00496-01 ●
Brake system	SEN00497-01 ●
Undercarriage and frame	SEN00498-01 ●
Hydraulic system	SEN00499-01 ●
Cab and its attachments	SEN00500-01 ●
Electrical system, Part 1	SEN00501-01 ●
Electrical system, Part 2	SEN00502-01 ●
Electrical system, Part 3	SEN00503-01 ●
20 Standard value table	SEN00504-00
Standard service value table	SEN01481-00
30 Testing and adjusting	SEN00505-00
Testing and adjusting, Part 1	SEN01482-00
Testing and adjusting, Part 2	SEN01483-00
Testing and adjusting, Part 3	SEN01484-00
40 Troubleshooting	SEN00506-00
General information on troubleshooting	SEN01485-00
Troubleshooting by failure code, General	SEN01486-00
Troubleshooting by failure code, Part 1	SEN01487-00
Troubleshooting by failure code, Part 2	SEN01488-00
Troubleshooting by failure code, Part 3	SEN01489-00

Troubleshooting by failure code, Part 4	SEN01490-00
Troubleshooting by failure code, Part 5	SEN01491-00
Troubleshooting by failure code, Part 6	SEN01492-00
Troubleshooting by failure code, Part 7	SEN01493-00
Troubleshooting by failure code, Part 8	SEN01494-00
Troubleshooting for electrical system (E-mode)	SEN01495-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01496-00
Troubleshooting of engine (S-mode)	SEN01497-00
50 Disassembly and assembly	SEN00507-01
General information on disassembly and assembly	SEN01471-01
Engine and cooling system	SEN01472-01
Power train, Part 1	SEN01473-01
Power train, Part 2	SEN01474-01
Power train, Part 3	SEN01475-01
Undercarriage and frame	SEN01476-01
Hydraulic system	SEN01477-01
Cab and its attachments	SEN01478-01
Electrical system	SEN01479-01
90 Diagrams and drawings	SEN00508-02
Hydraulic diagrams and drawings	SEN00509-01 ●
Electrical diagrams and drawings	SEN00510-02 ●

Table of contents

00 Index and foreword	
Index	SEN00488-04
Composition of shop manual.....	2
Table of contents	4
Foreword and general information	SEN00489-02
Safety notice.....	2
How to read the shop manual	7
Explanation of terms for maintenance standard.....	9
Handling of electric equipment and hydraulic component.....	11
Handling of connectors newly used for engines.....	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36
01 Specification	
Specification and technical data	SEN00491-01
Specification drawings.....	2
Specifications	3
Weight table	6
Fuel, coolant and lubricants	7
10 Structure, function and maintenance standard	
Engine and cooling system	SEN00493-01
Radiator, oil cooler, aftercooler.....	2
Output shaft.....	3
Power train, Part 1	SEN00494-01
Power train skeleton.....	2
Torque converter and transmission hydraulic piping	6
Brake cooling oil control valve (BCV).....	8
Power train pump	9
Torque converter	12
Transmission	18
Transmission control valve.....	46
ECMV	47
Main relief, torque converter relief valve	54
Power train, Part 2	SEN00495-01
Drive shaft	2
Axle	3
Differential	6
Limited slip differential	18
Final drive.....	22
Steering system	SEN00496-01
Steering column.....	2
Brake system	SEN00497-01
Brake piping	2
Brake valve.....	4
Accumulator charge valve	7
Accumulator	11
Slack adjuster.....	12
Brake.....	14

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$