

Shop Manual

ARTICULATED
DUMP TRUCK

HM400-3M0

SERIAL NUMBERS 5001 and up

ecot3

KOMATSU

ARTICULATED DUMP TRUCK

HM400-3M0

Model Serial Number

HM400-3M0 5001 and up

00 Index and foreword

00 Index and foreword

Index

Index (ALL-0310-001-A-00-A)

| | |
|--|--------|
| 00 Index and foreword | 00-1 |
| Index | 00-2 |
| Foreword, safety and general information | 00-16 |
| Important safety notice | 00-16 |
| How to read the shop manual | 00-23 |
| Explanation of terms for maintenance standard | 00-25 |
| Handling equipment of fuel system devices | 00-27 |
| Handling of intake system parts | 00-28 |
| Handling of hydraulic equipment | 00-29 |
| Method of disconnecting and connecting of push-pull type coupler | 00-31 |
| Handling of electrical equipment | 00-34 |
| How to read electric wire code | 00-42 |
| Precautions when performing operation | 00-45 |
| Practical use of KOMTRAX | 00-50 |
| Standard tightening torque table | 00-51 |
| List of abbreviation | 00-57 |
| Conversion table | 00-62 |
| 01 Specification | 01-1 |
| Table of contents | 01-2 |
| Specifications | 01-3 |
| Specification drawing | 01-3 |
| Specifications | 01-5 |
| Weight table | 01-11 |
| Table of fuel, coolant, and lubricants | 01-12 |
| 10 Structure and function | 10-1 |
| Table of contents | 10-2 |
| Engine and cooling system | 10-4 |
| Engine related parts | 10-4 |
| Output shaft | 10-5 |
| Turbocharger | 10-6 |
| EGR system layout drawing | 10-8 |
| EGR system circuit diagram | 10-9 |
| EGR valve | 10-11 |
| Bypass valve | 10-13 |
| Venturi system | 10-15 |
| EGR cooler | 10-17 |
| Muffler | 10-19 |
| Cooling system | 10-20 |
| Radiator fan pump | 10-22 |
| Aftercooler fan motor | 10-30 |
| Radiator fan motor | 10-41 |
| Oil cooler bypass valve | 10-50 |
| Power train | 10-51 |
| Power train system | 10-51 |
| Drive shaft | 10-53 |
| Torque converter and transmission hydraulic piping | 10-54 |
| Torque converter | 10-55 |
| Transmission | 10-61 |
| Transmission control valve | 10-86 |
| Forward and reverse clutch ECMV and gear speed clutch ECMV | 10-89 |
| Lockup clutch ECMV | 10-96 |
| Differential lock clutch ECMV | 10-100 |
| Main relief valve, torque converter relief valve, and main flow selector valve | 10-104 |
| Axle | 10-110 |
| Differential | 10-113 |
| Final drive | 10-117 |
| Steering system | 10-120 |

| | |
|---|--------|
| Layout of steering devices | 10-120 |
| Steering column | 10-121 |
| Flow amplifier valve | 10-122 |
| Steering valve | 10-126 |
| Emergency steering pump | 10-132 |
| Emergency steering motor | 10-133 |
| Brake system | 10-134 |
| Layout of brake parts | 10-134 |
| Parking brake solenoid and accumulator charge valve | 10-136 |
| Accumulator | 10-142 |
| Shut off solenoid valve | 10-143 |
| Brake valve | 10-144 |
| Proportional pressure reducing valve | 10-149 |
| Slack adjuster | 10-151 |
| Brake | 10-155 |
| Brake system tank | 10-158 |
| Parking brake | 10-159 |
| Undercarriage and frame | 10-162 |
| Suspension | 10-162 |
| Suspension cylinder | 10-166 |
| Oscillation hitch | 10-169 |
| Hydraulic system | 10-170 |
| Hydraulic component layout | 10-170 |
| Dump body control | 10-172 |
| Hydraulic tank | 10-173 |
| Steering and hoist pump | 10-174 |
| Hoist valve | 10-185 |
| Steering pump selector solenoid valve | 10-191 |
| Dump EPC valve | 10-192 |
| Center brake cooling remote motor | 10-194 |
| Front brake cooling relief valve | 10-203 |
| Center brake cooling relief valve | 10-204 |
| Cab and its attachments | 10-205 |
| ROPS cab | 10-205 |
| Cab tilt | 10-206 |
| Electrical system | 10-207 |
| Electrical control system | 10-207 |
| Machine monitor system | 10-236 |
| Rear view monitor system | 10-259 |
| KOMTRAX system | 10-263 |
| System component parts | 10-266 |
| Sensor | 10-292 |
| 20 Standard value tables | 20-1 |
| Table of contents | 20-2 |
| Standard service value table | 20-3 |
| Standard value table for engine | 20-3 |
| Standard value table for machine | 20-5 |
| 30 Testing and adjusting | 30-1 |
| Table of contents | 30-2 |
| Related information on testing and adjusting | 30-3 |
| Tools for testing and adjusting | 30-3 |
| Sketch of tools for testing and adjusting | 30-8 |
| Engine and cooling system | 30-9 |
| Testing engine speed | 30-9 |
| Testing boost pressure | 30-10 |
| Testing exhaust gas temperature | 30-12 |
| Testing exhaust gas color | 30-14 |
| Adjusting valve clearance | 30-16 |
| Testing compression pressure | 30-18 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$