

Shop Manual

ARTICULATED
DUMP TRUCK

HM400-3R

SERIAL NUMBERS 8001 and up

KOMATSU

SHOP MANUAL

ARTICULATED DUMP TRUCK

HM400-3R

Model Serial Number

HM400-3R 8001 and up

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-14
Important safety notice	00-14
How to read the shop manual	00-21
Explanation of terms for maintenance standard	00-23
Handling equipment of fuel system devices	00-25
Handling of intake system parts	00-26
Handling of hydraulic equipment	00-27
Method of disconnecting and connecting of push-pull type coupler	00-29
Handling of electrical equipment	00-32
How to read electric wire code	00-40
Precautions when performing operation	00-43
Practical use of KOMTRAX	00-48
Standard tightening torque table	00-49
List of abbreviation	00-55
Conversion table	00-60
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specifications	01-5
Weight table	01-11
Table of fuel, coolant, and lubricants	01-12
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-4
Engine related parts	10-4
Output shaft	10-5
Turbocharger	10-6
Muffler	10-8
Cooling system	10-9
Radiator fan pump	10-11
Aftercooler fan motor	10-19
Radiator fan motor	10-30
Oil cooler bypass valve	10-39
Power train	10-40
Power train system	10-40
Drive shaft	10-42
Torque converter and transmission hydraulic piping	10-43
Torque converter	10-44
Transmission	10-50
Transmission control valve	10-75
Forward and reverse clutch ECMV and gear speed clutch ECMV	10-78
Lockup clutch ECMV	10-85
Differential lock clutch ECMV	10-89
Main relief valve, torque converter relief valve, and main flow selector valve	10-93
Axe	10-99
Differential	10-102
Final drive	10-106
Steering system	10-110
Layout of steering devices	10-110
Steering column	10-111
Flow amplifier valve	10-112
Steering valve	10-116
Emergency steering pump	10-121
Emergency steering motor	10-122

Brake system	10-123
Layout of brake parts	10-123
Parking brake solenoid and accumulator charge valve	10-125
Accumulator	10-131
Shut off solenoid valve	10-132
Brake valve	10-133
Proportional pressure reducing valve	10-138
Slack adjuster	10-140
Brake	10-144
Brake system tank	10-147
Parking brake	10-148
Undercarriage and frame	10-151
Suspension	10-151
Suspension cylinder	10-155
Oscillation hitch	10-158
Hydraulic system	10-159
Hydraulic component layout	10-159
Dump body control	10-161
Hydraulic tank	10-162
Steering and hoist pump	10-163
Hoist valve	10-173
Steering pump selector solenoid valve	10-179
Dump EPC valve	10-180
Center brake cooling remote motor	10-182
Front brake cooling relief valve	10-191
Center brake cooling relief valve	10-192
Cab and its attachments	10-193
ROPS cab	10-193
Cab tilt	10-194
Electrical system	10-195
Electrical control system	10-195
Machine monitor system	10-224
KOMTRAX system	10-247
System component parts	10-251
Sensor	10-277
20 Standard value tables	20-1
Table of contents	20-2
Standard service value table	20-3
Standard value table for engine	20-3
Standard value table for machine	20-5
30 Testing and adjusting	30-1
Table of contents	30-2
General information on testing and adjusting	30-3
Tools for testing and adjusting	30-3
Sketch of tools for testing and adjusting	30-8
Engine and cooling system	30-9
Testing engine speed	30-9
Testing boost pressure	30-10
Testing exhaust gas temperature	30-12
Testing exhaust gas color	30-14
Adjusting valve clearance	30-16
Testing compression pressure	30-18
Testing blowby pressure	30-20
Testing engine oil pressure	30-21
Testing fuel pressure	30-23
Handling cylinder cutout mode operation	30-24
Handling no injection cranking operation	30-25
Testing fuel return rate and leakage	30-26
Bleeding air from fuel system	30-28

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$