

Shop Manual

ARTICULATED
DUMP TRUCK

HM400-5

SERIAL NUMBERS 10001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-23
FOREWORD, SAFETY, BASIC INFORMATION	00-29
HOW TO READ THE SHOP MANUAL	00-29
SAFETY NOTICE FOR OPERATION	00-31
PRECAUTIONS TO PREVENT FIRE	00-39
ACTIONS IF FIRE OCCURS	00-41
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-42
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-43
PRECAUTIONS FOR DEF	00-44
STORE AdBlue/DEF	00-45
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-49
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-56
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-58
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-59
PRACTICAL USE OF KOMTRAX	00-60
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-61
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-65
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-69
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-72
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-73
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-75
HOW TO READ ELECTRICAL WIRE CODE	00-76
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-80
STANDARD TIGHTENING TORQUE TABLE	00-83
CONVERSION TABLE	00-90
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-11
WEIGHT TABLE	01-17
TABLE OF QUANTITY OF OIL AND COOLANT TO BE ADDED (NORTH AMERICA SPECIFICATION)	01-19
TABLE OF QUANTITY OF FUEL, COOLANT AND LUBRICANTS (AUSTRALIA SPECIFICATION).....	01-21
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-14
FUNCTION OF UREA SCR SYSTEM	10-15
COMPONENT PARTS OF UREA SCR SYSTEM	10-31
BOOT-UP SYSTEM	10-40
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH KOMTRAX TERMINAL).....	10-40
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL- LER)	10-42
SYSTEM OPERATING LAMP SYSTEM	10-44
BATTERY DISCONNECT SWITCH	10-47
ENGINE SYSTEM	10-49
LAYOUT DRAWING OF ENGINE SYSTEM	10-49

AUTOMATIC IDLE STOP SYSTEM	10-52
COMPONENT PARTS OF ENGINE SYSTEM	10-54
COOLING SYSTEM.....	10-73
LAYOUT DRAWING OF COOLING SYSTEM	10-73
RADIATOR FAN CONTROL SYSTEM.....	10-75
AFTERCOOLER FAN CONTROL SYSTEM	10-77
COMPONENT PARTS OF COOLING SYSTEM.....	10-79
CONTROL SYSTEM.....	10-107
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-107
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL- LER).....	10-108
RETARDER AND HOIST CONTROL SYSTEM	10-109
MACHINE MONITOR SYSTEM	10-111
REARVIEW MONITOR SYSTEM.....	10-114
KOMTRAX SYSTEM.....	10-115
PAYLOAD METER SYSTEM.....	10-117
COMPONENT PARTS OF CONTROL SYSTEM.....	10-121
HYDRAULIC SYSTEM.....	10-186
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-186
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-187
POWER TRAIN SYSTEM	10-207
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-207
TRANSMISSION CONTROL SYSTEM	10-209
GEAR SHIFT CONTROL SYSTEM.....	10-215
SHIFT HOLD SYSTEM	10-218
DIRECTION CONTROL SYSTEM	10-219
KOMATSU TRACTION CONTROL SYSTEM (KTCS).....	10-220
COMPONENT PARTS OF POWER TRAIN SYSTEM	10-223
WORK EQUIPMENT SYSTEM	10-278
WORK EQUIPMENT CONTROL	10-278
HOIST CONTROL	10-279
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM	10-281
STEERING SYSTEM.....	10-289
LAYOUT DRAWING OF STEERING SYSTEM	10-289
FUNCTION OF STEERING SYSTEM.....	10-290
STEERING COLUMN	10-291
COMPONENT PARTS OF STEERING SYSTEM.....	10-292
BRAKE SYSTEM.....	10-304
LAYOUT DRAWING OF BRAKE SYSTEM	10-304
RETARDER CONTROL	10-306
PARKING BRAKE INTERLOCK FUNCTION.....	10-309
ARAC SYSTEM	10-310
COMPONENT PARTS OF BRAKE SYSTEM.....	10-311
UNDERCARRIAGE AND FRAME.....	10-338
FRONT SUSPENSION	10-338
CENTER AND REAR SUSPENSIONS	10-340
SUSPENSION CYLINDER.....	10-342
OSCILLATION HITCH.....	10-345
WORK EQUIPMENT.....	10-347
STRUCTURE OF WORK EQUIPMENT	10-347
FUNCTION OF WORK EQUIPMENT	10-348
CAB AND ITS ATTACHMENTS	10-349
ROPS CAB	10-349
CAB TILT	10-351
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$