

SHOP MANUAL

KOMATSU

PC12R-8 PC15R-8

MACHINE MODEL	SERIAL NUMBER
PC12R-8	10001 and up
PC15R-8	10001 and up

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- PC12R-8, PC15R-8 mount the 3D68E-3 engine.
For details of the engine, see the 68 Series Engine Shop Manual.

CONTENTS

	No. of page
01 GENERAL	01-1
10 STRUCTURE AND FUNCTION	10-1
20 TESTING AND ADJUSTING	20-1
30 DISASSEMBLY AND ASSEMBLY	30-1
40 MAINTENANCE STANDARD	40-1
90 OTHERS	90-1

The affected pages are indicated by the use of the following marks. It is requested that necessary actions be taken to these pages according to the table below.

Mark	Indication	Action required
○	Page to be newly added	Add
●	Page to be replaced	Replace
()	Page to be deleted	Discard

Pages having no marks are those previously revised or made additions.

LIST OF REVISED PAGES

Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
●	00-1	③		10-6	②		10-49	②		20-1			20-116	①
	00-2	②		10-8	②		10-50	②		20-2			20-117	
●	00-2-1	③		10-9	②		10-51	②		20-3			20-118	
●	00-2-2	③		10-10	②		10-52	②		20-4			20-119	
	00-3			10-11	②		10-53	②		20-5		○	20-119-1	③
	00-4			10-12	②		10-54	②	●	20-6	③	○	20-119-2	③
	00-5			10-13	②		10-55	②	●	20-7	③		20-120	
	00-6			10-14	②		10-56	②		20-8			20-121	
	00-7			10-15	②		10-57	②		20-9			20-122	
	00-8			10-16	②		10-58	②		20-10			20-201	
	00-9			10-17	②		10-59	②		20-11			20-203	
	00-10			10-18	②		10-60	②		20-12			20-204	
	00-11			10-19	②		10-61	②		20-13			20-205	
	00-12			10-20	②		10-62	②		20-14			20-206	
	00-13			10-21	②		10-63	②		20-15			20-207	
	00-14			10-22	②		10-64	②		20-16			20-208	
	00-15			10-23	②		10-65	②		20-17			20-209	
	00-16			10-24	②		10-66	②		20-19			20-210	
	00-17			10-25	②		10-67	②		20-20			20-211	
	00-18			10-26	②		10-68	②	●	20-101	③		20-212	
	00-19			10-27	②		10-69	②		20-102			20-213	
	00-20			10-28	②		10-70	②	○	20-102-1	③		20-214	
	00-21			10-29	②		10-71	②	○	20-102-2	③		20-215	
	00-22			10-30	②		10-72	②	○	20-102-3	③		20-301	
				10-31	②		10-73	②	○	20-102-4	③		20-302	
	01-1			10-32	②		10-74	②	○	20-102-5	③		20-303	
	01-2			10-33	②		10-75	②	○	20-102-6	③		20-304	
	01-3			10-34	②		10-76	②	○	20-102-7	③		20-305	
	01-4			10-35	②		10-77	②		20-103			20-306	
	01-5			10-36	②		10-78	②		20-104			20-307	
	01-6			10-37	②		10-79	②		20-105			20-401	
	01-7			10-38	②		10-80	②		20-106			20-402	
	01-8			10-40	②		10-82	②		20-107	①		20-403	
	01-9			10-41	②		10-83	②		20-108			20-404	
	01-10			10-42	②		10-84	②		20-109			20-405	
				10-43	②		10-85	②		20-110	①		20-406	
	10-1	②		10-44	②		10-86	②	●	20-111	③		20-407	
	10-2	②		10-45	②		10-87	②		20-112			20-408	
	10-3	②		10-46	②		10-88	②		20-113			20-409	
	10-4	②		10-47	②		10-89	②		20-114			20-410	
	10-5	②		10-48	②					20-115			20-411	


Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
	20-412		30-9		①	30-63		①	40-23					
	20-413		30-10		①	30-64		①	40-24					
	20-414		30-11		①	30-65		①	40-25					
	20-415		30-12		①	30-66		①	40-26					
	20-306		30-13		①	30-67		①	40-27					
	20-307		30-14		①	30-68		①						
	20-401		30-15		①	30-69		①	90-1					
	20-402		30-16		①	30-70		①	90-3					
	20-403		30-17		①	30-71		①	90-5					
	20-404		30-18		①	30-72		①	90-7					
	20-405		30-19		①	30-73		①						
	20-406		30-20		①	30-74		①						
	20-407		30-21		①	30-75		①						
	20-408		30-22		①	30-76		①						
	20-409		30-23		①	30-77		①						
	20-410		30-24		①	30-78		①						
	20-411		30-25		①	30-79		①						
	20-412		30-26		①	30-80		①						
	20-413		30-27		①	30-81		①						
	20-414		30-28		①	30-82		①						
	20-415		30-29		①	30-83		①						
	20-416		30-30		①	30-84		①						
	20-417		30-31		①	30-85		①						
	20-418		30-32		①	30-86		①						
	20-419		30-33		①	30-87		①						
	20-420		30-34		①	30-88		①						
	20-421		30-35		①	30-89		①						
	20-422		30-36		①	30-90		①						
	20-423		30-37		①	30-91		①						
	20-501		30-38		①	30-92		①						
	20-502		30-39		①	30-93		①						
	20-503		30-40		①									
	20-504		30-41		①	40-1								
	20-505		30-42		①	40-2								
	20-506		30-43		①	40-3								
	20-507		30-44		①	40-4								
	20-508		30-45		①	40-5								
	20-509		30-46		①	40-6								
	20-510		30-47		①	40-7								
	20-511		30-48		①	40-8								
	20-512		30-49		①	40-9								
	20-513		30-50		①	40-10								
	20-514		30-51		①	40-11								
	20-515		30-52		①	40-12								
	20-516		30-53		①	40-13								
			30-54		①	40-14								
	30-1	①	30-55		①	40-15								
	30-2	①	30-56		①	40-16								
	30-3	①	30-57		①	40-17								
	30-4	①	30-58		①	40-18								
	30-5	①	30-59		①	40-19								
	30-6	①	30-60		①	40-20								
	30-7	①	30-61		①	40-21								
	30-8	①	30-62		①	40-22								

SAFETY

SAFETY NOTICE

IMPORTANT SAFETY NOTICE

Proper service and repair is extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol  is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

GENERAL PRECAUTIONS

Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully BEFORE operating the machine.

1. Before carrying out any greasing or repairs, read all the precautions given on the decals which are fixed to the machine.
2. When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
3. If welding repairs are needed, always have a trained, experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, hand shield, cap and other clothes suited for welding work.
4. When carrying out any operation with two or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs on the controls in the operator's compartment.
5. Keep all tools in good condition and learn the correct way to use them.

6. Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.

PREPARATIONS FOR WORK

7. Before adding oil or making any repairs, park the machine on hard, level ground, and block the wheels or tracks to prevent the machine from moving.
8. Before starting work, lower blade, ripper, bucket or any other work equipment to the ground. If this is not possible, insert the safety pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
9. When disassembling or assembling, support the machine with blocks, jacks or stands before starting work.
10. Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$