

Shop Manual

HYDRAULIC
EXCAVATOR

PC210LCI-11

SERIAL NUMBERS 500470 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

| | |
|--|-------|
| 00 INDEX AND FOREWORD | 00-1 |
| ABBREVIATION LIST | 00-23 |
| FOREWORD, SAFETY, BASIC INFORMATION | 00-29 |
| HOW TO READ THE SHOP MANUAL | 00-29 |
| SAFETY NOTICE FOR OPERATION | 00-31 |
| PRECAUTIONS TO PREVENT FIRE | 00-39 |
| ACTIONS IF FIRE OCCURS | 00-41 |
| PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS | 00-42 |
| ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS | 00-43 |
| PRECAUTIONS FOR DEF | 00-44 |
| PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT | 00-45 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS | 00-48 |
| PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT | 00-54 |
| PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT | 00-56 |
| PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT | 00-57 |
| PRACTICAL USE OF KOMTRAX | 00-58 |
| DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER | 00-59 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS | 00-63 |
| METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR | 00-67 |
| METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR | 00-68 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL .. | 00-70 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. | 00-71 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE . | 00-73 |
| HOW TO READ ELECTRICAL WIRE CODE | 00-74 |
| EXPLANATION OF TERMS FOR MAINTENANCE STANDARD | 00-78 |
| STANDARD TIGHTENING TORQUE TABLE | 00-81 |
| CONVERSION TABLE | 00-88 |
| 01 SPECIFICATIONS | 01-1 |
| CONTENTS | 01-2 |
| ABBREVIATION LIST | 01-3 |
| SPECIFICATIONS | 01-9 |
| SPECIFICATION DRAWING | 01-9 |
| WORKING RANGE DRAWINGS | 01-11 |
| SPECIFICATIONS | 01-12 |
| WEIGHT TABLE | 01-15 |
| TABLE OF FUEL, COOLANT, AND LUBRICANTS | 01-17 |
| 10 STRUCTURE AND FUNCTION | 10-1 |
| CONTENTS | 10-2 |
| ABBREVIATION LIST | 10-6 |
| UREA SCR SYSTEM | 10-12 |
| LAYOUT DRAWING OF UREA SCR SYSTEM | 10-13 |
| UREA SCR SYSTEM DIAGRAM | 10-18 |
| FUNCTION OF UREA SCR SYSTEM | 10-19 |
| COMPONENT PARTS OF UREA SCR SYSTEM | 10-36 |
| BOOT-UP SYSTEM | 10-45 |
| LAYOUT DRAWING OF BOOT-UP SYSTEM | 10-45 |
| SYSTEM OPERATING LAMP SYSTEM | 10-47 |
| BATTERY DISCONNECT SWITCH | 10-49 |
| ENGINE SYSTEM | 10-50 |
| LAYOUT DRAWING OF ENGINE SYSTEM | 10-50 |
| ENGINE CONTROL SYSTEM | 10-52 |
| AUTO-DECELERATION SYSTEM | 10-55 |
| ENGINE AUTOMATIC WARM-UP SYSTEM | 10-57 |
| OVERHEAT PREVENTION SYSTEM | 10-59 |
| TURBOCHARGER PROTECTION SYSTEM | 10-62 |

| | |
|---|--------|
| AUTOMATIC IDLE STOP SYSTEM | 10-64 |
| COMPONENT PARTS OF ENGINE SYSTEM | 10-67 |
| COOLING SYSTEM..... | 10-86 |
| LAYOUT DRAWING OF COOLING SYSTEM | 10-86 |
| FAN SPEED CONTROL SYSTEM OF FAN CLUTCH | 10-88 |
| ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH..... | 10-90 |
| COMPONENT PARTS OF COOLING SYSTEM..... | 10-92 |
| CONTROL SYSTEM..... | 10-93 |
| LAYOUT DRAWING OF CONTROL SYSTEM | 10-93 |
| MACHINE MONITOR SYSTEM | 10-96 |
| KomVision SYSTEM | 10-98 |
| KOMTRAX SYSTEM..... | 10-102 |
| COMPONENT PARTS OF CONTROL SYSTEM..... | 10-103 |
| HYDRAULIC SYSTEM..... | 10-144 |
| LAYOUT DRAWING OF HYDRAULIC SYSTEM | 10-144 |
| CLSS | 10-150 |
| ENGINE AND PUMP COMBINED CONTROL SYSTEM..... | 10-169 |
| PUMP AND VALVE CONTROL SYSTEM | 10-175 |
| COMPONENT PARTS OF HYDRAULIC SYSTEM | 10-178 |
| WORK EQUIPMENT SYSTEM | 10-266 |
| LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM | 10-266 |
| STRUCTURE OF VALVE CONTROL..... | 10-271 |
| ONE-TOUCH POWER MAXIMIZING SYSTEM | 10-273 |
| PPC LOCK SYSTEM | 10-275 |
| WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM | 10-276 |
| OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT..... | 10-278 |
| COMPONENT PARTS OF WORK EQUIPMENT SYSTEM..... | 10-280 |
| ICT SYSTEM | 10-305 |
| LAYOUT DRAWING OF ICT SYSTEM..... | 10-305 |
| ICT CONTROL SYSTEM DIAGRAM..... | 10-309 |
| BUCKET EDGE POSITION DETECTION SYSTEM..... | 10-310 |
| THE INTELLIGENT MACHINE CONTROL SYSTEM..... | 10-312 |
| CUSHION SYSTEM FOR ARM IN END..... | 10-333 |
| BOOM SECONDARY DRIVE SWITCH..... | 10-335 |
| COMPONENT PARTS OF ICT SYSTEM | 10-336 |
| SWING SYSTEM..... | 10-370 |
| LAYOUT DRAWING OF SWING SYSTEM | 10-370 |
| SWING CONTROL SYSTEM DIAGRAM | 10-374 |
| COMPONENT PARTS OF SWING SYSTEM..... | 10-378 |
| TRAVEL SYSTEM..... | 10-392 |
| LAYOUT DRAWING OF TRAVEL SYSTEM..... | 10-392 |
| TRAVEL CONTROL SYSTEM DIAGRAM..... | 10-396 |
| COMPONENT PARTS OF TRAVEL SYSTEM | 10-398 |
| UNDERCARRIAGE AND FRAME..... | 10-419 |
| LAYOUT DRAWING OF UNDERCARRIAGE | 10-419 |
| WORK EQUIPMENT..... | 10-421 |
| STRUCTURE OF WORK EQUIPMENT | 10-421 |
| FUNCTION OF WORK EQUIPMENT | 10-422 |
| WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM..... | 10-423 |
| BUCKET CLEARANCE ADJUSTMENT SHIM | 10-424 |
| CAB AND ITS ATTACHMENTS | 10-425 |
| ROPS CAB | 10-425 |
| CAB MOUNT | 10-426 |
| CAB TIPPING STOPPER | 10-427 |
| 20 STANDARD VALUE TABLE | 20-1 |
| CONTENTS | 20-2 |
| ABBREVIATION LIST | 20-3 |
| STANDARD VALUE TABLE FOR ENGINE | 20-9 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$