

Shop Manual

HYDRAULIC
EXCAVATOR

PC22MR-3

SERIAL NUMBERS PC22MR-3 F30001 and up

KOMATSU

HYDRAULIC EXCAVATOR PC22MR-3

Machine model	Serial number
PC22MR-3	F30001 and up

00 Index and foreword

Table of contents

00 Index and foreword

Table of contents.....	2
Foreword and general information	6
Safety notice	6
How to read the shop manual	11
Explanation of terms for maintenance standard	13
Handling of hydraulic components	15
Method of disconnecting and connecting push-pull type coupler	17
Handling of electric equipment.....	20
How to read electric wire code.....	30
Precautions when performing work.....	33
Standard tightening torque table	36
List of abbreviation.....	40
Conversion table	44

01 Specification

Specifications.....	3
Specification dimension drawing.....	3
Working range drawing	4
Specifications	5
Weight table	8
Table of fuel, coolant and lubricants	10

10 Structure and function

PTO.....	4
Cooling system.....	6
Power train	8
Swing circle.....	9
Track frame	10
Idler cushion.....	11
Idler	12
Track roller	14
Sprocket.....	15
Track shoe	16
Rubber shoe	16
Hydraulic components layout drawing	17
Hydraulic tank and filter.....	18
Center swivel joint.....	19
Travel motor	20
Reduction gear unit.....	23
Hydraulic motor.....	24
Hydraulic valve.....	26
Parking brake	28
Hydraulic cylinder.....	29
Solenoid valve.....	32
2nd travel speed selector solenoid valve PPC lock solenoid valve	33
Hydraulic pump	34
Control valve	40

General view	41
CLSS.....	51
Outline of CLSS	51
Operation for each function and valve	54
Swing motor	74
Reduction gear unit.....	77
Hydraulic motor.....	78
Swing holding brake	79
PPC valve	84
L.H. PPC valves.....	84
R.H PPC valves	85
Travel PPC valve	86
Blade, boom swing and attachment PPC valve	88
Work equipment.....	90
Dimensions of each part of work equipment.....	93
Bucket section	95
Floor.....	96
Tilt floor	96
20 Standard value table	
Standard value table for engine	3
Standard value table for chassis.....	4
Performance of hydraulic pump	11
Posture of machine for measuring performance and measurement procedure.....	12
30 Testing and adjusting	
List of testing, adjusting, and troubleshooting tools	3
Measuring engine speed.....	6
Adjusting valve clearance	7
Measuring compression pressure	8
Measuring engine oil pressure.....	9
Testing and adjusting fuel injection timing	10
Bleeding air from fuel circuit.....	12
Testing and adjusting fan belt tension	13
Adjusting fuel control lever linkage	14
Measurement of clearance in swing circle bearings	15
Testing and adjusting track shoe tension.....	16
Testing and adjusting oil pressures in work equipment, travel, swing, and blade circuits	18
Measuring control circuit basic pressure.....	21
Testing and adjusting pump LS differential pressure.....	22
Measuring solenoid valve output pressure	24
Measuring PPC valve output pressure	26
Measuring swing holding brake release pressure.....	28
Measurement of oil leakage from cylinder	29
Releasing residual pressure from hydraulic circuit	31
Bleeding air from cylinder	31
Pressurizing hydraulic tank	32
How to open and close (tilt) floor	33
Inspection procedures for diode.....	36

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$