

Shop Manual

COMPACT
HYDRAULIC
EXCAVATOR

PC30MR-5
PC35MR-5

SERIAL NUMBERS

PC30MR-50001
PC35MR-30001

and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-13
FOREWORD, SAFETY, BASIC INFORMATION	00-19
HOW TO READ THE SHOP MANUAL.....	00-19
SAFETY NOTICE FOR OPERATION.....	00-21
PRECAUTIONS TO PREVENT FIRE.....	00-29
ACTIONS IF FIRE OCCURS	00-31
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS.....	00-32
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-33
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-36
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-43
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-45
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-46
PRACTICAL USE OF KOMTRAX	00-47
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-48
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-52
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-56
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-57
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-59
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-60
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-62
HOW TO READ ELECTRICAL WIRE CODE	00-63
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-67
STANDARD TIGHTENING TORQUE TABLE.....	00-70
CONVERSION TABLE	00-77
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING.....	01-9
WORKING RANGE DRAWINGS	01-12
SPECIFICATIONS	01-14
WEIGHT TABLE	01-22
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-26
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-4
BOOT-UP SYSTEM.....	10-10
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-10
SYSTEM OPERATING LAMP SYSTEM	10-11
QUICK RELEASE BATTERY TERMINAL (-).....	10-13
ENGINE SYSTEM	10-14
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-14
ENGINE CONTROL SYSTEM	10-15
AUTO-DECELERATION SYSTEM.....	10-23
OVERHEAT PREVENTION SYSTEM.....	10-25
AUTOMATIC IDLE STOP SYSTEM	10-27
COMPONENT PARTS OF ENGINE SYSTEM	10-29
COOLING SYSTEM.....	10-30
LAYOUT DRAWING OF COOLING SYSTEM	10-30
CONTROL SYSTEM.....	10-32
LAYOUT DRAWING OF CONTROL SYSTEM	10-32
MACHINE MONITOR SYSTEM	10-33
KOMTRAX SYSTEM.....	10-34
COMPONENT PARTS OF CONTROL SYSTEM.....	10-35

HYDRAULIC SYSTEM.....	10-52
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-52
CLSS	10-55
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-58
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-61
WORK EQUIPMENT SYSTEM	10-118
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-118
STRUCTURE OF VALVE CONTROL.....	10-121
PPC LOCK SYSTEM	10-123
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-125
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-126
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-128
SWING SYSTEM	10-144
LAYOUT DRAWING OF SWING SYSTEM	10-144
COMPONENT PARTS OF SWING SYSTEM.....	10-145
TRAVEL SYSTEM.....	10-153
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-153
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-155
COMPONENT PARTS OF TRAVEL SYSTEM	10-157
UNDERCARRIAGE AND FRAME.....	10-168
LAYOUT DRAWING OF UNDERCARRIAGE	10-168
IDLER CUSHION.....	10-169
WORK EQUIPMENT.....	10-170
STRUCTURE OF WORK EQUIPMENT	10-170
FUNCTION OF WORK EQUIPMENT	10-171
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-172
CAB AND ITS ATTACHMENTS	10-173
ROPS CAB	10-173
TILT TYPE FLOOR	10-175
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: PC30MR-5.....	20-9
STANDARD VALUE TABLE FOR ENGINE: PC35MR-5.....	20-11
STANDARD VALUE TABLE FOR MACHINE.....	20-13
STANDARD VALUE TABLE FOR MACHINE: PC30MR-5	20-13
STANDARD VALUE TABLE FOR MACHINE: PC35MR-5	20-27
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-41
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING	30-11
TOOLS FOR TESTING AND ADJUSTING.....	30-11
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-15
ENGINE AND COOLING SYSTEM.....	30-17
TEST ENGINE SPEED	30-17
TEST EXHAUST GAS COLOR.....	30-20
TEST AND ADJUST VALVE CLEARANCE	30-22
TEST COMPRESSION PRESSURE.....	30-25
TEST ENGINE OIL PRESSURE	30-28
TEST AND ADJUST FUEL INJECTION TIMING	30-30
BLEED AIR FROM FUEL SYSTEM	30-35
TEST FUEL CIRCUIT FOR LEAKAGE	30-36
TEST AND ADJUST ALTERNATOR BELT TENSION	30-37
TEST AND ADJUST AIR CONDITIONER COMPRESSOR BELT TENSION	30-38
POWER TRAIN.....	30-39
TEST SWING CIRCLE BEARING CLEARANCE	30-39

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$