

# Shop Manual

ENGINE

**3D95E -1 SERIES**

**KOMATSU**



---

## **00 Index and Foreword**

---

# Index

00 Index and Foreword .....	00-1
Foreword, Safety, Basic Information.....	00-4
How to Read the Engine Shop Manual .....	00-4
Safety Notice for Operation .....	00-6
Precautions to Prevent Fire.....	00-14
Procedures If Fire Occurs .....	00-16
Precautions When You Discard Waste Materials.....	00-17
Engine Technology to Conform Exhaust Gas Emission.....	00-18
Precautions When You Handle Hydraulic Equipment .....	00-19
Precautions When You Disconnect and Connect Pipings.....	00-22
Precautions When You Handle Electrical Equipment .....	00-29
Precautions When You Handle Fuel System Equipment .....	00-31
Precautions When You Handle Intake System Equipment .....	00-32
Disconnect and Connect Push-Pull Type Coupler .....	00-33
Precautions for Disconnection and Connection of Connectors .....	00-37
Disconnect and Connect Deutsch Connector.....	00-41
How to Disconnect and Connect Slide Lock Type Connector .....	00-42
Disconnect and Connect Connector with Lock to Pull .....	00-44
Disconnect and Connect Connector with Lock to Push .....	00-45
Disconnect and Connect Connector with Housing to Rotate .....	00-47
Standard Tightening Torque Table.....	00-48
Conversion Table .....	00-55
Abbreviation List .....	00-60
01 Specification.....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Outline of Exhaust Gas Regulation .....	01-3
List of Applicable Machines: 3D95E-1 .....	01-6
Specifications.....	01-7
Engine General View .....	01-8
Weight Table .....	01-16
Engine Performance Curve .....	01-17
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Engine System.....	10-4
Layout of Engine Components .....	10-4
Intake and Exhaust System Parts .....	10-7
Engine Main Body Parts.....	10-13
Turbocharger System.....	10-26
Lubrication System.....	10-45
Fuel System.....	10-52
Cooling System.....	10-68
Electrical System .....	10-76
Component Parts of Electrical System .....	10-76
Sensor .....	10-90
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: SAA3D95E-1 (PC78US-11, PC78US-11E0, PC78UU-11, PC88MR-11, PC88MR-11E0) .....	20-3
Running-in Standard and Performance Test Standard .....	20-5
Performance Test Standard and Standard for Operation of Engine for Break in Period: SAA3D95E-1 (PC78US-11, PC78US-11E0, PC78UU-11, PC88MR-11, PC88MR-11E0) .....	20-5
50 Disassembly and Assembly .....	50-1
Table of Contents .....	50-2
Precautions Before Work .....	50-3

Related Information on Disassembly and Assembly.....	50-4
How to Read This Manual.....	50-4
Coating Materials List.....	50-5
Special Tool List.....	50-10
Sketches of Special Tools .....	50-12
Engine System.....	50-13
Disassemble and Assemble Engine Generally.....	50-13
Remove and Install Supply Pump Assembly .....	50-143
Remove and Install Engine Front Oil Seal.....	50-160
60 Maintenance Standard .....	60-1
Table of Contents .....	60-2
Explanation of Terms for Maintenance Standard .....	60-3
Engine System.....	60-5
Intake and Exhaust System Parts .....	60-5
Engine Main Body Parts.....	60-6
Lubrication System.....	60-27
Index.....	1

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$