

Shop Manual

ENGINE

107E -3 SERIES

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-4
FOREWORD, SAFETY, BASIC INFORMATION	00-10
HOW TO READ THE ENGINE SHOP MANUAL	00-10
SAFETY NOTICE FOR OPERATION.....	00-12
PRECAUTIONS TO PREVENT FIRE.....	00-20
ACTIONS IF FIRE OCCURS	00-22
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-23
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-24
PRECAUTIONS FOR DEF.....	00-25
STORE AdBlue/DEF	00-26
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-27
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-30
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-37
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-39
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-40
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-41
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-45
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-49
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-50
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-52
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-53
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE ..	00-55
HOW TO READ ELECTRICAL WIRE CODE	00-56
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-60
STANDARD TIGHTENING TORQUE TABLE.....	00-63
CONVERSION TABLE	00-70
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
OUTLINE OF EXHAUST GAS REGULATION.....	01-9
LIST OF APPLICABLE MACHINES: 107E-3.....	01-12
SPECIFICATIONS	01-13
ENGINE GENERAL VIEW	01-14
ENGINE PERFORMANCE CURVE	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-4
UREA SCR SYSTEM.....	10-10
LAYOUT DRAWING OF UREA SCR SYSTEM	10-10
UREA SCR SYSTEM DIAGRAM	10-13
FUNCTION OF UREA SCR SYSTEM.....	10-14
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-30
ENGINE SYSTEM	10-39
LAYOUT OF ENGINE COMPONENTS	10-39
INTAKE AND EXHAUST SYSTEM PARTS	10-40
ENGINE MAIN BODY PARTS.....	10-46
TURBOCHARGER SYSTEM.....	10-61
LUBRICATION SYSTEM.....	10-80
FUEL SYSTEM.....	10-88
COOLING SYSTEM.....	10-95
ELECTRICAL SYSTEM	10-100
COMPONENT PARTS OF ELECTRICAL SYSTEM	10-100
SENSOR.....	10-112

20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: SAA4D107E-3 (FH100-1, FH120-1, FH135-1, FH160-1)	20-9
.....	20-9
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD	20-12
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA4D107E-3 (FH100-1, FH120-1, FH135-1, FH160-1).....	20-12
50 DISASSEMBLY AND ASSEMBLY	50-1
CONTENTS	50-2
ABBREVIATION LIST	50-3
RELATED INFORMATION ON DISASSEMBLY AND ASSEMBLY	50-9
HOW TO READ THIS MANUAL.....	50-9
COATING MATERIALS LIST.....	50-11
SPECIAL TOOLS LIST	50-15
SKETCHES OF SPECIAL TOOLS	50-17
ENGINE SYSTEM	50-18
DISASSEMBLE AND ASSEMBLE ENGINE GENERALLY (4D107E-3).....	50-18
REMOVE AND INSTALL SUPPLY PUMP ASSEMBLY (4D107E-3).....	50-92
REMOVE AND INSTALL ENGINE FRONT OIL SEAL (4D107E-3)	50-98
REMOVE AND INSTALL ENGINE REAR OIL SEAL (4D107E-3).....	50-103
60 MAINTENANCE STANDARD	60-1
CONTENTS	60-2
ABBREVIATION LIST	60-3
ENGINE SYSTEM	60-9
INTAKE AND EXHAUST SYSTEM PARTS	60-9
ENGINE MAIN BODY PARTS.....	60-10
LUBRICATION SYSTEM.....	60-28
INDEX.....	1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$