

# Shop Manual

ENGINE

**107E -5 SERIES**

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

**INDEX**

00 INDEX AND FOREWORD .....	00-1
FOREWORD, SAFETY, BASIC INFORMATION .....	00-4
HOW TO READ THE ENGINE SHOP MANUAL .....	00-4
SAFETY NOTICE FOR OPERATION.....	00-6
PRECAUTIONS TO PREVENT FIRE.....	00-14
ACTIONS IF FIRE OCCURS .....	00-16
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS.....	00-17
ENGINE TECHNOLOGY TO CONFORM EXHAUST GAS EMISSION .....	00-18
PRECAUTIONS FOR DEF.....	00-19
STORE AdBlue/DEF .....	00-20
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-21
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-24
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-31
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-33
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-34
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-35
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS.....	00-39
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-43
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-44
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-46
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-47
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-49
HOW TO READ ELECTRICAL WIRE CODE .....	00-50
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-54
STANDARD TIGHTENING TORQUE TABLE.....	00-57
CONVERSION TABLE .....	00-64
ABBREVIATION LIST .....	00-69
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
SPECIFICATIONS .....	01-3
OUTLINE OF EXHAUST GAS REGULATION.....	01-3
LIST OF APPLICABLE MACHINES: 107E-5.....	01-6
SPECIFICATIONS .....	01-7
ENGINE GENERAL VIEW .....	01-10
ENGINE PERFORMANCE CURVE .....	01-22
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
UREA SCR SYSTEM.....	10-4
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-4
UREA SCR SYSTEM DIAGRAM .....	10-6
FUNCTION OF UREA SCR SYSTEM.....	10-7
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-16
ENGINE SYSTEM .....	10-24
LAYOUT OF ENGINE COMPONENTS .....	10-24
INTAKE AND EXHAUST SYSTEM PARTS .....	10-25
ENGINE MAIN BODY PARTS.....	10-30
TURBOCHARGER.....	10-44
CRANKCASE VENTILATION SYSTEM .....	10-47
IMPACTOR (FILTERLESS).....	10-48
EXHAUST THROTTLE VALVE .....	10-49
KDPF .....	10-50
LUBRICATION SYSTEM.....	10-54
FUEL SYSTEM.....	10-63
COOLING SYSTEM.....	10-73
ELECTRICAL SYSTEM .....	10-78

COMPONENT PARTS OF ELECTRICAL SYSTEM .....	10-78
SENSOR.....	10-92
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
STANDARD VALUE TABLE FOR ENGINE .....	20-3
STANDARD VALUE TABLE FOR ENGINE: SAA4D107E-5 (D51EX-24E0, D51EXI-24E0, D51PX-24E0, D51PXI-24E0) .....	20-3
STANDARD VALUE TABLE FOR ENGINE: SAA4D107E-5 (GD535-6).....	20-6
STANDARD VALUE TABLE FOR ENGINE: SAA4D107E-5 (WA200-8E0) .....	20-9
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD .....	20-12
PERFORMANCE TEST STANDARD AND STANDARD FOR OPERATION OF ENGINE FOR BREAK IN PERIOD: SAA4D107E-5 (D51EX-24E0, D51EXI-24E0, D51PX-24E0, D51PXI-24E0) .....	20-12
PERFORMANCE TEST STANDARD AND STANDARD FOR OPERATION OF ENGINE FOR BREAK IN PERIOD: SAA4D107E-5 (GD535-6) .....	20-14
PERFORMANCE TEST STANDARD AND STANDARD FOR OPERATION OF ENGINE FOR BREAK IN PERIOD: SAA4D107E-5 (WA200-8E0).....	20-16
50 DISASSEMBLY AND ASSEMBLY .....	50-1
CONTENTS .....	50-2
RELATED INFORMATION ON DISASSEMBLY AND ASSEMBLY .....	50-3
HOW TO READ THIS MANUAL.....	50-3
COATING MATERIALS LIST.....	50-5
SPECIAL TOOLS LIST .....	50-10
SKETCHES OF SPECIAL TOOLS .....	50-12
ENGINE SYSTEM .....	50-13
DISASSEMBLE AND ASSEMBLE ENGINE GENERALLY .....	50-13
REMOVE AND INSTALL SUPPLY PUMP ASSEMBLY .....	50-87
REMOVE AND INSTALL ENGINE FRONT OIL SEAL .....	50-93
REMOVE AND INSTALL ENGINE REAR OIL SEAL .....	50-98
60 MAINTENANCE STANDARD .....	60-1
CONTENTS .....	60-2
ENGINE SYSTEM .....	60-3
INTAKE AND EXHAUST SYSTEM PARTS .....	60-3
ENGINE MAIN BODY PARTS.....	60-4
LUBRICATION SYSTEM.....	60-22
INDEX.....	1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$