

Shop Manual

ENGINE

95E -5 SERIES

KOMATSU

ENGINE

95E-5 Series

00 Index and foreword

Index

Composition of shop manual	2
Table of contents.....	3

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN01966-17
00 Index and foreword	SEN02120-17
Index	SEN02121-17 ●
Foreword and general information	SEN02122-02
01 Specification	SEN02123-08
Specification and technical data	SEN02124-08 ●
10 Structure, function and maintenance standard	SEN02125-12
Structure, function and maintenance standard, Part 1	SEN02126-09
Structure, function and maintenance standard, Part 2	SEN02127-08 ●
20 Standard value table	SEN02128-09
Standard service value table	SEN02129-09 ●
30 Testing and adjusting	SEN02130-04
Testing and adjusting	SEN02182-04
40 Troubleshooting	SEN02131-04
General information on troubleshooting	SEN02183-03
Troubleshooting of electrical system (E-mode), Part 1	SEN02185-01
Troubleshooting of electrical system (E-mode), Part 2	SEN02186-02
Troubleshooting of mechanical system (S-mode)	SEN02184-02
50 Disassembly and assembly	SEN02132-06
General information on disassembly and assembly	SEN02187-03
Disassembly and assembly, Part 1	SEN02188-00
Disassembly and assembly, Part 2	SEN02189-03
Disassembly and assembly, Part 3	SEN02190-00
90 Repair and replacement of parts	SEN05206-01
Information related to repair and replacement	SEN05207-00
Parts related to cylinder head	SEN05208-01
Parts related to cylinder block	SEN05209-00

Table of contents

00 Index and foreword	
Index	SEN02121-17
Composition of shop manual.....	2
Table of contents.....	3
Foreword and general information	SEN02122-02
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard.....	9
Handling of electric equipment and hydraulic component.....	11
Handling of connectors newly used for engines.....	20
How to read electric wire code	23
Precautions when carrying out operation.....	26
Method of disassembling and connecting push-pull type coupler.....	29
Standard tightening torque table	32
Conversion table	36
01 Specification	
Specification and technical data	SEN02124-08
General information.....	2
Specifications	4
General view	12
Weight table	23
Engine performance curves	24
10 Structure, function and maintenance standard	
Structure, function and maintenance standard, Part 1	SEN02126-09
General structure	4
Air intake and exhaust unit.....	6
Air cleaner.....	8
Turbocharger.....	10
Muffler	13
Cylinder head	14
Cylinder block.....	16
Cylinder	19
Main moving parts.....	20
Crankshaft.....	22
Camshaft.....	23
Piston, piston ring and piston pin	24
Connecting rod.....	25
Flywheel and flywheel housing	28
Timing gear	30
Valve system	34
Valve, valve guide	36
Rocker arm shaft, push rod and tappet.....	37
Structure, function and maintenance standard, Part 2	SEN02127-08
Lubrication system diagram	3
Oil pump.....	4
Regulator valve	6
Oil filter	7
Fuel system diagram.....	9
Supply pump	10
Fuel injection nozzle.....	12
Fuel filter	13
Common rail.....	14
Various sensor	16

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$