

# Shop Manual

ENGINE

**95E -6 SERIES**

**KOMATSU**



**SHOP MANUAL**

# **ENGINE**

## **95E-6 SERIES**

Model                      Serial Number

95E-6 SERIES

---

# **00 Index and foreword**

---

---

**Index** (ALL-0310-001-A-00-A)

00 Index and foreword .....	00-1
Index .....	00-2
Foreword, safety and general information .....	00-5
Important safety notice .....	00-5
How to read the shop manual .....	00-12
Explanation of terms for maintenance standard .....	00-14
Handling equipment of fuel system devices .....	00-16
Handling of intake system parts .....	00-17
Handling of hydraulic equipment .....	00-18
Method of disconnecting and connecting of push-pull type coupler .....	00-20
Handling of electrical equipment .....	00-23
How to read electric wire code .....	00-31
Precautions when performing operation .....	00-34
Standard tightening torque table .....	00-39
List of abbreviation .....	00-45
Conversion table .....	00-50
01 Specification .....	01-1
Table of contents .....	01-2
General information .....	01-3
Exhaust gas regulation .....	01-3
Specifications .....	01-6
Applicable machines .....	01-6
Specifications .....	01-7
General view .....	01-11
Weight table .....	01-24
Engine performance curve .....	01-25
10 Structure and function .....	10-1
Table of contents .....	10-2
Components layout .....	10-3
Components layout drawing .....	10-3
Intake and exhaust system parts .....	10-5
Intake and exhaust system layout drawing .....	10-5
Intake and exhaust system circuit diagram .....	10-7
Air cleaner(DF type) .....	10-9
Air cleaner(FPG type) .....	10-10
Variable flow turbocharger .....	10-11
EGR system piping drawing .....	10-15
EGR system circuit diagram .....	10-17
EGR valve .....	10-18
EGR cooler .....	10-20
KCCV layout drawing .....	10-22
KCCV ventilator .....	10-24
KDOC muffler .....	10-28
Engine main body parts .....	10-30
General structure .....	10-30
Cylinder head .....	10-34
Cylinder block .....	10-36
Main moving parts .....	10-38
Timing gear .....	10-41
Front cover .....	10-43
Valve system .....	10-44
Flywheel and flywheel housing .....	10-46
Lubrication system .....	10-47
Lubrication system chart .....	10-47
Oil pump .....	10-49
Oil filter .....	10-51
Oil cooler .....	10-53

Oil pan .....	10-54
Fuel system .....	10-55
Fuel system parts layout drawing .....	10-55
Fuel system circuit diagram .....	10-57
Prefilter .....	10-58
Main filter .....	10-59
Supply pump .....	10-60
Common rail .....	10-61
Injector .....	10-62
Cooling system .....	10-66
Cooling system parts layout drawing .....	10-66
Cooling system chart .....	10-67
Drive pulley .....	10-68
Water pump .....	10-70
Thermostat and jiggle valve .....	10-71
Electrical equipment .....	10-75
Alternator .....	10-75
Starting motor .....	10-80
Intake air heater .....	10-84
Engine harness .....	10-85
Engine controller .....	10-87
Sensor .....	10-93
20 Standard value tables .....	20-1
Table of contents .....	20-2
Standard service value table .....	20-3
Standard value table for engine .....	20-3
Running-in standard and performance test standard .....	20-9
50 Disassembly and assembly .....	50-1
Table of contents .....	50-2
Related information on disassembly and assembly .....	50-3
How to read this manual .....	50-3
Coating materials list .....	50-5
Special tools list .....	50-9
Sketches of special tools .....	50-10
Disassembly and assembly .....	50-11
General disassembly of engine .....	50-11
General assembly of engine .....	50-26
Removal and installation procedure of supply pump unit alone .....	50-49
Engine front oil seal replacement procedure .....	50-52
Engine rear oil seal replacement procedure .....	50-53
60 Maintenance standard .....	60-1
Table of contents .....	60-2
Intake and exhaust system parts .....	60-3
Variable flow turbocharger .....	60-3
Engine main body parts .....	60-4
Cylinder head .....	60-4
Cylinder block .....	60-6
Crankshaft .....	60-8
Piston .....	60-9
Connecting rod .....	60-10
Timing gear .....	60-11
Camshaft .....	60-12
Valve system .....	60-13
Valve and valve guide .....	60-14
Rocker arm shaft, push rod, and tappet .....	60-15
Flywheel and flywheel housing .....	60-16
Lubrication system .....	60-18
Oil pump .....	60-18
Cooling system .....	60-20

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$