

Shop Manual

ENGINE

95E -7 SERIES

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-4
FOREWORD, SAFETY, BASIC INFORMATION	00-10
HOW TO READ THE ENGINE SHOP MANUAL	00-10
SAFETY NOTICE FOR OPERATION.....	00-12
PRECAUTIONS TO PREVENT FIRE.....	00-20
ACTIONS IF FIRE OCCURS	00-22
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-23
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-24
PRECAUTIONS FOR DEF.....	00-25
STORE AdBlue/DEF	00-26
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-27
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-30
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-37
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-39
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-40
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-41
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-45
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-49
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-50
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-52
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-53
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-55
HOW TO READ ELECTRICAL WIRE CODE	00-56
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-60
STANDARD TIGHTENING TORQUE TABLE.....	00-63
CONVERSION TABLE	00-70
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
OUTLINE OF EXHAUST GAS REGULATION.....	01-9
LIST OF APPLICABLE MACHINES: 95LE-7.....	01-13
SPECIFICATIONS	01-14
ENGINE GENERAL VIEW	01-18
WEIGHT TABLE	01-30
ENGINE PERFORMANCE CURVE	01-32
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-4
UREA SCR SYSTEM.....	10-10
LAYOUT DRAWING OF UREA SCR SYSTEM	10-10
SYSTEM DIAGRAM OF UREA SCR SYSTEM (FOR THE ENGINES COMPLIED WITH TIER 4 FINAL	10-12
REGULATION).....	
SYSTEM DIAGRAM OF UREA SCR SYSTEM (FOR THE ENGINES COMPLIED WITH EU STAGE V	10-13
REGULATION).....	
FUNCTION OF UREA SCR SYSTEM.....	10-15
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-33
ENGINE SYSTEM	10-42
LAYOUT OF ENGINE COMPONENTS	10-42
INTAKE AND EXHAUST SYSTEM PARTS	10-46
ENGINE MAIN BODY PARTS.....	10-51
TURBOCHARGER SYSTEM.....	10-66
LUBRICATION SYSTEM.....	10-93
FUEL SYSTEM.....	10-101

COOLING SYSTEM.....	10-110
ELECTRICAL SYSTEM.....	10-119
COMPONENT PARTS OF ELECTRICAL SYSTEM.....	10-119
SENSOR.....	10-134
20 STANDARD VALUE TABLE.....	20-1
CONTENTS.....	20-2
ABBREVIATION LIST.....	20-3
STANDARD VALUE TABLE FOR ENGINE.....	20-9
STANDARD VALUE TABLE FOR ENGINE: SAA4D95LE-7(D37EX-24, D37EXI-24, D37PX-24, D37PXI-24,D39EX-24, D39EXI-24, D39PX-24, D39PXI-24).....	20-9
STANDARD VALUE TABLE FOR ENGINE: SAA4D95LE-7 (PC130-11, PC130LC-11).....	20-11
STANDARD VALUE TABLE FOR ENGINE: SAA4D95LE-7 (PC138US-11, PC138USLC-11, PC138US-11E0).....	20-13
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD.....	20-15
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA4D95LE-7(D37EX-24,D37EXI-24,D37PX-24,D37PXI-24).....	20-15
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA4D95LE-7(D39EX-24,D39EXI-24,D39PX-24,D39PXI-24).....	20-17
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA4D95LE-7 (PC130-11, PC130LC-11).....	20-19
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA4D95LE-7 (PC138US-11, PC138USLC-11, PC138US-11E0).....	20-21
50 DISASSEMBLY AND ASSEMBLY.....	50-1
CONTENTS.....	50-2
ABBREVIATION LIST.....	50-3
RELATED INFORMATION ON DISASSEMBLY AND ASSEMBLY.....	50-9
HOW TO READ THIS MANUAL.....	50-9
COATING MATERIALS LIST.....	50-11
SPECIAL TOOLS LIST.....	50-16
SKETCHES OF SPECIAL TOOLS.....	50-18
ENGINE SYSTEM.....	50-20
DISASSEMBLE AND ASSEMBLE ENGINE GENERALLY.....	50-20
REMOVE AND INSTALL SUPPLY PUMP ASSEMBLY.....	50-86
REMOVE AND INSTALL ENGINE FRONT OIL SEAL.....	50-92
REMOVE AND INSTALL ENGINE REAR OIL SEAL.....	50-95
60 MAINTENANCE STANDARD.....	60-1
CONTENTS.....	60-2
ABBREVIATION LIST.....	60-3
ENGINE SYSTEM.....	60-9
INTAKE AND EXHAUST SYSTEM PARTS.....	60-9
ENGINE MAIN BODY PARTS.....	60-10
LUBRICATION SYSTEM.....	60-31
COOLING SYSTEM.....	60-33
INDEX.....	1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$