

Shop Manual

ENGINE

114E -5 SERIES

KOMATSU

ENGINE

114E-5 SERIES

Model Serial Number

114E-5
SERIES

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-5
Important safety notice	00-5
How to read the shop manual	00-12
Explanation of terms for maintenance standard	00-14
Handling equipment of fuel system devices	00-16
Handling of intake system parts	00-17
Handling of hydraulic equipment	00-18
Method of disconnecting and connecting of push-pull type coupler	00-20
Handling of electrical equipment	00-23
How to read electric wire code	00-31
Precautions when performing operation	00-34
Standard tightening torque table	00-39
List of abbreviation	00-45
Conversion table	00-50
01 Specification	01-1
Table of contents	01-2
General information	01-3
Exhaust gas regulation	01-3
Specifications	01-6
Applicable machines	01-6
Specifications	01-7
General view	01-10
Engine performance curve	01-6
10 Structure and function	10-1
Table of contents	10-2
Components layout	10-3
Components layout drawing	10-3
Intake and exhaust system parts	10-5
Intake and exhaust system layout drawing	10-5
Intake and exhaust system circuit diagram	10-6
Air cleaner	10-8
KVG T	10-9
Aftercooler	10-16
EGR system piping drawing	10-17
EGR system circuit diagram	10-19
EGR valve	10-21
EGR cooler	10-23
KCCV layout drawing	10-25
KCCV ventilator	10-28
KDPF	10-32
Engine main body parts	10-36
Cylinder head	10-36
Cylinder block	10-38
Main moving parts	10-40
Vibration damper	10-43
Timing gear	10-44
Front cover	10-45
Valve system	10-46
Flywheel	10-47
Lubrication system	10-48
Lubrication system parts layout drawing	10-48
Lubrication system circuit diagram	10-50
Oil pump	10-51
Boost oil pump	10-52
Oil filter	10-53
Oil cooler	10-54

Regulator valve.....	10-55
Safety valve.....	10-56
Oil pan.....	10-57
Fuel system.....	10-58
Fuel system parts layout drawing.....	10-58
Fuel system circuit diagram.....	10-60
Supply pump.....	10-64
Pre-filter.....	10-68
Main filter.....	10-69
Cooling system.....	10-70
Cooling system parts layout drawing.....	10-70
Cooling system circuit diagram.....	10-71
Drive pulley.....	10-73
Water pump.....	10-77
Thermostat.....	10-78
Electrical equipment.....	10-80
Alternator.....	10-80
Starting motor.....	10-84
Intake air heater.....	10-88
Engine wiring harness.....	10-89
Engine controller.....	10-91
Sensor.....	10-97
20 Standard value tables.....	20-1
Table of contents.....	20-2
Standard service value table.....	20-3
Standard value table for engine.....	20-3
Running-in standard and performance test standard.....	20-9
50 Disassembly and assembly.....	50-1
Table of contents.....	50-2
Related information on disassembly and assembly.....	50-3
How to read this manual.....	50-3
Coating materials list.....	50-5
Special tool list.....	50-9
Sketch of special tool.....	50-11
Disassembly and assembly.....	50-12
General disassembly of engine.....	50-12
General assembly of engine.....	50-31
Removal and installation procedure of supply pump unit alone.....	50-70
Engine front oil seal replacement procedure.....	50-74
Engine rear oil seal replacement procedure.....	50-77
60 Maintenance standard.....	60-1
Table of contents.....	60-2
Intake and exhaust system parts.....	60-3
KVTG.....	60-3
Engine main body parts.....	60-4
Cylinder head.....	60-4
Cylinder block.....	60-6
Cylinder liner.....	60-8
Crankshaft.....	60-10
Piston.....	60-12
Connecting rod.....	60-13
Vibration damper.....	60-15
Timing gear.....	60-16
Camshaft.....	60-17
Valve and valve guide.....	60-19
Rocker arm.....	60-21
Flywheel.....	60-23
Lubrication system.....	60-25
Oil pump.....	60-25

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$