

Shop Manual

ENGINE

114E -6 SERIES

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-4
FOREWORD, SAFETY, BASIC INFORMATION	00-10
HOW TO READ THE ENGINE SHOP MANUAL	00-10
SAFETY NOTICE FOR OPERATION.....	00-12
PRECAUTIONS TO PREVENT FIRE.....	00-20
ACTIONS IF FIRE OCCURS	00-22
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-23
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-24
PRECAUTIONS FOR DEF.....	00-25
STORE AdBlue/DEF	00-26
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-27
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-30
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-37
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-39
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-40
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-41
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-45
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-49
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-50
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-52
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-53
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-55
HOW TO READ ELECTRICAL WIRE CODE	00-56
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-60
STANDARD TIGHTENING TORQUE TABLE.....	00-63
CONVERSION TABLE	00-70
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
OUTLINE OF EXHAUST GAS REGULATION.....	01-9
LIST OF APPLICABLE MACHINES: 114E-6.....	01-12
SPECIFICATIONS	01-13
ENGINE GENERAL VIEW	01-16
ENGINE PERFORMANCE CURVE	01-28
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-4
UREA SCR SYSTEM.....	10-10
LAYOUT DRAWING OF UREA SCR SYSTEM	10-10
UREA SCR SYSTEM DIAGRAM	10-12
FUNCTION OF UREA SCR SYSTEM.....	10-14
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-31
ENGINE SYSTEM	10-40
LAYOUT OF ENGINE COMPONENTS	10-40
INTAKE AND EXHAUST SYSTEM PARTS	10-42
ENGINE MAIN BODY PARTS.....	10-47
TURBOCHARGER SYSTEM.....	10-59
LUBRICATION SYSTEM.....	10-81
FUEL SYSTEM.....	10-89
COOLING SYSTEM.....	10-98
ELECTRICAL SYSTEM	10-105
COMPONENT PARTS OF ELECTRICAL SYSTEM	10-105
SENSOR.....	10-120

20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: SAA6D114E-6 (D65EX-18, D65EX-18E0, D65EXI-18, D65EXI-18E0, D65PX-18, D65PX-18E0, D65PXI-18, D65PXI-18E0, D65WX-18, D65WX-18E0)	20-9
STANDARD VALUE TABLE FOR ENGINE: SAA6D114E-6 (HB365LC-3)	20-13
STANDARD VALUE TABLE FOR ENGINE: SAA6D114E-6 (PC360LC-11, PC360LCI-11)	20-17
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD	20-21
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D114E-6 (D65EX-18, D65EXI-18, D65PX-18, D65PXI-18, D65WX-18)	20-21
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D114E-6 (D65EX-18E0, D65EXI-18E0, D65PX-18E0, D65PXI-18E0, D65WX-18E0)	20-23
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D114E-6 (HB365LC-3)	20-25
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D114E-6 (PC360LC-11, PC360LCI-11)	20-26
50 DISASSEMBLY AND ASSEMBLY	50-1
CONTENTS	50-2
ABBREVIATION LIST	50-3
RELATED INFORMATION ON DISASSEMBLY AND ASSEMBLY	50-9
HOW TO READ THIS MANUAL	50-9
COATING MATERIALS LIST	50-11
SPECIAL TOOLS LIST	50-15
SKETCHES OF SPECIAL TOOLS	50-17
ENGINE SYSTEM	50-18
DISASSEMBLE AND ASSEMBLE ENGINE GENERALLY	50-18
REMOVE AND INSTALL SUPPLY PUMP ASSEMBLY	50-102
REMOVE AND INSTALL ENGINE FRONT OIL SEAL	50-108
REMOVE AND INSTALL ENGINE REAR OIL SEAL	50-112
60 MAINTENANCE STANDARD	60-1
CONTENTS	60-2
ABBREVIATION LIST	60-3
ENGINE SYSTEM	60-9
INTAKE AND EXHAUST SYSTEM PARTS	60-9
ENGINE MAIN BODY PARTS	60-10
LUBRICATION SYSTEM	60-29
INDEX	1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$