

Shop Manual

ENGINE

125E -7 SERIES

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-4
FOREWORD, SAFETY, BASIC INFORMATION	00-10
HOW TO READ THE ENGINE SHOP MANUAL	00-10
SAFETY NOTICE FOR OPERATION.....	00-12
PRECAUTIONS TO PREVENT FIRE.....	00-20
ACTIONS IF FIRE OCCURS	00-22
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-23
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-24
PRECAUTIONS FOR DEF.....	00-25
STORE AdBlue/DEF	00-26
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-27
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-30
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-37
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-39
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-40
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-41
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-45
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-49
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-50
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-52
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-53
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE ..	00-55
HOW TO READ ELECTRICAL WIRE CODE	00-56
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-60
STANDARD TIGHTENING TORQUE TABLE.....	00-63
CONVERSION TABLE	00-70
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
OUTLINE OF EXHAUST GAS REGULATION.....	01-9
LIST OF APPLICABLE MACHINES: 125E-7.....	01-12
SPECIFICATIONS	01-13
ENGINE GENERAL VIEW	01-19
WEIGHT TABLE	01-43
ENGINE PERFORMANCE CURVE	01-46
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-4
UREA SCR SYSTEM.....	10-10
LAYOUT DRAWING OF UREA SCR SYSTEM	10-10
UREA SCR SYSTEM DIAGRAM	10-15
FUNCTION OF UREA SCR SYSTEM.....	10-16
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-32
ENGINE SYSTEM	10-41
LAYOUT OF ENGINE COMPONENTS	10-41
INTAKE AND EXHAUST SYSTEM PARTS	10-43
ENGINE MAIN BODY PARTS.....	10-48
TURBOCHARGER SYSTEM.....	10-65
LUBRICATION SYSTEM.....	10-89
FUEL SYSTEM.....	10-97
COOLING SYSTEM.....	10-118
ELECTRICAL SYSTEM	10-123
COMPONENT PARTS OF ELECTRICAL SYSTEM	10-123

SENSOR.....	10-144
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: SAA6D125E-7 (D85EX-18, D85EXI-18, D85PX-18, D85PXI-18).....	20-9
STANDARD VALUE TABLE FOR ENGINE: SAA6D125E-7 (HM300-5, HM300-5E0).....	20-11
STANDARD VALUE TABLE FOR ENGINE: SAA6D125E-7 (PC490LC-11, PC490LCI-11).....	20-13
STANDARD VALUE TABLE FOR ENGINE: SAA6D125E-7 (WA470-8, WA470-8E0).....	20-15
STANDARD VALUE TABLE FOR ENGINE: SAA6D125E-7 (WA475-10)	20-17
STANDARD VALUE TABLE FOR ENGINE: SAA6D125E-7 (WA480-8, WA480-8E0).....	20-19
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD	20-21
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D125E-7 (D85EX-18, D85EXI-18, D85PX-18, D85PXI-18).....	20-21
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D125E-7 (HM300-5, HM300-5E0).....	20-23
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D125E-7 (PC490LC-11, PC490LCI-11).....	20-25
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D125E-7 (WA470-8, WA470-8E0).....	20-27
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D125E-7 (WA475-10)	20-29
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D125E-7 (WA480-8, WA480-8E0).....	20-31
50 DISASSEMBLY AND ASSEMBLY.....	50-1
CONTENTS	50-2
ABBREVIATION LIST	50-3
RELATED INFORMATION ON DISASSEMBLY AND ASSEMBLY	50-9
HOW TO READ THIS MANUAL.....	50-9
COATING MATERIALS LIST.....	50-11
SPECIAL TOOLS LIST	50-16
SKETCHES OF SPECIAL TOOLS.....	50-18
ENGINE SYSTEM	50-21
DISASSEMBLE AND ASSEMBLE ENGINE GENERALLY.....	50-21
REMOVE AND INSTALL SUPPLY PUMP ASSEMBLY	50-124
REMOVE AND INSTALL ENGINE FRONT OIL SEAL	50-133
REMOVE AND INSTALL ENGINE REAR OIL SEAL.....	50-136
60 MAINTENANCE STANDARD.....	60-1
CONTENTS	60-2
ABBREVIATION LIST	60-3
ENGINE SYSTEM	60-9
INTAKE AND EXHAUST SYSTEM PARTS.....	60-9
ENGINE MAIN BODY PARTS.....	60-10
LUBRICATION SYSTEM.....	60-33
COOLING SYSTEM.....	60-36
INDEX.....	1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$