

# Shop Manual

ENGINE

**140E -7 SERIES**

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-4
Foreword, Safety, Basic Information .....	00-10
How to Read the Engine Shop Manual .....	00-10
Safety Notice for Operation .....	00-12
Precautions to Prevent Fire .....	00-20
Procedures If Fire Occurs .....	00-22
Precautions for Disposing of Waste Materials .....	00-23
Procedures for Exhaust Gas Regulations .....	00-24
Precautions for DEF .....	00-25
Store DEF .....	00-26
Precautions When You Handle Hydraulic Equipment .....	00-27
Precautions When You Disconnect and Connect Pipings .....	00-30
Precautions When You Handle Electrical Equipment .....	00-37
Precautions When You Handle Fuel System Equipment .....	00-39
Precautions When You Handle Intake System Equipment .....	00-40
Disconnect and Connect Push-Pull Type Coupler .....	00-41
Precautions for Disconnection and Connection of Connectors .....	00-45
How to Disconnect and Connect Deutsch Connector .....	00-49
How to Disconnect and Connect Slide Lock Type Connector .....	00-50
How to Disconnect and Connect Connector with Lock to Pull .....	00-52
How to Disconnect and Connect Connector with Lock to Push .....	00-53
How to Disconnect and Connect Connector with Housing to Rotate .....	00-55
How to Read the Codes for Electric Cable .....	00-56
Explanation of Terms for Maintenance Standard .....	00-60
Standard Tightening Torque Table .....	00-63
Conversion Table .....	00-70
01 Specifications .....	01-1
Table of Contents .....	01-2
Abbreviation List .....	01-3
Specifications .....	01-9
Outline of Exhaust Gas Regulation .....	01-9
List of Applicable Machines: 140E-7 .....	01-12
Specifications .....	01-13
Engine General View .....	01-20
Weight Table .....	01-48
Engine Performance Curve .....	01-52
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Abbreviation List .....	10-4
Urea SCR System .....	10-10
Layout Drawing of Urea SCR System .....	10-10
Urea SCR System Diagram .....	10-13
Function of Urea SCR System .....	10-14
Component Parts of Urea SCR System .....	10-30
Engine System .....	10-39
Layout of Engine Components .....	10-39
Intake and Exhaust System Parts .....	10-41
Engine Main Body Parts .....	10-46
Turbocharger System .....	10-60
Lubrication System .....	10-84
Fuel System .....	10-94
Cooling System .....	10-115
Electrical System .....	10-121
Component Parts of Electrical System .....	10-121
Sensor .....	10-139

20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Abbreviation List .....	20-3
Standard Value Table for Engine .....	20-9
Standard Value Table for Engine: SAA6D140E-7 (D155AX-8, D155AX-8E0, D155AXI-8, D155AXI-8E0, D155CX-8, D155PX-8) .....	20-9
Standard Value Table for Engine: SAA6D140E-7 (GD955-7, GD955-7E0) .....	20-11
Standard Value Table for Engine: SAA6D140E-7 (HD325-8, HD325-8E0, HD405-8, HD405-8E0) .....	20-13
Standard Value Table for Engine: SAA6D140E-7 (HM400-5, HM400-5E0) .....	20-15
Standard Value Table for Engine: SAA6D140E-7 (PC650LC-11) .....	20-17
Standard Value Table for Engine: SAA6D140E-7 (PC900LC-11, PC950-11E0, PC950LC-11E0) .....	20-19
Standard Value Table for Engine: SAA6D140E-7 (WA500-8, WA500-8E0) .....	20-21
Running-in Standard and Performance Test Standard .....	20-23
Running-in Standard and Performance Test Standard: SAA6D140E-7 (D155AX-8, D155AX-8E0, D155AXI-8, D155AXI-8E0, D155CX-8, D155PX-8) .....	20-23
Running-in Standard and Performance Test Standard: SAA6D140E-7 (GD955-7, GD955-7E0) .....	20-25
Running-in Standard and Performance Test Standard: SAA6D140E-7 (HD325-8, HD325-8E0, HD405-8, HD405-8E0) .....	20-27
Running-in Standard and Performance Test Standard: SAA6D140E-7 (HM400-5, HM400-5E0) .....	20-29
Running-in Standard and Performance Test Standard: SAA6D140E-7 (PC650LC-11) .....	20-31
Running-in Standard and Performance Test Standard: SAA6D140E-7 (PC900LC-11, PC950-11E0, PC950LC-11E0) .....	20-33
Running-in Standard and Performance Test Standard: SAA6D140E-7 (WA500-8, WA500-8E0) .....	20-35
50 Disassembly and Assembly .....	50-1
Table of Contents .....	50-2
Abbreviation List .....	50-3
Related Information on Disassembly and Assembly .....	50-9
How to Read This Manual .....	50-9
Coating Materials List .....	50-10
Special Tool List .....	50-15
Sketches of Special Tools .....	50-17
Engine System .....	50-20
Disassemble and Assemble Engine Generally .....	50-20
Remove and Install Supply Pump Assembly .....	50-88
Remove and Install Engine Front Oil Seal .....	50-92
Remove and Install Engine Rear Oil Seal .....	50-95
60 Maintenance Standard .....	60-1
Table of Contents .....	60-2
Abbreviation List .....	60-3
Engine System .....	60-9
Intake and Exhaust System Parts .....	60-9
Engine Main Body Parts .....	60-10
Lubrication System .....	60-34
Cooling System .....	60-37
Index .....	1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$