

# Shop Manual

SKID-STEER  
LOADER

**SK510-5**

SERIAL NUMBER SK510-5 37DF00001 and up

**KOMATSU**



# **SKID-STEER LOADER**

## **SK510-5**



**Machine model      Serial number**

**SK510-5            37DF00001 and up**

---

## **00 Index and foreword**

---

---

## Contents

### 00 Index and foreword

Contents.....	2
Foreword and general information .....	5
Safety notice .....	5
How to read the shop manual .....	10
How to read electric wire code .....	29
Standard tightening torque table .....	35
Conversion table .....	43

### 01 Specification

Specification.....	4
Standard machine overall dimensions .....	4
Machine overall dimensions with optional equipment.....	5
Specifications.....	6
Table of weight.....	7
Fuel, coolant and lubricants .....	8

### 10 Structure, function and maintenance standard

PTO.....	3
Power train.....	4
Transmission.....	5
Final drive .....	7
Hydraulic pump .....	9
Control valve .....	11
Solenoid valve group ST1 .....	12
Accumulator .....	13
R.H. PPC valve .....	14
L.H. PPC valve.....	15
Cylinders .....	16
Work equipment.....	18

### 20 Standard value table

Standard value table .....	3
Engine .....	3
Machine .....	4

### 30 Testing and adjusting

Testing and adjusting .....	3
Special tools.....	3
Checking the engine speed .....	4
Adjustment of valve clearance .....	5
Measurement of the compression pressure.....	6
Control and adjustment of the fan belt tension .....	7
Control and adjustment of the injection timing .....	8
Checking engine oil pressure.....	10
Adjusting the stroke of the accelerator cables .....	11
Adjusting the position of the servo-control .....	12
Testing and adjustment of gearing chain tension .....	13
Control and regulation of the pressures in the hydraulic circuits .....	14
Testing the hydraulic pump.....	15

---

Checking the travel deviation.....	16
Control valve .....	17
Control and regulation of the servo-control power supply.....	18
Elimination of residual pressures - pressurisation of the tank.....	20
Bleeding air from the hydraulic circuits .....	21
 50 Disassembly and assembly	
How to read the manual.....	3
Coating materials list .....	5
Removal and installation of engine hood .....	6
Tilting and lowering of cab .....	7
Removal and installation of battery.....	9
Removal and installation of starting motor.....	10
Removal and installation of alternator .....	11
Removal and installation of muffler.....	12
Removal and installation of air intake filter .....	13
Removal and installation of valve cover .....	14
Removal and installation of nozzle holder .....	15
Removal and installation of injection pump .....	16
Removal and installation of cylinder head .....	19
Removal and installation of coolant liquid pump.....	21
Removal and installation of radiator group .....	23
Removal and installation of fuel tank .....	25
Removal and installation of cab .....	27
Removal and installation of engine-pump group .....	30
Removal and installation of hydraulic pump assembly .....	33
Removal and installation of gear pump .....	35
Removal and installation of engine-pump coupling .....	36
Removal and installation of control valve .....	37
Removal and installation of PPC valve .....	38
Removal and installation of hub wheel .....	39
Removal and installation of final drive .....	43
Removal and installation of lift cylinder.....	44
Removal and installation of bucket cylinder.....	45
Disassembly and assembly of work equipment cylinders.....	47
Removal and installation work equipment assembly .....	52
Removal and installation of equipment support frame.....	54
 90 Diagrams and drawings	
Hydraulic diagrams .....	3
Hydraulic diagram (standard) .....	3
Hydraulic diagram (road homologation).....	5
Electrical circuit diagrams .....	7
Engine line p/n 37D-06-11310 (1/3).....	7
Engine line p/n 37D-06-11310 (2/3).....	9
Engine line p/n 37D-06-11310 (3/3).....	11
Frame line p/n 37D-06-11330 (1/2) .....	13
Frame line p/n 37D-06-11330 (2/2) .....	15
Cabin line p/n 37D-06-11730 (1/4) .....	17
Cabin line p/n 37D-06-11730 (2/4) .....	19
Cabin line p/n 37D-06-11730 (3/4) .....	21
Cabin line p/n 37D-06-11730 (4/4) .....	23
Cabin line p/n 37D-06-11731 (1/4) .....	25

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$