

Shop Manual

WHEEL LOADER

WA320-7

SERIAL NUMBERS 80001 and up

KOMATSU

SHOP MANUAL

WHEEL LOADER

WA320-7

Model Serial Number

WA320-7 80001 and up

00 Index and foreword

Index (ALL-0310-001-A-00-A)

| | |
|--|-------|
| 00 Index and foreword | 00-1 |
| Index | 00-2 |
| Foreword, safety and general information | 00-17 |
| Important safety notice | 00-17 |
| How to read the shop manual | 00-24 |
| Explanation of terms for maintenance standard | 00-26 |
| Handling equipment of fuel system devices | 00-28 |
| Handling of intake system parts | 00-29 |
| Handling of hydraulic equipment | 00-30 |
| Method of disconnecting and connecting of push-pull type coupler | 00-32 |
| Handling of electrical equipment | 00-35 |
| How to read electric wire code | 00-43 |
| Precautions when performing operation | 00-46 |
| Practical use of KOMTRAX | 00-51 |
| Standard tightening torque table | 00-52 |
| List of abbreviation | 00-58 |
| Conversion table | 00-63 |
| 01 Specification | 01-1 |
| Table of contents | 01-2 |
| Specifications | 01-3 |
| Specification drawing | 01-3 |
| Specifications | 01-7 |
| Weight table | 01-17 |
| Table of fuel, coolant, and lubricants | 01-21 |
| 10 Structure and function | 10-1 |
| Table of contents | 10-2 |
| Engine and cooling system | 10-4 |
| Engine related parts | 10-4 |
| KVTG | 10-6 |
| EGR system piping drawing | 10-13 |
| EGR system circuit diagram | 10-15 |
| EGR valve | 10-17 |
| EGR cooler | 10-19 |
| KCCV layout drawing | 10-20 |
| KCCV ventilator | 10-22 |
| KDPF | 10-24 |
| Cooling system | 10-28 |
| Cooling fan motor | 10-30 |
| Power train | 10-40 |
| Power train system | 10-40 |
| Layout of power train parts | 10-42 |
| Damper | 10-43 |
| HST pump | 10-44 |
| HST motor1 | 10-57 |
| HST motor2 | 10-59 |
| Transfer | 10-64 |
| Clutch solenoid valve | 10-71 |
| Drive shaft | 10-73 |
| Axle | 10-74 |
| Differential | 10-76 |
| Torque proportional differential | 10-80 |
| Limited slip differential | 10-82 |
| Final drive | 10-87 |
| Steering system | 10-89 |
| Layout of steering devices | 10-89 |
| Steering column | 10-90 |
| Priority valve | 10-91 |
| Cushion valve | 10-95 |

| | |
|--|--------|
| Emergency steering valve..... | 10-96 |
| Orbitrol valve | 10-99 |
| Brake system | 10-105 |
| Layout of brake parts..... | 10-105 |
| Brake accumulator charge valve..... | 10-107 |
| Brake valve | 10-112 |
| Brake accumulator | 10-116 |
| Slack adjuster..... | 10-117 |
| Brake | 10-119 |
| Parking brake control | 10-122 |
| Parking brake | 10-123 |
| Parking brake solenoid valve | 10-124 |
| Undercarriage and frame..... | 10-126 |
| Axle mount | 10-126 |
| Center hinge pin | 10-128 |
| Tire | 10-129 |
| Hydraulic system | 10-131 |
| Hydraulic component layout..... | 10-131 |
| Work equipment control | 10-133 |
| Hydraulic tank..... | 10-134 |
| Double type gear pump | 10-137 |
| Steering and work equipment pump..... | 10-138 |
| Control valve | 10-150 |
| CLSS..... | 10-160 |
| Hydraulic circuit diagram and names of valves..... | 10-164 |
| Self-pressure reducing valve..... | 10-177 |
| Work equipment PPC valve | 10-182 |
| Work equipment lock solenoid valve | 10-190 |
| PPC circuit accumulator | 10-191 |
| ECSS accumulator..... | 10-192 |
| Work equipment | 10-193 |
| Work equipment linkage | 10-193 |
| Bucket | 10-194 |
| Cab and its attachments..... | 10-195 |
| ROPS cab..... | 10-195 |
| Cab mount | 10-197 |
| Electrical system | 10-198 |
| Engine control system | 10-198 |
| Preheating system | 10-201 |
| Engine output limit function | 10-203 |
| Automatic warm-up function..... | 10-204 |
| Parking brake control system..... | 10-205 |
| System operating lamp function..... | 10-209 |
| Battery disconnect switch function | 10-210 |
| HST controller system..... | 10-212 |
| Machine monitor system..... | 10-252 |
| Rearview monitor system..... | 10-273 |
| KOMTRAX system..... | 10-276 |
| System component parts | 10-279 |
| Sensor | 10-302 |
| 20 Standard value tables..... | 20-1 |
| Table of contents | 20-2 |
| Standard service value table..... | 20-3 |
| Standard value table for engine | 20-3 |
| Standard value table for machine | 20-5 |
| Standard value table for electrical system..... | 20-17 |
| 30 Testing and adjusting | 30-1 |
| Table of contents | 30-2 |
| Related information on testing and adjusting | 30-4 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$