

Shop Manual

WHEEL LOADER

WA380 -6

WA380Z -6

SERIAL NUMBERS

WA380- 65001

WA380Z-66847

and up

ecot3

KOMATSU

WHEEL LOADER

WA380-6

WA380Z-6

Machine model	Serial number
WA380-6	65001 and up
WA380Z-6	66847 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN06411-00
00 Index and foreword	SEN06412-00
Index	SEN06413-00
Foreword and general information	SEN06414-00
01 Specification	SEN06415-00
Specification and technical data	SEN06416-00
10 Structure, function and maintenance standard	SEN06417-00
Engine and cooling system	SEN06418-00
Power train	SEN06419-00
Steering system	SEN06420-00
Brake system	SEN06421-00
Undercarriage and frame	SEN06422-00
Hydraulic system, Part 1	SEN06423-00
Hydraulic system, Part 2	SEN06424-00
Work equipment	SEN06425-00
Cab and its attachments	SEN06426-00
Electrical system, Part 1	SEN06427-00
Electrical system, Part 2	SEN06428-00
Electrical system, Part 3	SEN06429-00
20 Standard value table	SEN06430-00
Standard service value table	SEN06431-00
30 Testing and adjusting	SEN06432-00
Testing and adjusting, Part 1	SEN06433-00
Testing and adjusting, Part 2	SEN06434-00
Testing and adjusting, Part 3	SEN06435-00
40 Troubleshooting	SEN06436-00
Failure code table and fuse locations	SEN06437-00
General information on troubleshooting	SEN06438-00
Troubleshooting by failure code (Display of code), Part 1	SEN06439-00
Troubleshooting by failure code (Display of code), Part 2	SEN06440-00
Troubleshooting by failure code (Display of code), Part 3	SEN06441-00

Troubleshooting by failure code (Display of code), Part 4	SEN06442-00
Troubleshooting by failure code (Display of code), Part 5	SEN06443-00
Troubleshooting by failure code (Display of code), Part 6	SEN06444-00
Troubleshooting by failure code (Display of code), Part 7	SEN06445-00
Troubleshooting by failure code (Display of code), Part 8	SEN06446-00
Troubleshooting by failure code (Display of code), Part 9	SEN06447-00
Troubleshooting by failure code (Display of code), Part 10	SEN06448-00
Troubleshooting of electrical system (E-mode)	SEN06449-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN06450-00
Troubleshooting of engine (S-mode)	SEN06451-00
50 Disassembly and assembly	SEN06452-00
General information on disassembly and assembly	SEN06453-00
Engine and cooling system	SEN06454-00
Power train	SEN06455-00
Steering system	SEN06456-00
Brake system	SEN06457-00
Undercarriage and frame	SEN06458-00
Hydraulic system	SEN06459-00
Work equipment	SEN06460-00
Cab and its attachments	SEN06461-00
Electrical system	SEN06462-00
90 Diagrams and drawings	SEN06463-00
Hydraulic diagrams and drawings	SEN06464-00
Electrical diagrams and drawings	SEN06465-00

Table of contents

00 Index and foreword	
Index	SEN06413-00
Composition of shop manual	2
Table of contents.....	4
Foreword and general information	SEN06414-00
Safety notice	2
How to read the shop manual.....	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code.....	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table.....	32
Conversion table.....	36
01 Specification	
Specification and technical data	SEN06416-00
Specification dimension drawing.....	2
Specifications.....	4
Weight table	12
Table of fuel, coolant and lubricants	16
10 Structure, function and maintenance standard	
Engine and cooling system	SEN06418-00
Engine mount and transmission mount	2
Cooling system	3
Cooling fan pump.....	5
Brake and fan pump	12
Cooling fan motor	13
Power train	SEN06419-00
Power train.....	3
Power train system diagram	4
Drive shaft.....	7
Power train piping diagram	8
Torque converter.....	10
Transmission.....	18
Flow control valve	52
Valve assembly	54
ECMV	55
Main relief valve and torque converter relief valve	63
Axle.....	65
Differential.....	67
Limited slip differential	71
Final drive	78
Steering system	SEN06420-00
Steering piping diagram	2
Steering column.....	4
Steering pump.....	6
Steering valve	26
Orbit-roll valve.....	41
Stop valve	49
Steering relief valve	50
Steering cylinder	51
Emergency steering motor.....	53

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$