

Shop Manual

GALEO

WA600-6

WHEEL LOADER

SERIAL NUMBERS WA600-6 60001 and up

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2006 Komatsu
Printed in U.S.A.
Komatsu America Corp.

August 2006

WHEEL LOADER

WA600-6

Machine model Serial number

WA600-6 60001 and up

00 Index and foreword

Index

Organization list of the shop manual.....	2
Table of contents	4

Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00235-02
00 Index and foreword	SEN00397-02
Index	SEN00398-02 ●
Foreword and general information	SEN00415-00
01 Specification	SEN00399-00
Specification and technical data	SEN00400-00
10 Structure, function and maintenance standard	SEN00401-00
Engine and cooling system	SEN00402-00
Power train	SEN00403-00
Steering system	SEN00404-00
Brake system	SEN00405-00
Undercarriage and frame	SEN00406-00
Hydraulic system	SEN00407-00
Work equipment	SEN00408-00
Cab and its attachments	SEN00409-00
Electrical system, Part 1	SEN00410-00
Electrical system, Part 2	SEN00411-00
20 Standard value table	SEN00566-00
Standard service value table	SEN00552-00
30 Testing and adjusting	SEN00567-00
Testing and adjusting, Part 1	SEN00553-00
Testing and adjusting, Part 2	SEN00554-00
Testing and adjusting, Part 3	SEN00555-00
Testing and adjusting, Part 4	SEN00556-00

40 Troubleshooting	SEN00568-00
General information on troubleshooting	SEN00557-00
Troubleshooting by failure code (Display of code), Part 1	SEN00558-00
Troubleshooting by failure code (Display of code), Part 2	SEN00559-00
Troubleshooting by failure code (Display of code), Part 3	SEN00560-00
Troubleshooting by failure code (Display of code), Part 4	SEN00561-00
Troubleshooting by failure code (Display of code), Part 5	SEN00562-00
Troubleshooting by failure code (Display of code), Part 6	SEN00569-00
Troubleshooting by failure code (Display of code), Part 7	SEN00570-00
Troubleshooting by failure code (Display of code), Part 8	SEN00571-00
Troubleshooting by failure code (Display of code), Part 9	SEN00572-00
Troubleshooting by failure code (Display of code), Part 10	SEN00573-00
Troubleshooting by failure code (Display of code), Part 11	SEN00574-00
Troubleshooting of electrical system (E-mode)	SEN00563-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00564-00
Troubleshooting of engine (S-mode)	SEN00565-00
50 Disassembly and assembly	SEN00583-00
General information on disassembly and assembly	SEN01156-00 ○
Engine and cooling system, Part 1	SEN01157-00 ○
Engine and cooling system, Part 2	SEN01158-00 ○
Power train, Part 1	SEN01160-00 ○
Power train, Part 3	SEN01164-00 ○
Power train, Part 4	SEN01165-00 ○
Brake system	SEN01167-00 ○
Undercarriage and frame	SEN01169-00 ○
Hydraulic system	SEN01171-00 ○
Work equipment	SEN01174-00 ○
Cab and its attachments	SEN01175-00 ○
Electrical system	SEN01177-00 ○
90 Diagrams and drawings	SEN00414-01
Hydraulic diagrams and drawings	SEN00412-00
Electrical diagrams and drawings	SEN00413-01

Table of contents

00 Index and foreword	
Index	SEN00398-01
Organization list of the shop manual	2
Table of contents.....	4
Foreword and general information	SEN00415-00
Foreword and general information	2
Safety notice	2
How to read the shop manual	6
Explanation of terms for maintenance standard	8
Handling electric equipment and hydraulic component	10
How to read electric wire code.....	18
Method of disassembling and connecting push-pull type coupler	21
Standard tightening torque table.....	24
Conversion table.....	28
01 Specification	
Specification and technical data	SEN00400-00
Specification and technical data	2
Specification dimension drawing.....	2
Specifications	3
Weight table	6
Table of fuel, coolant and lubricants	8
10 Structure, function and maintenance standard	
Engine and cooling system	SEN00402-00
Engine and cooling system	2
Cooling system	2
Engine mount and transmission mount	6
Power train	SEN00403-00
Power train	4
Power train.....	4
Power train system diagram	5
Damper	6
Drive shaft.....	8
Torque converter and transmission piping diagram	9
Torque converter.....	10
Modulation clutch.....	19
Torque converter regulator valve	20
Transmission.....	22
Transfer.....	38
Transmission control valve	40
ECMV	42
Main relief valve and torque converter relief valve	49
Lubrication relief valve	51
Torque converter oil cooler	52
Torque converter oil filter	53
Center support.....	56
Axle.....	58
Differential.....	62
Limited slip differential	71
Final drive	76

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$