

# Shop Manual

WHEEL DOZER

**WD600-6**

SERIAL NUMBERS 55001 and up

**ecot3**

**KOMATSU**



# **WHEEL DOZER**

## **WD600-6**

<b>Machine model</b>	<b>Serial number</b>
WD600-6	55001 and up

---

# **00 Index and foreword**

## **100 Index**

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs .....	SEN04979-11
00 Index and foreword .....	SEN04980-11
100 Index .....	SEN04981-11 ●
200 Foreword and general information .....	SEN04982-01
01 Specification .....	SEN04983-01
100 Specification and technical data.....	SEN04984-01
10 Structure, function and maintenance standard.....	SEN04985-03
100 Engine and cooling system .....	SEN04986-00
201 Power train, Part 1 .....	SEN04987-00
202 Power train, Part 2 .....	SEN04988-00
300 Steering system .....	SEN04989-00
400 Brake system .....	SEN04990-00
500 Undercarriage and frame .....	SEN04991-00
601 Hydraulic system, Part 1 .....	SEN04992-00
602 Hydraulic system, Part 2 .....	SEN04993-00
700 Work equipment.....	SEN04994-00
800 Cab and its attachments .....	SEN04995-00
901 Electrical system, Part 1 .....	SEN04996-02 ●
902 Electrical system, Part 2 .....	SEN04997-00
903 Electrical system, Part 3 .....	SEN04998-02 ●
20 Standard value table.....	SEN04999-02
100 Standard service value table.....	SEN05044-02
30 Testing and adjusting .....	SEN05000-07
101 Testing and adjusting, Part 1.....	SEN05045-03
102 Testing and adjusting, Part 2.....	SEN05046-01
103 Testing and adjusting, Part 3.....	SEN05047-02
104 Testing and adjusting, Part 4.....	SEN05048-05 ●
40 Troubleshooting.....	SEN05001-03
100 Failure code table and fuse locations .....	SEN05049-01
200 General information on troubleshooting.....	SEN05050-01
301 Troubleshooting by failure code (Display of code), Part 1 .....	SEN05051-01

302	Troubleshooting by failure code (Display of code), Part 2.....	SEN05052-02
303	Troubleshooting by failure code (Display of code), Part 3.....	SEN05053-02
304	Troubleshooting by failure code (Display of code), Part 4.....	SEN05054-02
305	Troubleshooting by failure code (Display of code), Part 5.....	SEN05055-02
306	Troubleshooting by failure code (Display of code), Part 6.....	SEN05056-03
307	Troubleshooting by failure code (Display of code), Part 7.....	SEN05057-01
308	Troubleshooting by failure code (Display of code), Part 8.....	SEN05058-01
309	Troubleshooting by failure code (Display of code), Part 9.....	SEN05059-01
310	Troubleshooting by failure code (Display of code), Part 10.....	SEN05060-01
400	Troubleshooting of electrical system (E-mode) .....	SEN05061-01
500	Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN05062-01
600	Troubleshooting of engine (S-mode) .....	SEN05063-00
50	Disassembly and assembly .....	SEN05002-05
100	General information on disassembly and assembly.....	SEN05141-00
201	Engine and cooling system, Part 1.....	SEN05142-01
202	Engine and cooling system, Part 2.....	SEN05143-02
301	Power train, Part 1.....	SEN05144-01
302	Power train, Part 2.....	SEN05145-02
303	Power train, Part 3.....	SEN05146-01
304	Power train, Part 4.....	SEN05147-00
400	Brake system.....	SEN05148-01
500	Undercarriage and frame .....	SEN05149-01
600	Hydraulic system.....	SEN05150-01
700	Work equipment .....	SEN05151-00
800	Cab and its attachments.....	SEN05152-02
900	Electrical system .....	SEN05153-00
90	Diagrams and drawings.....	SEN05003-03
100	Hydraulic diagrams and drawings .....	SEN05004-00
200	Electrical diagrams and drawings.....	SEN05005-03

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$