



© Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

Each page of the Workshop Manual includes the information defined below:

- A Car Model
- B Group
- C Subgroup
- D Title
- E Page number.

The Workshop Manual file names include the information explained below:

- A Car Model
- B Group
- C Subgroup
- D Title
- E Market
- F Model Year
- G Language
- H Document review



© Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

## Structure

Main group	Subgroup	Title identification
00 General information	00 General information	00 Description
	01 Equipment	01 Check (control)
	02 Special tools	02 Adjustment
	03 Oils, grease, lubricants and liquids	03 Disassemble
	04 Engine	04 Cleaning
	05 Manual gearbox	05 Assemble
	06 E-gear	06 Bleeding
	07 Body	07 Fluids substitution
	08 Torque	08 Filling and topping up
	09 Electrical information	09 Overhaul
	10 Scrapping	10 Error code
	11 Car selflevelling kit	11 Measurement block reading or parameters
	12 Accessory kit	12 Running-in
	13 Serial number	13 Adjustment coding
	88 Check list	14 Diagnosis software
	89 PDI (pre-delivery checks)	86 Frequency 1
	90 Maintenance plan and frequency	87 Frequency 2
	91 Car general presentation	88 Frequency 3
		89 Frequency 4
		90 Frequency 5
		91 Frequency 6
		92 Frequency 7
		93 Frequency 8
		94 Frequency 9
		95 Frequency 10
		96 Frequency 11
		97 Frequency 12
		98 Frequency 13



© Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

Main group	Subgroup	Title identification
01 Engine	00 Assemblies	00 Description
	01 Auxiliary belt	01 Check (control)
	03 Crankcase, cylinder, cylinder head	02 Adjustment
	05 Crankshaft, connecting rods	03 Disassemble
	07 Pistons, rings, pins, liners	04 Cleaning
	09 Camshaft, valves	05 Assemble
	15 Oil pump	06 Bleeding
	16 Variable valve timing mechanism	07 Fluids substitution
	17 Oil cooler	08 Filling and topping up
	19 Air intercooler	09 Overhaul
	21 Water cooling	10 Error code
	22 Water pump	11 Measurement block reading or parameters
	27 Fuel pump & lines	12 Running-in
	28 Injection system	13 Adjustment coding
	29 Air intake manifold	14 Diagnosis software
	30 Oil filter	
	31 Catalyst	
	33 Intake air filter	
	41 Clutch / Flywheel	
	42 Automatic clutch (E-gear)	
	45 Turbocharger	
	90 Timing system	
	98 Repair kit	
	99 Fixing and suspension	



© Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

Main group	Subgroup	Title identification
<b>02</b> Fuel tank, exhaust system, heating, Climate system	<b>00</b> Assemblies	<b>00</b> Description
	<b>01</b> Fuel tank	<b>01</b> Check (control)
	<b>02</b> Exhaust pressure control	<b>02</b> Adjustment
	<b>03</b> Fuel system parts	<b>03</b> Disassemble
	<b>09</b> Fuel cooling	<b>04</b> Cleaning
	<b>51</b> Exhaust system	<b>05</b> Assemble
	<b>53</b> Oxygen sensor	<b>06</b> Bleeding
	<b>54</b> Catalyst temperature sensor	<b>07</b> Fluids substitution
	<b>60</b> Air conditioning, engine parts (+ sensors)	<b>08</b> Filling and topping up
	<b>61</b> Auxilliary heater	<b>09</b> Overhaul
	<b>65</b> Geater	<b>10</b> Error code
	<b>90</b> Control number	<b>11</b> Measurement block reading or parameters
	<b>98</b> Repair kit	<b>12</b> Running-in
	<b>99</b> Fixing with suspension	<b>13</b> Adjustment coding
		<b>14</b> Diagnosis software



© Automobili Lamborghini S.p.A.

The information and procedures published below are strictly confidential and exclusively for the Lamborghini Dealer Network and Authorized Service Points. All copyrights are property of Automobili Lamborghini S.p.A based on copyright law. All of the PDF chapters in the WEB workshop manuals described below are based on information available at the time of publication. The company reserves the right to make updates and modifications. The following are prohibited: reprinting, reproduction, forwarding to unauthorized people and/or third parties, and translation, including partial, without written authorization from Automobili Lamborghini S.p.A.

Main group	Subgroup	Title identification
<b>03</b> Transmission	<b>00</b> Assemblies	<b>00</b> Description
	<b>01</b> Transmission housing	<b>01</b> Check (control)
	<b>07</b> Gears & shafts	<b>02</b> Adjustment
	<b>08</b> Rods / Forks	<b>03</b> Disassemble
	<b>09</b> Selespeed sensor	<b>04</b> Cleaning
	<b>11</b> Synchroni. Gears	<b>05</b> Assemble
	<b>15</b> Oil pump	<b>06</b> Bleeding
	<b>17</b> Oil cooler	<b>07</b> Fluids substitution
	<b>21</b> Transmission housing e-gear	<b>08</b> Filling and topping up
	<b>23</b> Shifting / lever	<b>09</b> Overhaul
	<b>25</b> Automatic trans. control	<b>10</b> Error code
	<b>31</b> Disc sets	<b>11</b> Measurement block reading or parameters
	<b>41</b> Transfer case	<b>12</b> Running-in
	<b>90</b> Control number	<b>13</b> Adjustment coding
	<b>98</b> Repair kit	<b>14</b> Diagnosis software
	<b>99</b> Fixing with suspension	

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$