

**I 650M**  
**Stage IIIB**  
**Crawler Dozer**

*PIN NGC107000 and above*

**SERVICE MANUAL**

Part number 48048567

1<sup>st</sup> edition English

April 2017

© 2017 CNH Industrial America LLC. All Rights Reserved.

**CASE**  
CONSTRUCTION



## **SERVICE MANUAL**

**1650M Extra Long Track (XLT), Bulldozer (BD) Blade - Tier 4B (final) and Stage IIIB [NGC107000 - ]**

**1650M Extra Long Track (XLT), Power Angle Tilt (PAT) Blade - Tier 4B (final) and Stage IIIB [NGC107000 - ]**

**1650M Wide Track (WT) / Low Ground Pressure (LGP), Power Angle Tilt (PAT) Blade - Tier 4B (final) and Stage IIIB [NGC107000 - ]**

# Link Product / Engine

| <b>Product</b>  | <b>Market Product</b> | <b>Engine</b>  |
|---|-----------------------|----------------|
| 1650M Extra Long Track (XLT), Bulldozer (BD) Blade - Tier 4B (final) and Stage IIIB [NGC107000 - ]                              | Europe                | F4HFE6132*A004 |
| 1650M Extra Long Track (XLT), Power Angle Tilt (PAT) Blade - Tier 4B (final) and Stage IIIB [NGC107000 - ]                      | Europe                | F4HFE6132*A004 |
| 1650M Wide Track (WT) / Low Ground Pressure (LGP), Power Angle Tilt (PAT) Blade - Tier 4B (final) and Stage IIIB [NGC107000 - ] | Europe                | F4HFE6132*A004 |

# Contents

---

## INTRODUCTION

|   |           |
|---|-----------|
| <b>Engine</b> .....   | <b>10</b> |
| [10.001] Engine and crankcase .....                                 | 10.1      |
| [10.202] Air cleaners and lines .....                               | 10.2      |
| [10.206] Fuel filters .....   | 10.3      |
| [10.216] Fuel tanks .....   | 10.4      |
| [10.304] Engine lubrication system.....                             | 10.5      |
| [10.310] Aftercooler.....   | 10.6      |
| [10.400] Engine cooling system .....                                | 10.7      |
| [10.414] Fan and drive .....  | 10.8      |
| [10.500] Selective Catalytic Reduction (SCR) exhaust treatment..... | 10.9      |
| <b>Hydrostatic drive</b> .....                                      | <b>29</b> |
| [29.218] Pump and motor components.....                             | 29.1      |
| <b>Brakes and controls</b> .....                                    | <b>33</b> |
| [33.110] Parking brake or parking lock .....                        | 33.1      |
| [33.202] Hydraulic service brakes .....                             | 33.2      |
| <b>Hydraulic systems</b> .....                                      | <b>35</b> |
| [35.000] Hydraulic systems.....                                     | 35.1      |
| [35.300] Reservoir, cooler, and filters.....                        | 35.2      |
| [35.104] Fixed displacement pump.....                               | 35.3      |
| [35.105] Charge pump.....   | 35.4      |
| [35.359] Main control valve .....                                   | 35.5      |
| [35.741] Dozer blade cylinders .....                                | 35.6      |
| <b>Tracks and track suspension</b> .....                            | <b>48</b> |
| [48.130] Track frame and driving wheels .....                       | 48.1      |
| [48.100] Tracks .....   | 48.2      |

|  |           |
|--|-----------|
| [48.134] Track tension units .....   | 48.3      |
| [48.138] Track rollers .....   | 48.4      |
| [48.140] Dropbox and final drive .....   | 48.5      |
| [48.AAA] Tracks and track suspension generic sub-group .....                   | 48.6      |
| <b>Cab climate control .....</b>   | <b>50</b> |
| [50.100] Heating .....   | 50.1      |
| [50.104] Ventilation .....   | 50.2      |
| [50.200] Air conditioning .....  | 50.3      |
| <b>Electrical systems .....</b>  | <b>55</b> |
| [55.000] Electrical system .....   | 55.1      |
| [55.011] Fuel tank system .....  | 55.2      |
| [55.014] Engine intake and exhaust system.....                                 | 55.3      |
| [55.015] Engine control system.....  | 55.4      |
| [55.030] Service brake electrical system .....                                 | 55.5      |
| [55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system..... | 55.6      |
| [55.100] Harnesses and connectors.....   | 55.7      |
| [55.201] Engine starting system .....  | 55.8      |
| [55.202] Cold start aid .....  | 55.9      |
| [55.301] Alternator.....   | 55.10     |
| [55.302] Battery.....  | 55.11     |
| [55.408] Warning indicators, alarms, and instruments .....                     | 55.12     |
| [55.512] Cab controls.....   | 55.13     |
| [55.518] Wiper and washer system.....  | 55.14     |
| [55.988] Selective Catalytic Reduction (SCR) electrical system .....           | 55.15     |
| [55.DTC] FAULT CODES.....  | 55.16     |
| <b>Dozer blade and arm.....</b>  | <b>86</b> |
| [86.110] Dozer blade .....   | 86.1      |
| [86.124] Dozer pushbeams and struts .....                                      | 86.2      |
| <b>Tools .....</b>   | <b>89</b> |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$