

21F
121F
221F
321F
Tier 4A (interim)
Compact Wheel Loader

SERVICE MANUAL

Part number 47829079C

1st edition English

April 2017





SERVICE MANUAL

121F XT, 121F ZB, 21F XT, 21F ZB, 221F HS, 221F STD, 321F HS, 321F STD

Link Product / Engine

Product	Market Product	Engine
121F XT CWL TIER4 TOOL CARRIER	North America	F5HFL463C*F001
121F ZB CWL TIER4 Z-BAR	North America	F5HFL463C*F001
21F XT CWL TIER4 TOOL CARRIER	North America	F5HFL463B*F001
21F ZB CWL TIER4 Z-BAR	North America	F5HFL463B*F001
221F HS CWL TIER4 TOOL CARRIER	North America	F5HFL463A*F001
221F STD CWL TIER4 Z-BAR	North America	F5HFL463A*F001
321F HS CWL TIER4 TOOL CARRIER	North America	F5HFL463A*F001
321F STD CWL TIER4 Z-BAR	North America	F5HFL463A*F001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
Four-Wheel Drive (4WD) system	23
[23.314] Drive shaft.....	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.124] Final drive hub, steering knuckles, and shafts	27.4
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control	29.1
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.204] Front axle brake	33.3
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.106] Variable displacement pump	35.4

[35.359] Main control valve	35.5
[35.357] Pilot system	35.6
[35.525] Auxiliary hydraulic valves and lines	35.7
[35.600] High flow hydraulics	35.8
[35.355] Hydraulic hand control	35.9
[35.353] Hydraulic travel system	35.10
[35.701] Front loader arm hydraulic system	35.11
[35.723] Front loader bucket hydraulic system	35.12
[35.734] Tool quick coupler hydraulic system	35.13
Frames and ballasting	39
[39.100] Frame	39.1
[39.140] Ballasts and supports	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders	41.3
Cab climate control	50
[50.100] Heating.....	50.1
[50.200] Air conditioning.....	50.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.045] Front axle control system	55.3
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.4
[55.408] Warning indicators, alarms, and instruments	55.5
[55.DTC] FAULT CODES.....	55.6
Front loader and bucket.....	82
[82.100] Arm.....	82.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$