

521D Loader Service Manual 6-40745 Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Section Index - General		6-42730
Standard Torque Specifications	1001	8-71603
Fluids and Lubricants	1002	6-40762
Metric Conversion Chart	1003	7-52950
Loctite Product Chart		8-98902
Engines		
	Tab 2	
Section Index - Engines		6-42281
Engine and Radiator Removal and Installation	2000	6-42290
Engine and Radiator Removal and Installation P.I.N. JEE0135501 and Above	2000	6-48920
Stall Tests	2002	6-40771
For Engine Repair, See the Engine Service Manual		6-74500
Fuel System		
	Tab 3	
Section Index - Fuel System		6-42300
For Fuel System Repair, See the Engine Service Manual		6-74500
Electrical		
	Tab 4	
Section Index - Electrical		6-42311
Removal and Installation of Starter and Alternator	4001	6-42321
Electrical Specifications and Troubleshooting	4002	6-40782
Electrical Specifications and Troubleshooting P.I.N. JEE0135501 and Above	4002	6-48930
Batteries	4003	6-42330
Information and Diagnostic Center	4005	6-42352
Alternator - 65 Ampere	4007	7-12260
Alternator - 45 Ampere	4008	6-42360

521D Loader Service Manual 6-40745 Table of Contents

Description	Section No.	Form No.
Steering Tab 5		
Section Index - Steering		6-42370
Removal and Installation of Steering Components	5001	6-42380
Steering Specifications, Pressure Checks, and Troubleshooting	5002	6-40790
Steering Control Valve	5003	6-42390
Steering Priority Valve	5004	6-42400
Steering Cylinders	5005	6-42410
Center Pivot	5006	6-42420
Auxiliary Steering Motor and Pump	5008	6-42430
Power Train Tab 6		
Section Index - Power Train		6-42442
Removal and Installation of Power Train Components	6001	6-42451
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	6-40800
Transmission	6003	6-42460
Front and Rear Axle	6004	6-42470
Front and Rear Axle P.I.N. JEE0135501 and Above	6004	6-48970
Drive Shafts, Center Bearing, and Universal Joints	6005	6-42480
Wheels and Tires	6006	6-42490
Transmission Control Valve	6007	6-42500
Brakes Tab 7		
Section Index - Brakes		6-42510
Removal and Installation of Brake Components	7001	6-42521
Hydraulic Brake Troubleshooting	7002	6-40811
Brake Accumulators	7004	6-42531
Parking Brake	7008	6-42540
NOTE: For parking brake and brake pedal adjustments, see Section 9001.		
Hydraulics Tab 8		
Section Index - Hydraulics		6-42551
Removal and Installation of Hydraulic Components	8001	6-42562
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	6-40822
Cleaning the Hydraulic System	8003	7-49640
Loader Control Valve	8005	6-42580
Cylinders	8006	6-42591
Coupler Solenoid Locking Valve	8007	6-42600
Pilot Pressure Accumulator and Ride Control Accumulator	8013	6-42621
Ride Control Valve	8014	6-44751

521D Loader Service Manual 6-40745 Table of Contents

Description	Section No.	Form No.
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		6-42640
Pedals and Levers	9001	6-40830
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002	6-42650
Air Conditioner System Service	9003	6-42660
Removal and Installation of Air Conditioning Components For Systems with HFC-134a Refrigerant	9004	6-42671
Loader	9006	6-42691
ROPS Cab and ROPS Canopy	9007	6-42700
Cab Glass Installation	9010	6-42710
Electrical Schematic Foldouts and Hydraulic Schematic Foldout	In Rear Pocket	6-40841
Electrical Schematic Foldouts and Hydraulic Schematic Foldout P.I.N JEE0135501 and Above	In Rear Pocket	6-49280

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SECTION INDEX

GENERAL

Section Title	Section Number
Standard Torque Specifications	1001
Fluids and Lubricants	1002
Metric Conversion Chart	1003
Loctite Product Chart	

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 South Service Road
Hamilton, ON L7N 3M6 CANADA

Bur 6-42730

Copyright © 2001 Case Corporation
Printed in U.S.A.
August, 2001

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$