

**686G, 686GXR and 688G SERIES 2  
TELESCOPIC HANDLERS  
Service Manual  
7-16041**

**Table of Contents**

Description	Section No.	Form No.
<b>General</b>		
	<b>Tab 1</b>	
Section Index - General		7-16070
Standard Torque Specification	1001	8-71601
Fluids and Lubricants	1002	7-16080
Safety and General Information	1003	7-16090
Loctite Product Chart		8-98902
<b>Engine</b>		
	<b>Tab 2</b>	
Section Index- Engine		7-90140
Diesel Engine Specifications	2000	7-16100
Engine and Transmission Removal and Installation	2001	7-89691
Engine Troubleshooting	2002	7-89701
<b>Fuel System</b>		
	<b>Tab 3</b>	
Section Index- Fuel System		7-16110
<b>Electrical</b>		
	<b>Tab 4</b>	
Section Index - Electrical		7-16700
Electrical System General	4000	7-16710
Electrical Schematics and Troubleshooting	4001	7-16720
Electrical Gauges and Senders	4005	7-89741
Alternator	4007	7-49250
<b>Steering</b>		
	<b>Tab 5</b>	
Section Index - Steering		7-90170
How It Works	5000	7-89751
Steering Specifications	5001	7-89760
Steering Troubleshooting	5002	7-89771
Steering Pump and Steering Column	5003	7-89781
Steering Selector Valve	5004	7-89791
Steering Priority Valve	5005	7-89800

**Reprinted**

**686G, 686GXR and 688G SERIES 2  
TELESCOPIC HANDLERS  
Service Manual  
7-16041**

**Table of Contents**

Description	Section No.	Form No.
<b>Power Train</b>		<b>Tab 6</b>
Section Index - Power Train		7-90180
How It Works	6000	7-89820
Removal and Installation of Power Train Components	6001	7-16730
Transmission Specifications and Troubleshooting	6002	7-89841
Drive Axle	6004	7-16740
<b>Brakes</b>		<b>Tab 7</b>
Section Index - Brakes		7-90190
How It Works	7000	7-16750
Brake System Specifications	7001	7-89870
Brake System Troubleshooting	7002	7-89880
Brake System Removal and Installation of Components	7003	7-89891
<b>Hydraulics</b>		<b>Tab 8</b>
Section Index - Hydraulics		7-90201
How It Works	8000	7-16760
Hydraulic Specifications, Schematics and Troubleshooting	8001	7-17210
Hydraulic Specifications, Schematics and Troubleshooting 686GXR P.I.N. JFE0001848 and after, 688G P.I.N. JFE0003613 and after	8001	6-49340
Removal and Installation of Hydraulic Components	8002	7-90281
Hydraulic Cylinders	8006	7-16770
Hydraulic and Fuel Tanks	8007	7-89930
<b>Mounted Equipment and Chassis</b>		<b>Tab 9</b>
Section Index- Mounted Equipment and Chassis		7-90210
How It Works	9000	7-16780
Specifications, and Troubleshooting	9001	7-16790
Removal and Installation of Boom Components	9005	7-16800
Electrical Schematic and Hydraulic Schematic Foldout - 686G,686GXR, and 688G		7-17200
Electrical Schematic and Hydraulic Schematic Foldout - 686GXR Series 2 Machines P.I.N. JFE0001848 and After and 688G Series 2 Machines P.I.N. JFE0003613 and After		6-49430

# SECTION INDEX - GENERAL

## Section Title

## Section Number

Standard Torque Specification .....	1001
Fluids and Lubricants .....	1002
General Specifications.....	1003
Loctite Product Chart	

**CASE CORPORATION**  
700 State Street  
Racine, WI 53404 U.S.A.

**CASE CANADA CORPORATION**  
450 Sherman Avenue  
Hamilton, ON L8N 4C4 CANADA



# Section 1001

## STANDARD TORQUE SPECIFICATIONS

CASE CORPORATION  
700 State Street  
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION  
3350 South Service Road  
Burlington, ON L7N 3M6 CANADA

Rac 8-71601

© 1994 Case Corporation  
Printed in U.S.A.  
Issued November, 1991

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$