



**SERVICE MANUAL**  
**CRAWLER EXCAVATOR**  
**CX75SR**  
**CX80**  
**TIER 3**

87676026A NA

Issued 01Aug 08

# CRAWLER EXCAVATOR CX75SR/CX80 TIER 3 SERVICE MANUAL

## TABLE OF CONTENTS

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>1 GENERAL INFORMATION</b>		
Safety, general information and standard torque data .....	1001	7-27691NA
General specifications and special torque setting .....	1002	SC75SRCX80-1002-0NA
<b>2 ENGINE</b>		
Removal and installation of the engine.....	2000	SM75SR2000-0EN
Engine specifications.....	*	
Disassembly and assembly of the engine .....	*	
<b>3 FUEL SYSTEM</b>		
Removal and installation of the fuel tank.....	3001	SM75SR3001-0EN
Fuel engine system .....	*	
<b>4 ELECTRICAL SYSTEM</b>		
Electrical and engine functions and service support .....	4001	SC75SRCX80-4001-0NA
Electrical equipment and electrical circuit diagrams.....	4020	SC75SRCX80-4020-0NA
<b>5 UNDERCARRIAGE</b>		
Removal and installation of tracks .....	5001	SM75SR5001-0EN
Rollers .....	5003	SM75SR5003-0EN
Take-up roller.....	5005	SM75SR5005-0EN
<b>6 DRIVE TRAIN</b>		
Removal and installation of the drive motor and final drive transmission.....	6001	SM75SR6001-0EN
Disassembly and assembly of the drive motor and final drive transmission.....	6002	SM75SR6002-0EN
Removal and installation of the swing motor and swing reduction gear .....	6003	SM75SR6003-0EN
Disassembly and assembly of the swing reduction gear .....	6004	See 8019
<b>7 UNDERCARRIAGE HYDRAULICS</b>		

\* Consult the Engine Service Manual

**8 UPPERSTRUCTURE HYDRAULICS**

Specifications, troubleshooting, checks and

hydraulic pressure settings.....	8001	SC75SRCX80-8001-0NA
Removal and installation of the hydraulic reservoir .....	8002	SM75SR8002-0EN
Removal and installation of the main hydraulic pump.....	8003	SM75SR8003-0EN
Removal and installation of the main hydraulic control valve - CX75SR .....	8004	SM75SR8004-0EN
Removal and installation of the main hydraulic control valve - CX80 .....	8004	SM80-8004-0EN
Removal and installation of the attachment cylinders.....	8005	SM75SR8005-0EN
Removal and installation of the hydraulic swivel.....	8006	SM75SR8006-0EN
Removal and installation of the pilot blocs.....	8007	SM75SR8007-0EN
Disassembly and assembly of the main hydraulic pump .....	8010	SM75SR8010-0EN
Disassembly and assembly of the main hydraulic control valve - CX75SR .....	8011	SM75SR8011-0EN
Disassembly and assembly of the main hydraulic control valve - CX80 .....	8011	SM80-8011-0EN
Disassembly and assembly of the attachment cylinders .....	8012	SM75SR8012-0EN
Disassembly and assembly of the hand control levers .....	8013	SM75SR8013-0EN
Disassembly and assembly of the foot control levers .....	8014	SM75SR8014-0EN
Disassembly and assembly of the solenoid valve block .....	8015	SM75SR8015-0EN
Disassembly and assembly of the cushion valve.....	8016	SM75SR8016-0EN
Disassembly and assembly of the hydraulic swivel .....	8018	SM75SR8018-0EN
Disassembly and assembly of the swing motor .....	8019	SM75SR8019-0EN
Hydraulic functions .....	8020	SC75SRCX80-8020-0NA
Hydraulic component functions.....	8030	SC75SRCX80-8030-0NA

**9 UPPERSTRUCTURE**

Air conditioning unit .....	9007	SM75SR9007-0EN
Large size hydraulic schematics - CX75SR.....	Pocket	87725725A
Large size electrical schematics - CX75SR.....	Pocket	87742052A
Large size hydraulic schematics - CX80.....	Pocket	KAJ11600-E00
Large size electrical schematics - CX80.....	Pocket	KAR11060-E00

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

# Section

# 1001

## SAFETY, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

## TABLE OF CONTENTS

GENERAL INFORMATION .....	3
SAFETY .....	4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS.....	6



**WARNING :** *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$