

LB323

LB333

LB423

LB433


Service Manual

Print No. 87491708





REPAIR MANUAL

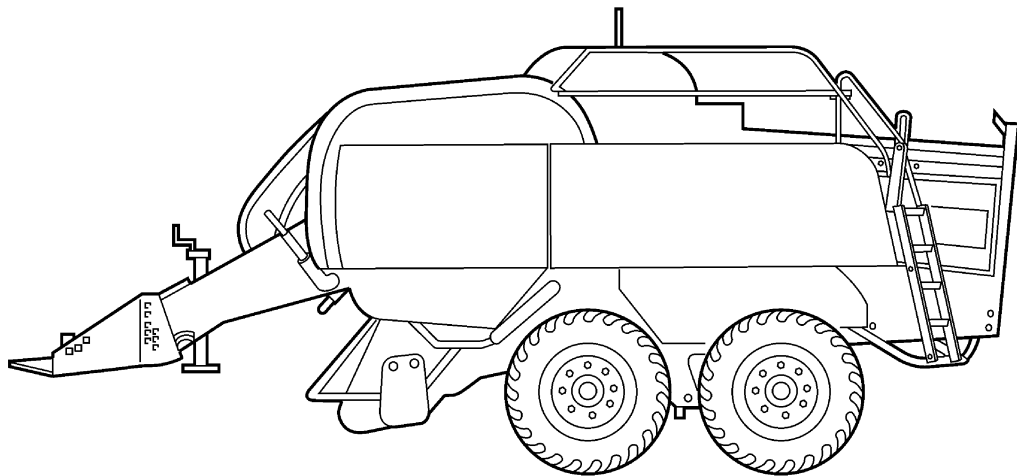

**LB323 P [4700 -] , LB323 R [4700 -] , LB323 S [4700 -] , LB333 P [4700 -] ,
LB333 R [4700 -] , LB333 S [4700 -] , LB423 R [4700 -] , LB423 S [4700 -] ,
LB433 R [4700 -] , LB433 S [4700 -]**

Contents

INTRODUCTION

DISTRIBUTION SYSTEMS..... A

ELECTRICAL POWER SYSTEM A.30.A

ELECTRONIC SYSTEM A.50.A

FAULT CODES A.50.A

LUBRICATION SYSTEM Greasing..... A.60.B

LUBRICATION SYSTEM Oiling A.60.C

POWER PRODUCTION B

PTO POWER IN..... B.90.A

POWER TRAIN C

PROCESS DRIVE Primary process drive C.50.B

TRAVELLING D

PARKING BRAKE Mechanical D.32.B

PULLED-TYPE VEHICLE BRAKE Pneumatic D.36.E

TOWED VEHICLE AXLE Single axle D.13.B

TOWED VEHICLE AXLE Tandem axle..... D.13.C

CROP PROCESSING K

PICKING Picking up K.20.B

FEEDING Precompression K.25.F

FEEDING Packer feeding K.25.M

FEEDING Rotor feeding..... K.25.N

FEEDING Stuffer K.25.P

CHOPPING Crop cutter K.30.E

PRESSING Square bale pressing..... K.50.E

WRAPPING AND TYING Twine tying K.55.B

EJECTING Square bale K.70.C

PROTECTION SYSTEMS Needle protecting system K.90.D



INTRODUCTION

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$