

PUMA 140
PUMA 155
PUMA 170
PUMA 185
Tractor

SERVICE MANUAL

Part number 47770517A

English

February 2017

© 2017 CNH industrial Latin America LTDA. All Rights Reserved.





SERVICE MANUAL

PUMA® 140 With cab, 18X6, TIER 3 [HCCZ185CECW21177 -]

PUMA® 155 With cab, 18X6, TIER 3 [HCCZ185CECW21177 -]

PUMA® 170 With cab, 18X6, TIER 3 [HCCZ185CECW21177 -]

PUMA® 185 With cab, 18X6, TIER 3 [HCCZ185CECW21177 -]

Link Product / Engine

Product	Market Product	Engine
PUMA® 140 Com cabine, 18x6, TIER 3 [HCCZ185CECW21177 -]	Latin America	F4DE9684J*J106
PUMA® 155 Com cabine, 18x6, TIER 3 [HCCZ185CECW21177 -]	Latin America	F4DE9684V*J101
PUMA® 170 Com cabine, 18x6, TIER 3 [HCCZ185CECW21177 -]	Latin America	F4DE9687V*J105
PUMA® 185 Com cabine, 18x6, TIER 3 [HCCZ185CECW21177 -]	Latin America	F4DE9684T*J102

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.103] Crankshaft and flywheel.....	10.2
[10.216] Fuel tanks	10.3
[10.250] Turbocharger and lines.....	10.4
[10.254] Intake and exhaust manifolds and muffler	10.5
[10.400] Engine cooling system	10.6
Clutch	18
[18.110] Clutch and components	18.1
Transmission	21
[21.111] Semi-Powershift transmission	21.1
[21.133] Semi-Powershift transmission external controls	21.2
[21.152] Semi-Powershift transmission internal components	21.3
[21.160] Creeper	21.4
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31

[31.104] Rear electro-hydraulic control	31.1
[31.114] Two-speed rear Power Take-Off (PTO)	31.2
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.300] Pneumatic service brakes	33.2
[33.110] Parking brake or parking lock	33.3
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump	35.3
[35.102] Pump control valves.....	35.4
[35.105] Charge pump.....	35.5
[35.204] Remote control valves	35.6
[35.114] Three-point hitch control valve	35.7
[35.116] Three-point hitch cylinder	35.8
Pneumatic system	36
[36.100] Pneumatic system.....	36.1
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
[37.110] Rear three-point hitch	37.2
Frames and ballasting	39
[39.100] Frame	39.1
[39.140] Ballasts and supports	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$