
RBX452, RBX462, RBX552, RBX562 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 31 - IMPLEMENT DRIVELINE	3
SECTION 35 - HYDRAULICS	7
SECTION 39 - FRAME	11
SECTION 44 - AXLES AND WHEELS	12
SECTION 55 - ELECTRICAL SYSTEMS	13
SECTION 60 - PRODUCT FEEDING	20
SECTION 62 - PRESSING	25
SECTION 68 - WRAPPING	32
SECTION 70 - EJECTION	35
SECTION 90 - SHIELDING	35

The following pages are the collation of the contents pages from each section and chapter of the RBX452, RBX462, RBX552, and RBX562 Repair manual. Complete Repair part # 87352306.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the RBX452, RBX462, RBX552, and RBX562 Round Balers.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87352307

Chapter 1 - General Information

CONTENTS

Section	Description	Page
00 000	Introduction	2
	Precautionary Statements	3
	Safety	4
	Fluid Safety	6
	Safety Decals	7
	Information Decals	11
	Torques and Adjustment	13
	Technical Information	14
	Minimum Hardware Tightening Torques	15
	Retaining Compounds and Sealants	18
	Standard Torque Data for Hydraulic Tubes and Fittings	19
	Recommended Lubricants	21
	Roller Chains	23
	Conversion Charts	25
	Ecology and the Environment	29
	Baler Components	30
	Power Flow - Baler with Stuffer	31
	Power Flow - Baler with Rotor	32
	Driveline Components Baler with Standard Pickup	33
	Driveline Components Baler with Stuffer and Wide Pickup	34
	Driveline Components Baler with Rotor and Wide Pickup	35
	Specifications	36
	Storage and Seasonal Preparation	44

SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87352307

Chapter 1 - PTO Driveline

CONTENTS

Section	Description	Page
	Specifications	2
	PTO Constant Velocity	2
	Description of Operation	5
	Overhaul	6
31 201	Front PTO and CV U-joint	6
	Disassembly	6
	Inspection	9
	Replacement	9
	Assembly	9
	Installation	13
31 201	Rear PTO	14
	Removal	14
	Disassembly	15
	Inspection	16
	Assembly	17
	Installation	19
31 201	Shear Bolt Hub	22
31 201	Shear Bolt Hub Bearing Balls	22
	Replacement	22
31 201	Slide Collar Quick - Disconnect	23
	Removal	23
	Replacement	23

SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87352307

Chapter 2 - Gearbox

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	2
	Description of Operation	2
	Overhaul	3
31 220	Gearbox	3
	Removal	3
	Gearbox Coupler Seal	5
	Replacement	5
	Gearbox	6
	Sectional Views	6
	Disassembly	10
	Inspection	13
	Assembly	14
	Installation	21

SECTION 31 - IMPLEMENT DRIVELINE

BOOK 1 - 87352307

Chapter 3 - Clutches

CONTENTS

Section	Description	Page
	Specifications	3
	Special Tools	3
	Description of Operation	6
	Overhaul	7
31 225	Main Drive Slip Clutch (RBX452, RBX462, RBX552)	7
	Removal	7
	Disassembly	7
	Inspection	8
	Replacement	8
	Assembly	8
	Installation	9
	Burnishing	11
	Adjustment	12
31 225	Main Drive Slip Clutch (RBX562)	14
	Removal	14
	Disassembly	15
	Inspection	15
	Assembly	15
	Installation	16
	Burnishing	19
	Adjustment	21
31 225	Sledge Roll Drive Slip Clutch	22
	Removal	22
	Disassembly	23
	Inspection	23
	Assembly	24
	Installation	24
	Burnishing	25
	Adjustment	25
31 225	Pickup Slip Clutch – Standard Pickup	27
	Removal	27

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$