

RD163
RD193
Disc Header

SERVICE MANUAL

Part number 84391549
1st edition English
April 2011



Contents

INTRODUCTION

TRANSMISSION, DRIVE AND PTO OUT C

 PROCESS DRIVE Primary process drive C.50.B

CROP PROCESSING K

 CUTTING Rotary disc cutting K.10.E

 FEEDING Header feeding K.25.D

 CONDITIONING Roll conditioning K.80.B



INTRODUCTION

Contents

INTRODUCTION

Safety rules - Personal Safety	3
Safety signs	4
Safety signs - Road travel signs and decals	12
Basic instructions - How to use and navigate through this manual	17
Basic instructions - Chain Wear Tables - Roller Chains	22
General specification - General Welding	24
Torque - Minimum tightening torques for normal assembly	25
HYDRAULIC, PNEUMATIC, ELECTRICAL, ELECTRONIC SYSTEMS - Torque - Standard torque data for hydraulics	27
Maintenance Chart - Lubrication and service schedule	29
Maintenance Chart - Maintenance and service schedule	30
Basic instructions - Lubrication general information	31
Basic instructions - Every 10 hours or daily	32
Basic instructions - Every 50 hours or weekly	35
Basic instructions - After first 50 hours, and every 500 hours thereafter	38
Basic instructions - Maintenance and adjustments general information	42
Basic instructions - Header drive belt adjustment	44
Basic instructions - Header drive belt replacement	46
Basic instructions - Auger drive chain adjustment	48
Basic instructions - Header speed sensor adjustment	49
Basic instructions - Disc replacement	50
Basic instructions - Knife and bolt inspection	51
Basic instructions - Knife replacement	52
Basic instructions - Crop lifter replacement	54
Basic instructions - Rock guard replacement	55
Basic instructions - Skid shoe replacement	56
Basic instructions - Roll timing adjustment	57
Basic instructions - Drive shaft timing	58
Basic instructions - Conditioner roll pressure adjustment	59
Basic instructions - Conditioner roll gap adjustment	60
General specification - RD163 disc header specifications	61
General specification - RD193 disc header specifications	63
Product identification - Product Identification Number (PIN)	65
Product overview	66

Safety rules - Personal Safety

Carefully study these precautions, and those included in the external attachment operators manual, and insist that they be followed by those working with and for you.

1. Thoroughly read and understand this manual and the attachment operators manual before operating this or any other equipment.
2. Be sure everyone is clear of the machine before starting. Blow the horn, if equipped, three times before starting engine.
3. Only the operator should be on the machine when in operation. Never allow anyone to climb on to the machine while it is in motion. If the machine is equipped with an Instructors Seat, this must only be used for training purposes. Passengers must not be allowed to use the Instructors Seat.
4. Keep all shields in place. Never work around the machine or any of the attachments while wearing loose clothing that might catch on moving parts.
5. Observe the following precautions whenever lubricating the machine or making adjustments.
 - Disengage all clutching levers or switches.
 - Lower the attachment, if equipped, to the ground or raise the attachment completely and engage the cylinder safety locks . Completing these actions will prevent the attachment from lowering unexpectedly.
 - Engage the parking brake.
 - Shut off the engine and remove the key.
6. Always keep the machine in gear while going downhill.
7. The machine should always be equipped with sufficient front or rear axle weight for safe operation.
8. Under some field conditions, more weight may be required at the front or rear axle for adequate stability. This is especially important when operating in hilly conditions or/when using heavy attachments.
9. Always lower the attachment, shut off the engine, set the parking brake, engage the transmission gears and remove the key before leaving the operators platform.
10. If the attachment or machine should become obstructed or plugged; set the parking brake, shut off the engine and remove the key, engage the transmission gears, wait for all machine or attachment motion to come to a stop, before leaving the operators platform to removing the obstruction or plug.
11. Never disconnect or make any adjustments to the hydraulic system unless the machine and/or the attachment is lowered to the ground or the safety lock(s) is in the engaged position.
12. Use of the flashing lights is highly recommended when operating on a public road.
13. When transporting on a road or highway, use accessory lights and devices for adequate warning to the operators of other vehicles. In this regard, check local government regulations. Various safety lights and devices are available from your CASE IH dealer.
14. Practice safety 365 days a year.
15. Keep all your equipment in safe operating condition.
16. Keep all guards and safety devices in place.
17. Always set the parking brake, shut off the engine and remove the key, engage the transmission gears, wait for all machine or attachment motion to come to a stop, before leaving the operators platform to service the machine and attachment.
18. Remember: A careful operator is the best insurance against an accident.
19. Extreme care should be taken in keeping hands and clothing away from moving parts.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$