



1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

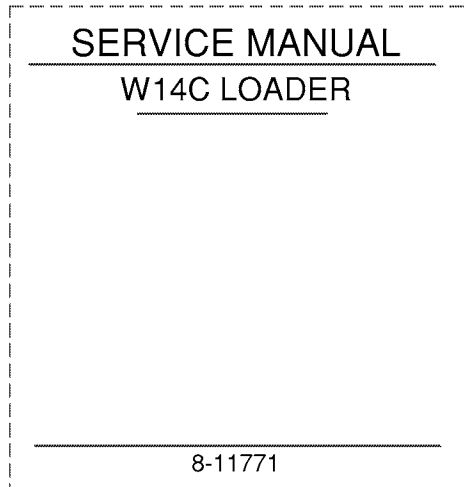


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

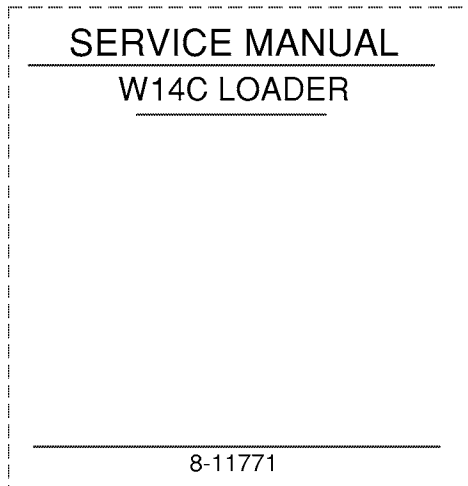

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

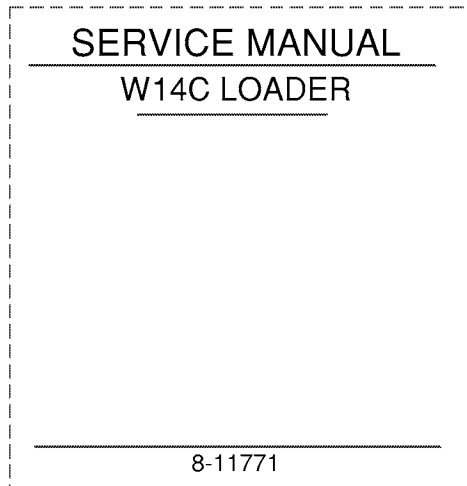

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4


W14C Loader

Table of Contents

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Section Index - General		8-13980
Standard Torque Specifications	1001	8-71600
Fluids and Lubricants	1002	8-13990
2 ENGINES		
Section Index - Engines		8-14000
Engine Removal and Installation and Radiator Removal and Installation	2000	8-14010
Stall Tests	2002	8-14020
Detailed Engine Specifications	2401	8-26062
Cylinder Head and Valve Train	2415	8-26072
Cylinder Block, Pistons, Rods, Camshaft, Main Bearings, Oil Seals, and Flywheel	2425	8-26083
Lubrication System	2445	8-26092
Cooling System	2455	8-26102
Turbocharger	2465	8-26110
Turbocharger Failure Analysis	2565	9-78235
3 FUEL SYSTEM		
Section Index - Fuel System		8-14030
Fuel System and Filters	3410	8-26131
Fuel Injection Pump and Drive Gear	3412	8-26141
Fuel Injectors	3413	8-26151
4 ELECTRICAL SYSTEM		
Section Index - Electrical		8-14041
Electrical Specifications, Troubleshooting, and Schematics	4001	8-14051
Starter and Starter Solenoid	4002	8-11950
45 Amp Alternator A186124	4003	8-73841
Batteries	4004	8-71701
Instrument Cluster and Gauges	4005	8-14070
65 Ampere Alternator	4006	8-73860
45 Amp Alternator A187916	4007	7-43600
5 STEERING		
Section Index - Steering		8-14080
Removal and Installation of Steering Components	5001	8-14090
Specifications, Schematic, and Troubleshooting	5002	8-14100
Steering Control Valve	5003	8-14110
Flow Control Valve	5004	8-73910
Steering Cylinder	5005	8-14120
Center Pivot	5006	8-14130
Auxiliary Steering Pump and Check Valve	5025	8-42830


Reprinted

DIVISION/SECTION	SECTION NO.	FORM NO.
6 POWER TRAIN		
Section Index - Power Train.....		8-14140
Removal and Installation of Power Train Components.....	6001	8-14150
Transmission Specification and Troubleshooting.....	6002	8-14160
Transmission Repair.....	6003	8-14171
Differential and Planetary.....	6004	8-14181
Drive Shafts, Center Bearing, and Universal Joints.....	6005	8-14190
Wheels and Tires.....	6006	8-14200
7 BRAKES		
Section Index - Brakes.....		8-14210
Removal and Installation of Brake Components.....	7000	8-14220
Specifications, Schematics, Pressure Checks, and Adjustments.....	7001	8-14231
Brake Master Cylinder.....	7002	8-73080
Brake Valve.....	7003	8-73090
Parking Brake.....	7004	8-14240
Brakes.....	7005	8-14251
Brake Pump.....	7006	8-14260
NOTE: For parking brake and brake pedal adjustments, see Section 9009.		
8 HYDRAULICS		
Section Index - Hydraulics.....		8-14270
Removal and Installation of Hydraulic Components.....	8001	8-14280
Specifications, Troubleshooting and Schematics.....	8002	8-14291
Cleaning the Hydraulic System.....	8003	8-74160
Loader Control Valve.....	8004	8-14300
Hydraulic Pump.....	8005	8-67401
Cylinders.....	8006	8-14311
9 MOUNTED EQUIPMENT		
Section Index - Mounted Equipment.....		8-14320
Air Conditioning Troubleshooting.....	9001	8-14330
Discharging and Charging the Air Conditioning System.....	9002	8-14340
Removal and Installation of Air Conditioning Components.....	9003	8-14350
Air Conditioning Compressor and Clutch.....	9004	8-14360
Loader.....	9005	8-14370
ROPS Cab and ROPS Canopy.....	9006	8-14380
Seat and Seat Belt.....	9007	8-74271
Suspension Seat.....	9008	8-74280
Pedals and Levers.....	9009	8-14390

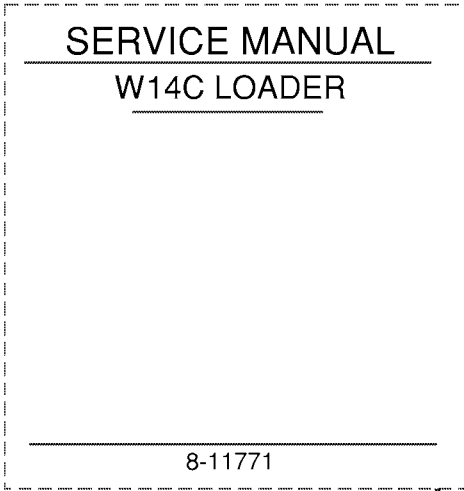 


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

 TYPE 1-4

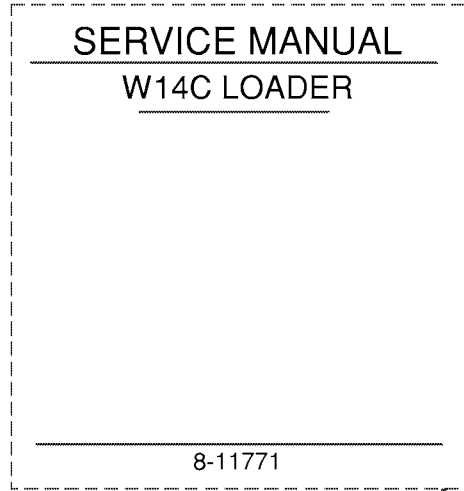


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

 TYPE 1-4

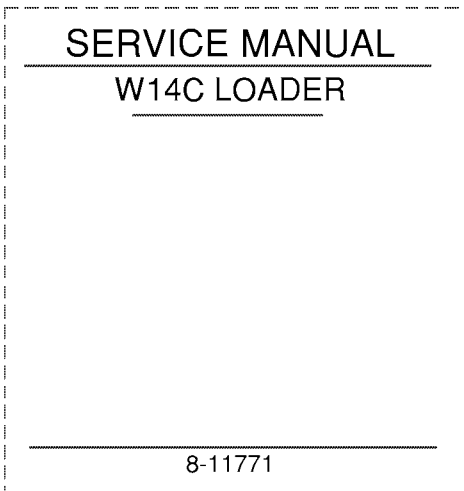

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

 TYPE 1-4

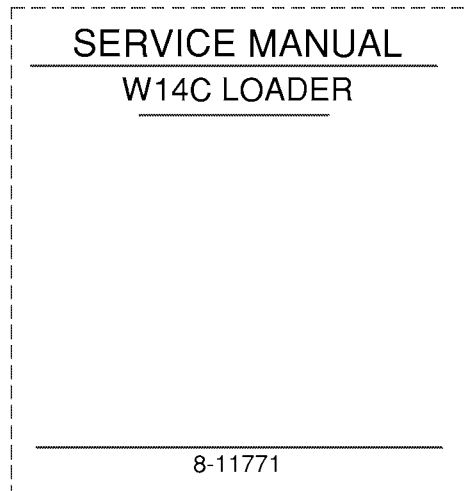

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$