

SERVICE MANUAL

560C

SERIAL NUMBER
15001 AND UP



DRESSTA Co. Ltd.

A JOINT VENTURE OF KIOVATSU AMERICA INTERNATIONAL CO. AND HUTASTALONAWOLA S.A.



FOREWORD

Welcome to the growing group of value-conscious people who operate DRESSTA machines.

This manual covers the instructions for safe operation, lubrications, adjustments and maintenance for normal daily care. These instructions are divided into six sections to simplify your reference to the information most important to you. Refer to the contents page at the beginning of the section for a complete list of the subjects covered except for Section 1, which should be read entirely.

This manual has been prepared to help you operate and maintain your machine with utmost efficiency and safety. Read this manual thoroughly and learn your machine before you attempt to operate it.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, periodic revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

DRESSTA Co. Ltd.

THIS MATERIAL IS PROPRIETARY TO DRESSTA Co. Ltd. AND NOT TO BE REPRODUCED, USED, OR DISCLOSED EXCEPT IN ACCORDANCE WITH WRITTEN AUTHORIZATION FROM DRESSTA Co. Ltd.

IT IS OUR POLICY TO IMPROVE OUR PRODUCTS WHENEVER IT IS POSSIBLE AND PRACTICAL TO DO SO. WE RESERVE THE RIGHT TO MAKE CHANGES OR ADD IMPROVEMENTS AT ANY TIME WITHOUT INCURRING ANY OBLIGATION TO INSTALL SUCH CHANGES ON PRODUCTS SOLD PREVIOUSLY.

DUE TO THIS CONTINUOUS PROGRAM OF RESEARCH AND DEVELOPMENT, PERIODIC REVISIONS MAY BE MADE TO THIS PUBLICATION. IT IS RECOMMENDED THAT CUSTOMERS CONTACT THEIR DISTRIBUTOR FOR INFORMATION ON LATEST REVISION.

CONTENTS

1. INTRODUCTION	██████████
4. BRAKES	██████████
5. STEERING	██████████
6. COOLING	██████████
7. DRIVE TRAIN	██████████
7B. TORQUE CONVERTER	██████████
7C. TRANSMISSION	██████████
7D. DRIVE AXLE AND DIFFERENTIAL	██████████
8. ELECTRICAL	██████████
9. FRAME	██████████
10. HYDRAULIC	██████████
10A. PUMPS	██████████
10B. VALVES	██████████
10C. CYLINDERS	██████████
10E. RESERVOIRS AND FILTERS	██████████
12. POWER	██████████
13. SUPERSTRUCTURE	██████████
14. SUSPENSION	██████████
15. WHEELS AND TRACKS	██████████
17. MOUNTED EQUIPMENT	██████████

INTRODUCTION



CONTENTS

SAFETY PRECAUTION

1. General	1
2. Operation	3
3. Maintenance	8

SHIPPING SPECIFICATIONS

4. Dimensions	15
5. System Refill Capacities (Approximate)	15

SERVICE INFORMATION

6. Service Parts	16
7. Serial Numbers	16
8. Inspection and Repair	17

LOCTITE USAGE

9. Surface Preparation	18
10. Application	19
11. Setting Time (Before Placing in Operation)	19
12. Removal	19
13. Application at Low Temperatures	19

STANDARD TORQUES

14. Bolt Identification Chart	20
15. Torque Values for Standard Fasteners	20
16. Split Flange Connections	22
17. Hydraulic Tubes and Fittings	23
18. Hose Clamps	23

SERVICE/SPECIAL TOOLS

19. Service/Special Tools	24
-------------------------------------	----

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$