

# SERVICE MANUAL

## AE50/AM50 Electric Forklift Truck

<b>AE50</b>	<b>FB15U/18U-12, FB15FU/18FU-12 FB20AU-12, FB20AFU-12</b>	<b>S/N 837898~</b>
<b>AM50</b>	<b>FB15MU/18MU-12, FB15MFU/18MFU-12 FB20MU-12, FB20MFU-12</b>	<b>S/N 826828~</b>

# AE50 AM50



## WARNING

Read and observe all warnings on this unit before operating it.

**DO NOT** operate this equipment unless all factory-installed guards and shields are properly secured in place.

# KOMATSU

The information and specifications contained herein were accurate at the time of publication, but may change without notice as required for product improvements. Neither Komatsu Forklift USA, LLC, nor its parent company nor any of its subsidiaries will be held responsible for damages due to misuse or inappropriate use of its products.

© Copyright 2010, Komatsu Forklift USA, LLC. All rights reserved. No part of this document may be photocopied or reproduced in any way without prior written consent of Komatsu Forklift USA, LLC.

# CONTENTS

Page No.

## 1. SPECIFICATIONS AND GENERAL INFORMATION

OUTSIDE VIEW .....	1-2
SPECIFICATIONS .....	1-4
PERIODIC REPLACEMENT OF CONSUMABLE PARTS .....	1-8
STANDARD TIGHTENING TORQUE FOR BOLTS .....	1-9
STANDARD TIGHTENING TORQUE FOR PIPE JOINTS .....	1-10
HOW TO USE LOCTITE .....	1-11
SAFETY .....	1-12
FIRE PREVENTION .....	1-13
BASIC PRECAUTIONS .....	1-18
START-UP INSPECTION .....	1-23
TRAVELING THE LIFT TRUCK .....	1-24
LOAD HANDLING OPERATION .....	1-31
PRECAUTIONS FOR INSPECTION AND MAINTENANCE .....	1-37
HOISTING AND TRANSPORTING THE LIFT TRUCK .....	1-44
STRUCTURE AND STABILITY OF THE LIFT TRUCK .....	1-45

## 2. TESTING AND ADJUSTING

SERVICE DATA (4-WHEEL LIFT TRUCK) .....	2-3
SERVICE DATA (3-WHEEL LIFT TRUCK) .....	2-3
RELEASING THE PRESSURE IN THE HYDRAULIC PIPING .....	2-4
LIFT INTERRUPT .....	2-4
METER PANEL .....	2-5
OPERATION OF METER PANEL .....	2-6
BATTERY .....	2-9
FUSE .....	2-10
TRANSFER CASE .....	2-12
ADJUSTMENT OF WET TYPE BRAKE AND PARKING BRAKE .....	2-13
WET TYPE BRAKE .....	2-15
HYDRAULIC OIL TANK .....	2-16
MAST (1.5 - 1.75 TON LIFT TRUCK) .....	2-17
MAST (2.0 TON LIFT TRUCK) .....	2-18
FINGER BAR .....	2-19
NATURALLY DESCENDING AMOUNT OF HYDRAULIC OIL CYLINDER .....	2-21
AIR BLEEDING .....	2-22
LIST OF LUBRICANT AND GREASE .....	2-23

## 3. REMOVAL AND INSTALLATION

UNIT LOCATION DIAGRAM .....	3-3
UNIT MASS (4-WHEEL LIFT TRUCK) .....	3-4
UNIT MASS (3-WHEEL LIFT TRUCK) .....	3-5
DRAWING OF DISASSEMBLY/ASSEMBLY .....	3-6
MAST .....	3-10

LIFT CYLINDER .....	3-13
DRIVE AXLE .....	3-16
STEERING AXLE .....	3-21
REAR AXLE .....	3-23
BATTERY .....	3-25
HYDRAULIC PUMP AND PUMP MOTOR .....	3-27

#### **4. DISASSEMBLY AND ASSEMBLY**

DRIVE AXLE .....	4-2
TRANSFER (BRAKE) .....	4-5
TRANSFER (HUB BEARING) .....	4-11
TRANSFER (TRANSFER) .....	4-14
BRAKE WHEEL CYLINDER .....	4-17
BRAKE MASTER CYLINDER .....	4-21
STEERING GEAR BOX .....	4-25
ORBITROL .....	4-27
POWER STEERING CYLINDER (4-WHEEL LIFT TRUCK) .....	4-29
STEERING AXLE (3-WHEEL LIFT TRUCK) .....	4-31
REAR AXLE (4-WHEEL LIFT TRUCK) .....	4-38
LIFT CYLINDER .....	4-43
TILT CYLINDER .....	4-52
HYDRAULIC PUMP .....	4-60
CONTROL VALVE .....	4-65
DRIVE MOTOR .....	4-67
PUMP MOTOR .....	4-68

#### **5. MAINTENANCE STANDARD**

DRIVE AXLE .....	5-3
WHEEL CYLINDER BLOCK .....	5-4
BRAKE MASTER CYLINDER .....	5-6
STEERING AXLE (3-WHEEL LIFT TRUCK) .....	5-8
REAR AXLE .....	5-9
LIFT CYLINDER .....	5-10
TILT CYLINDER .....	5-13
CONTROL VALVE .....	5-14
HYDRAULIC PUMP .....	5-16
MAST, FINGER BAR, FORK .....	5-20
DRIVE MOTOR .....	5-21
PUMP MOTOR .....	5-23

#### **6. STRUCTURE AND FUNCTION**

BRAKE .....	6-3
HYDRAULIC CIRCUIT DIAGRAM .....	6-6
CONTROL VALVE .....	6-7

## 7. TROUBLESHOOTING

DIAGNOSIS TOOL .....	7-3
CONFIGURATION PARTS, SENSOR, UNIT LOCATION DRAWING .....	7-4
LOCATION DRAWING .....	7-5
LOCATION OF CPU BOARD CONNECTOR .....	7-7
OVERVIEW OF TROUBLE CODES .....	7-8
PREPARATION FOR VOLTAGE CHECK AND CURRENT CHECK .....	7-9
INPUT / OUTPUT SIGNAL OF CONTROLLER .....	7-11
TROUBLE CODE LIST .....	7-19
DIAGNOSTIC PROCEDURE BY TROUBLE CODE (ALA CODE) .....	7-23
DIAGNOSTIC PROCEDURE BY TROUBLE CODE (ERR CODE) .....	7-27
DIAGNOSTIC PROCEDURE BY METER DISPLAY TROUBLE CODE .....	7-85
TROUBLE WITHOUT ERROR CODES .....	7-111
PROPORTIONAL SOLENOID VALVE CONTROLLER .....	7-119
ADJUSTMENT PROCEDURE OF TILT AUTOMATIC HORIZONTAL .....	7-124
METER PANEL .....	7-125
HARNESS LIST .....	7-137

## 8. YEARLY INSPECTION CRITERIA

## 9. CONVERSION TABLES

### APPENDIX

3BA-97-99710 (INPUT GEAR/BEARING PRESS-FITTING JIG) .....	A-3
3BA-97-99720 (MULTIPLE DISC ALIGNMENT JIG) .....	A-4
3BA-97-99730 (MULTIPLE HOLDER CLEARANCE ALIGNING JIG) .....	A-5
3BA-97-99740 (3-WHEEL REAR AXLE PRESS-FITTING JIG) .....	A-6
3BA-97-99760 (3-WHEEL REAR AXLE SENSOR ALIGNMENT JIG) .....	A-7
SERVICE TOOL CONFIGURATION .....	A-8
ELECTRIC WIRING DIAGRAM - TYPE A (LIFT TRUCK WITH 3 PORTS) .....	A-9
ELECTRIC WIRING DIAGRAM - TYPE B (LIFT TRUCK WITH 4 PORTS) .....	A-10

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$