

Shop Manual

BULLDOZER

D39EX -22

D39PX -22

SERIAL NUMBERS

D39EX-3001

D39PX-3001

and up

ecot3

KOMATSU

BULLDOZER

D39EX-22

D39PX-22

Machine model	Serial number
---------------	---------------

D39EX-22	3001 and up
D39PX-22	3001 and up

00 Index and foreword

100 Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04041-05
00 Index and foreword	SEN04042-05
100 Index	SEN04050-05 ●
200 Foreword and general information	SEN04051-02
01 General	SEN04043-01
100 Specification and technical data.....	SEN04052-01
10 Structure, function and maintenance standard.....	SEN04044-01
100 Engine and cooling system	SEN04230-00
200 Power train.....	SEN04231-01
300 Undercarriage and frame	SEN04232-01
410 Hydraulic system, Part 1	SEN04233-01
420 Hydraulic system, Part 2	SEN04234-01
500 Work equipment.....	SEN04236-01
600 Cab and its attachments	SEN04237-00
700 Electrical system	SEN04238-01
20 Standard value table.....	SEN04045-00
100 Standard service value table.....	SEN04096-00
30 Testing and adjusting	SEN04046-02
110 Testing and adjusting, Part 1.....	SEN04097-02
120 Testing and adjusting, Part 2.....	SEN04098-00
130 Testing and adjusting, Part 3.....	SEN04099-00
40 Troubleshooting.....	SEN04047-02
100 Failure code table and fuse locations	SEN04100-00
200 General information on troubleshooting.....	SEN04101-02
310 Troubleshooting by failure code (Display of code), Part 1	SEN04102-00
320 Troubleshooting by failure code (Display of code), Part 2	SEN04103-01
330 Troubleshooting by failure code (Display of code), Part 3	SEN04104-00
340 Troubleshooting by failure code (Display of code), Part 4	SEN04105-00
350 Troubleshooting by failure code (Display of code), Part 5	SEN04106-00
400 Troubleshooting of electrical system (E-mode).....	SEN04107-00
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04108-01

600 Troubleshooting of engine (S-mode).....	SEN04109-01
50 Disassembly and assembly.....	SEN04048-03
100 General information on disassembly and assembly.....	SEN04662-03 ●
200 Engine and cooling system	SEN04663-02
300 Power train	SEN04664-01
400 Undercarriage and frame	SEN04665-01
500 Hydraulic system	SEN04666-01
600 Work equipment	SEN04667-01
700 Cab and its attachments.....	SEN04668-01
800 Electrical system	SEN04669-01
90 Diagrams and drawings.....	SEN04049-01
100 Hydraulic diagrams and drawings	SEN04053-00
200 Electrical diagrams and drawings.....	SEN04054-01

Table of contents

00 Index and foreword	
100 Index	SEN04050-05
Composition of shop manual.....	2
Table of contents	4
200 Foreword and general information	SEN04051-02
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard.....	9
Handling of electric equipment and hydraulic component.....	11
Handling of connectors newly used for engines.....	20
How to read electric wire code	23
Precautions when carrying out operation.....	26
Method of disassembling and connecting push-pull type coupler.....	29
Standard tightening torque table	32
Conversion table	36
01 General	
100 Specification and technical data.....	SEN04052-01
Specification dimensional drawing	2
Specifications	3
Weight table	7
Table of fuel, coolant and lubricants.....	9
10 Structure, function and maintenance standard	
100 Engine and cooling system	SEN04230-00
Engine system parts.....	2
Cooling system.....	3
Cooling fan pump.....	4
Cooling fan motor.....	5
Oil cooler bypass valve	10
200 Power train.....	SEN04231-01
Power train	2
Power train system.....	3
Damper	4
HST hydraulic equipment arrangement diagram	5
Steering and brake control	6
Solenoid valve.....	8
Final drive.....	15
HST pump.....	18
HST motor.....	30
Charge pump	40
300 Undercarriage and frame	SEN04232-01
Main frame	2
Track frame and idler cushion	4
Idler	6
Track roller	8
Carrier roller	10
Sprocket	12
Track shoe.....	14
410 Hydraulic system, Part 1	SEN04233-01
Arrangement of hydraulic equipment for work equipment.....	2
Work equipment control	4
Hydraulic tank and filter.....	6
Work equipment and fan pump	8
Control valve	16

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$